 


"HAPPY 3" Unterteil 110cm

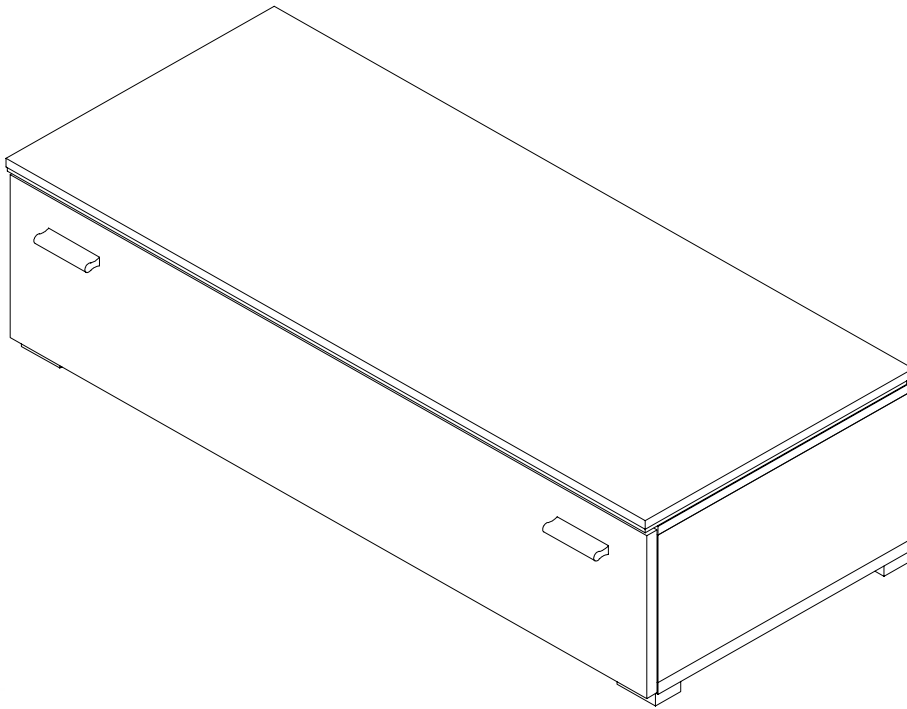

(D)

Montageanleitung

(GB)

Assembly instructions

(NL)

Handleiding voor de montage

(PL)

 
 
 
Instrukcja montazu

(TR)

Montaj talimati

(RU)

Инструкция по сборке

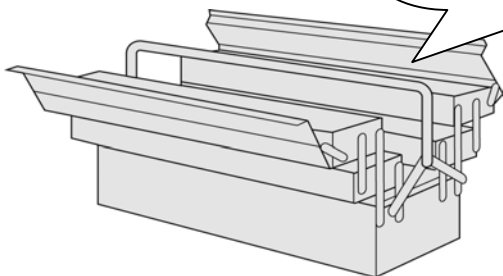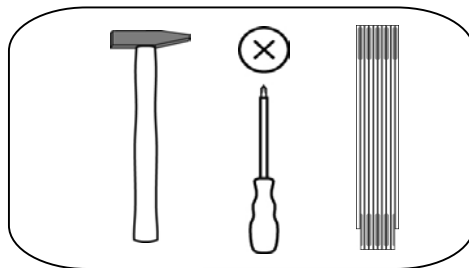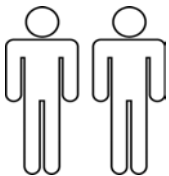

Service • Dienstverlening • Serwis • Servis • Сервисная служба

Name • Naam • Nazwa • Isim • Название

HAPPY 3

Typ • Type • Тип • Тип

 
 
 
TV-Unterteil 110cm

 
 
 
 
 
Nr. • No. • Номер








813 209 // 813 220 // 820 921





Grau // Schwarz // Weiß

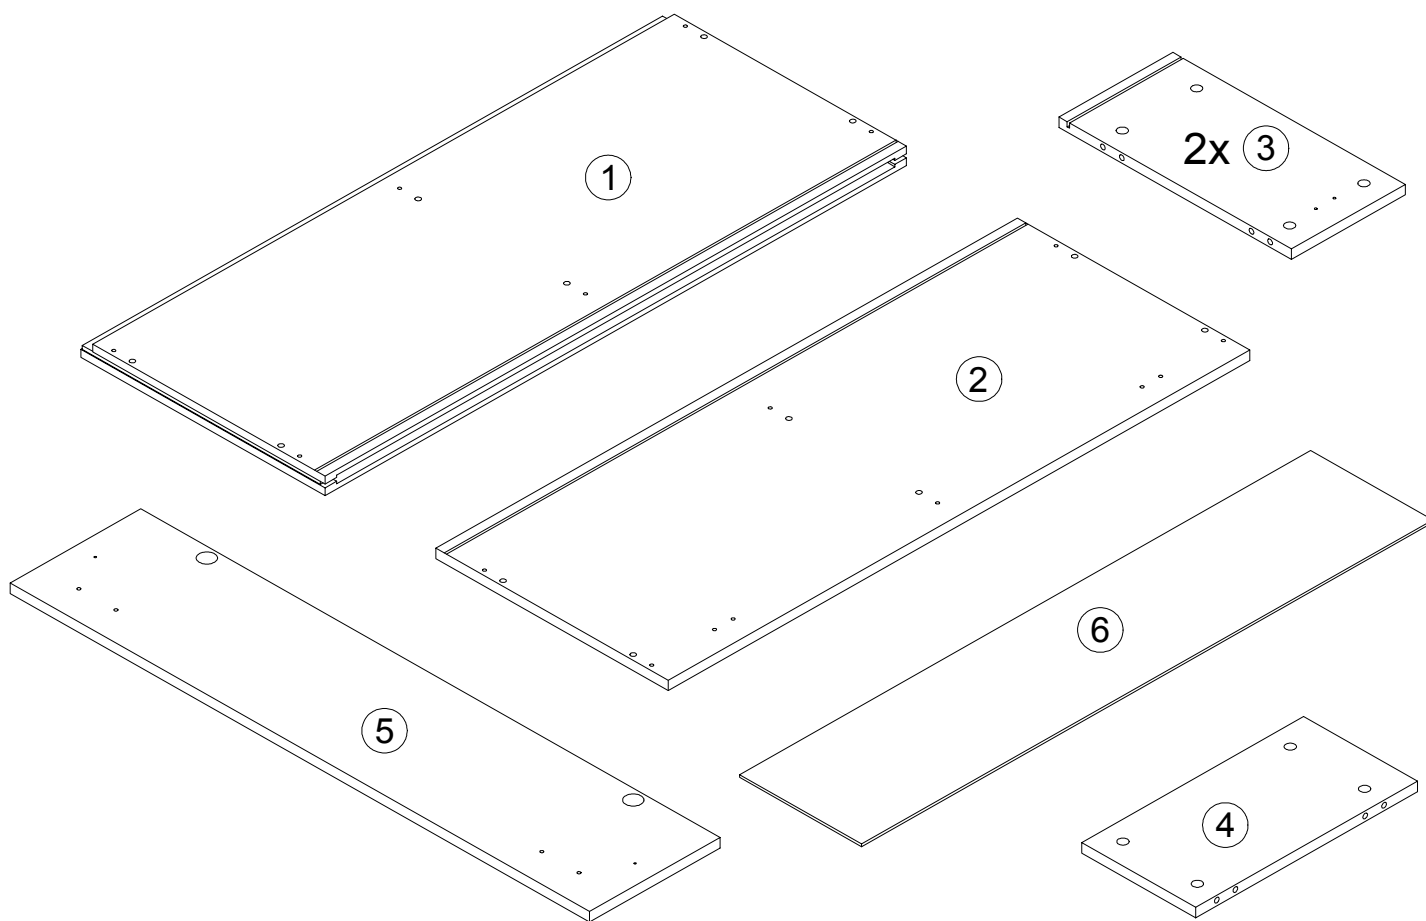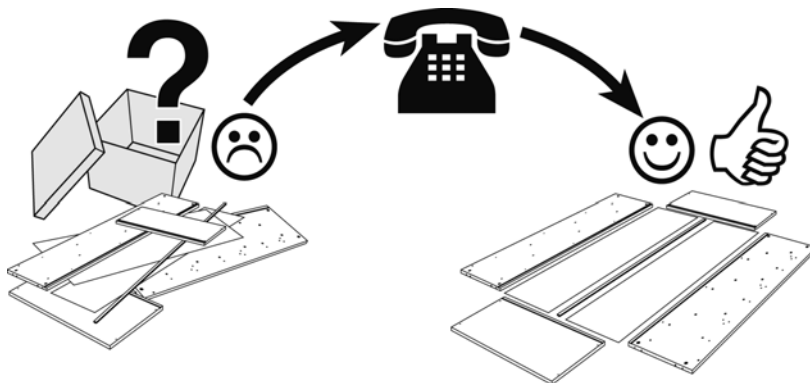
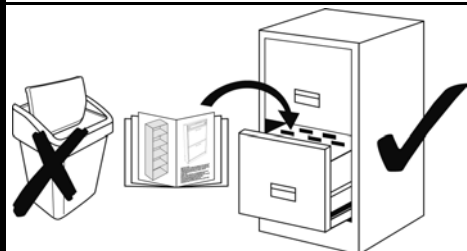


A1  12	B2  12	C1  Ø8x30 12	E10  2 mm 2	F16  Kr.0 mm 2	L1  4	K15  60x40x23 5	M5  BA 64mm 2
N1  4,0 x 30 6	N2  2,7 x 20 3	P2  3,5 x 13 4	P14  3,5 x 22 10	P10  3,5 x 13 8	S1  12	W4  2	

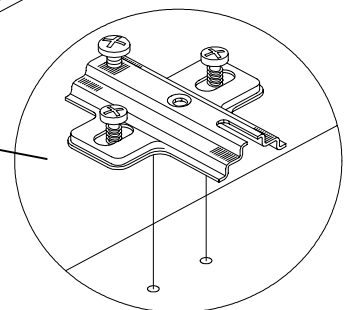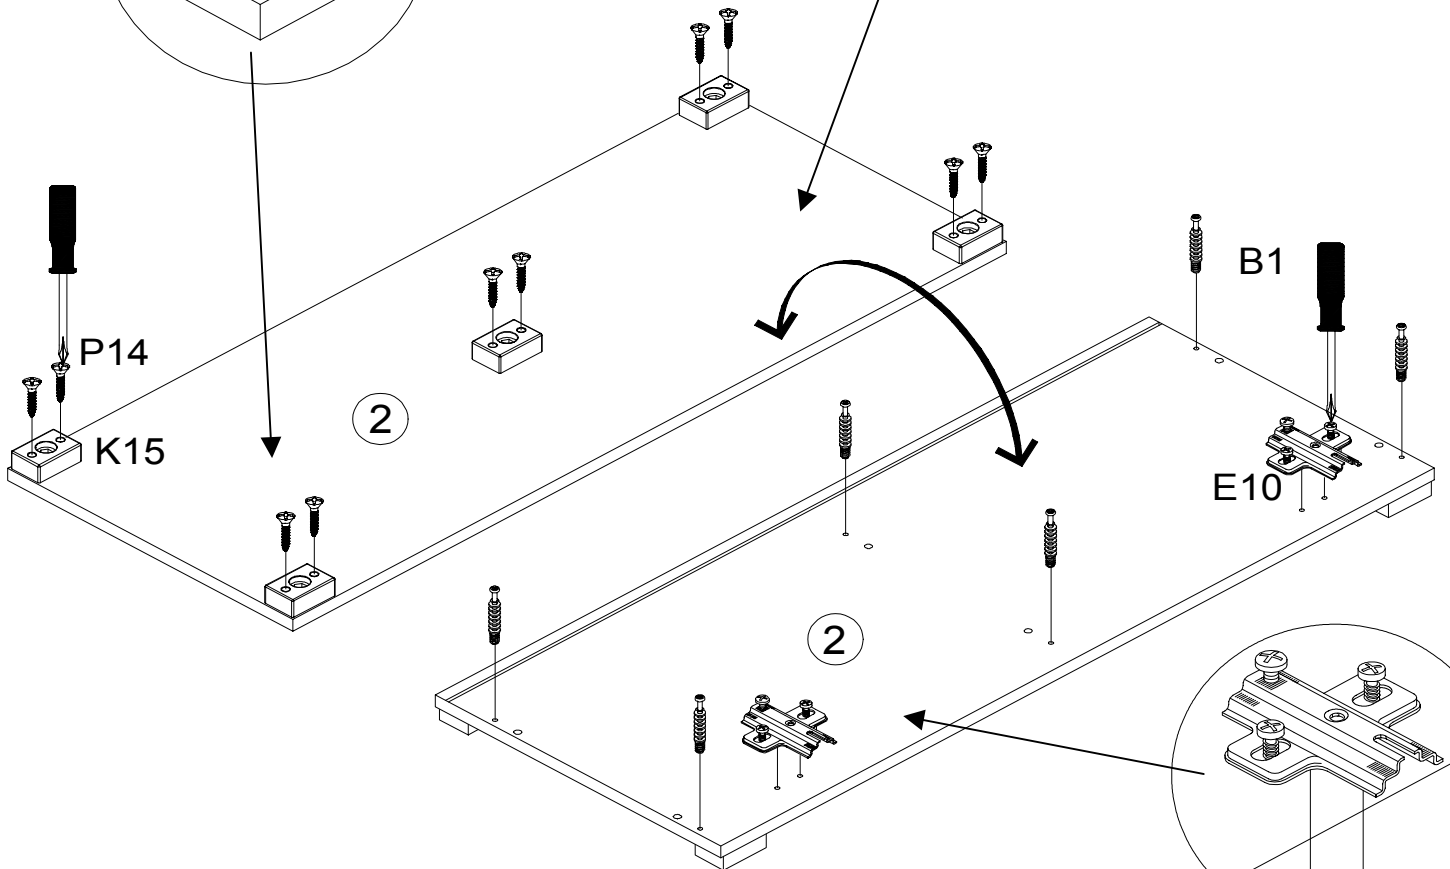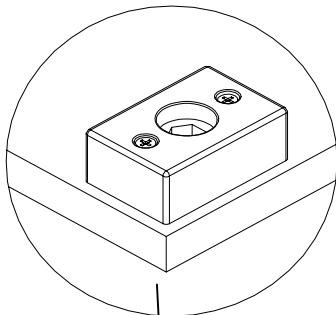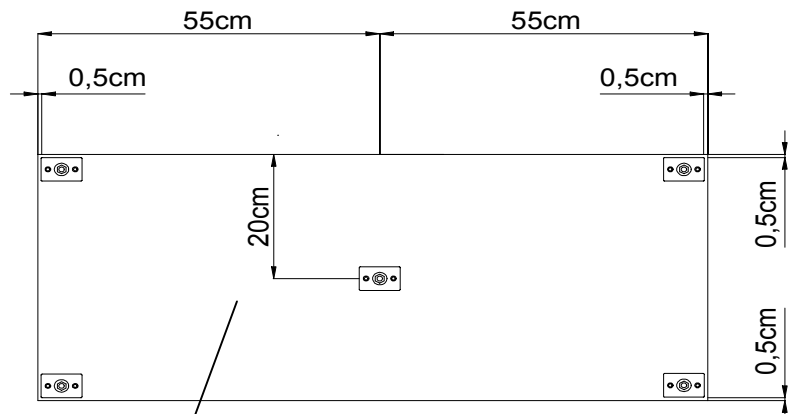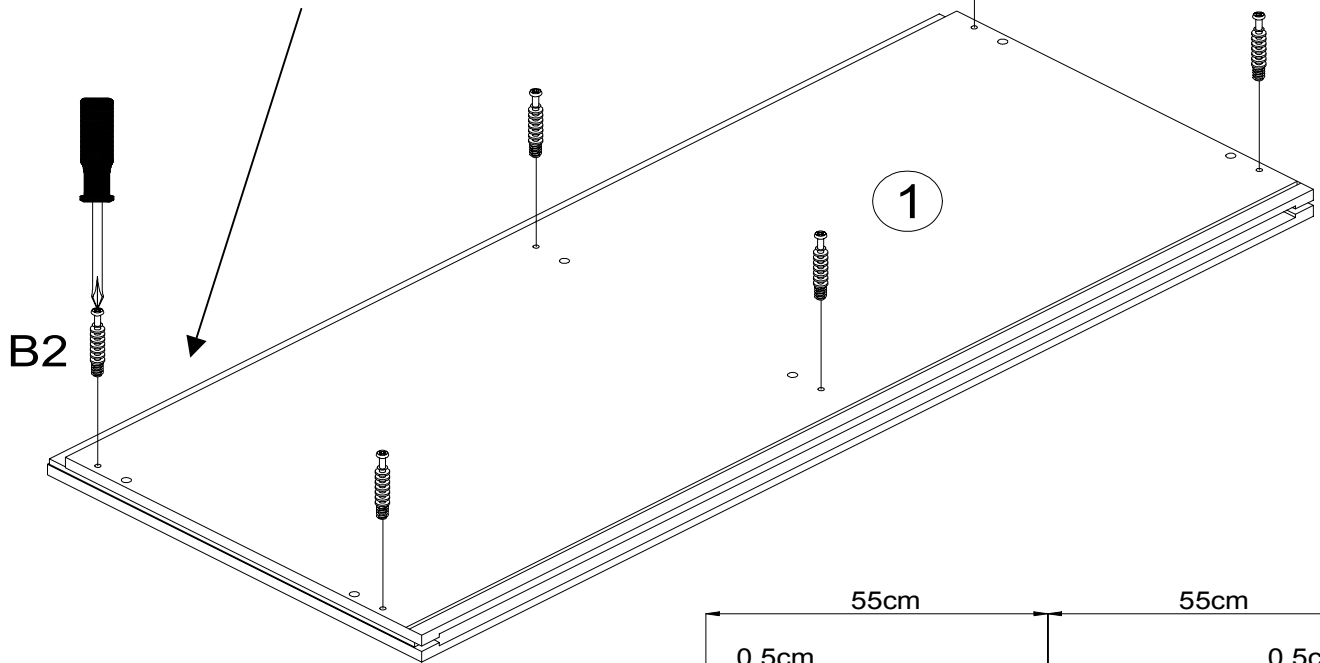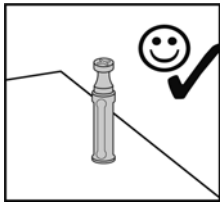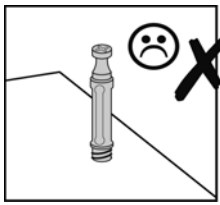       

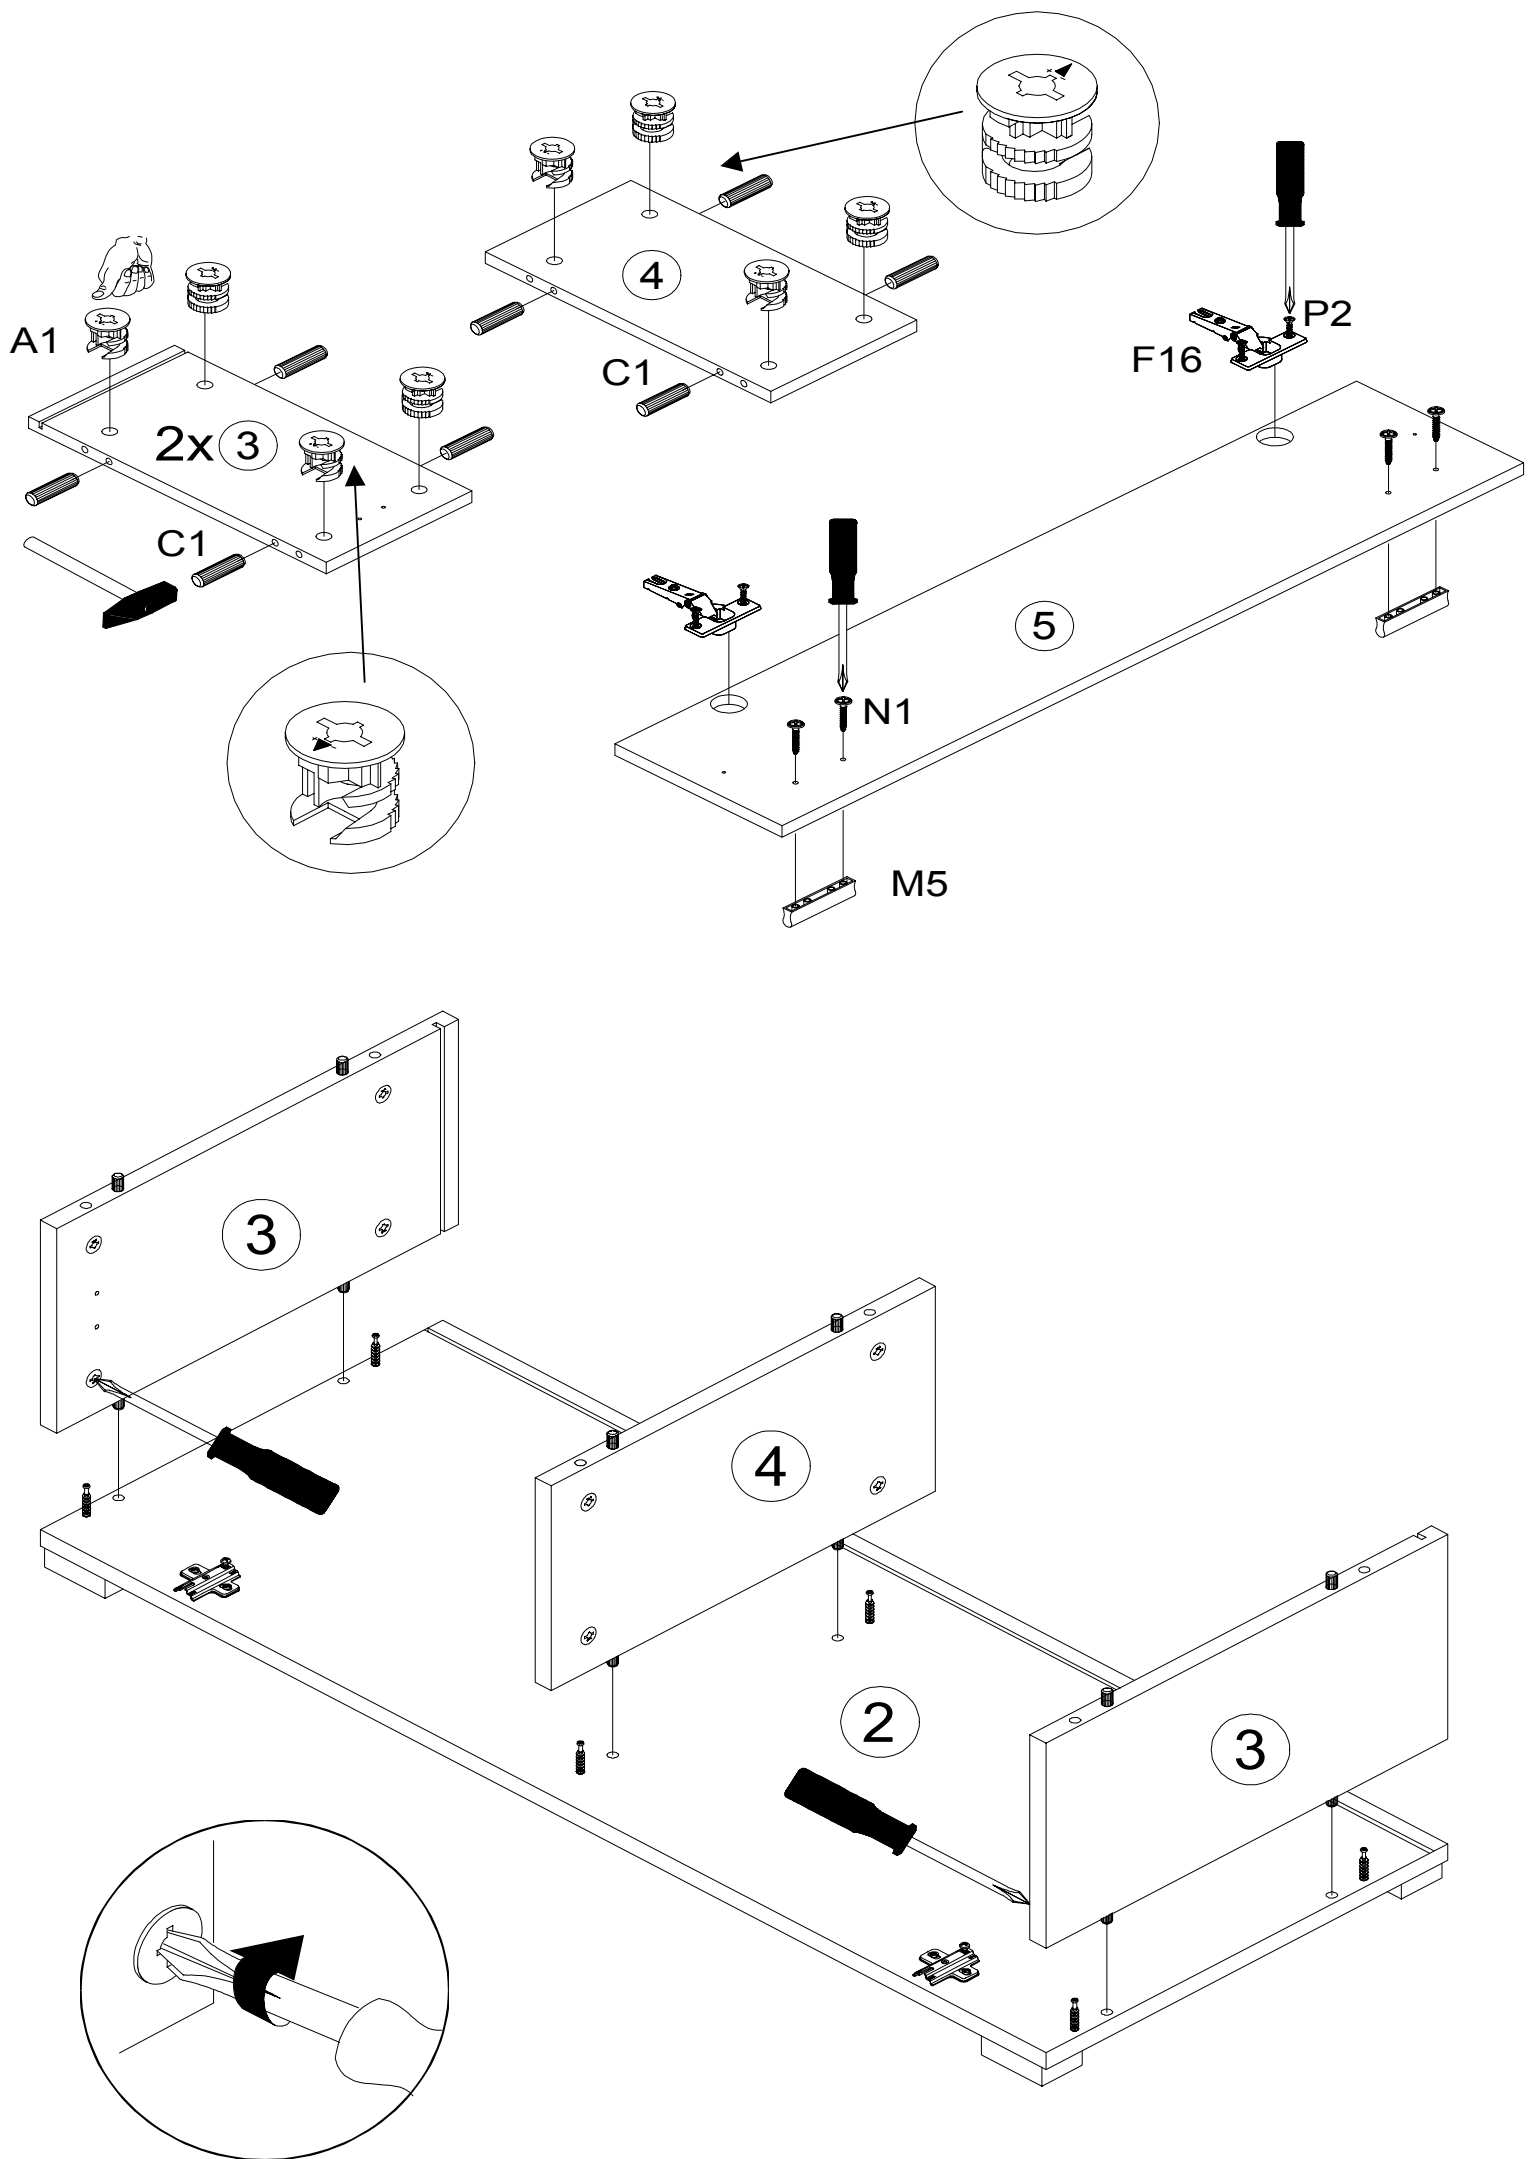 

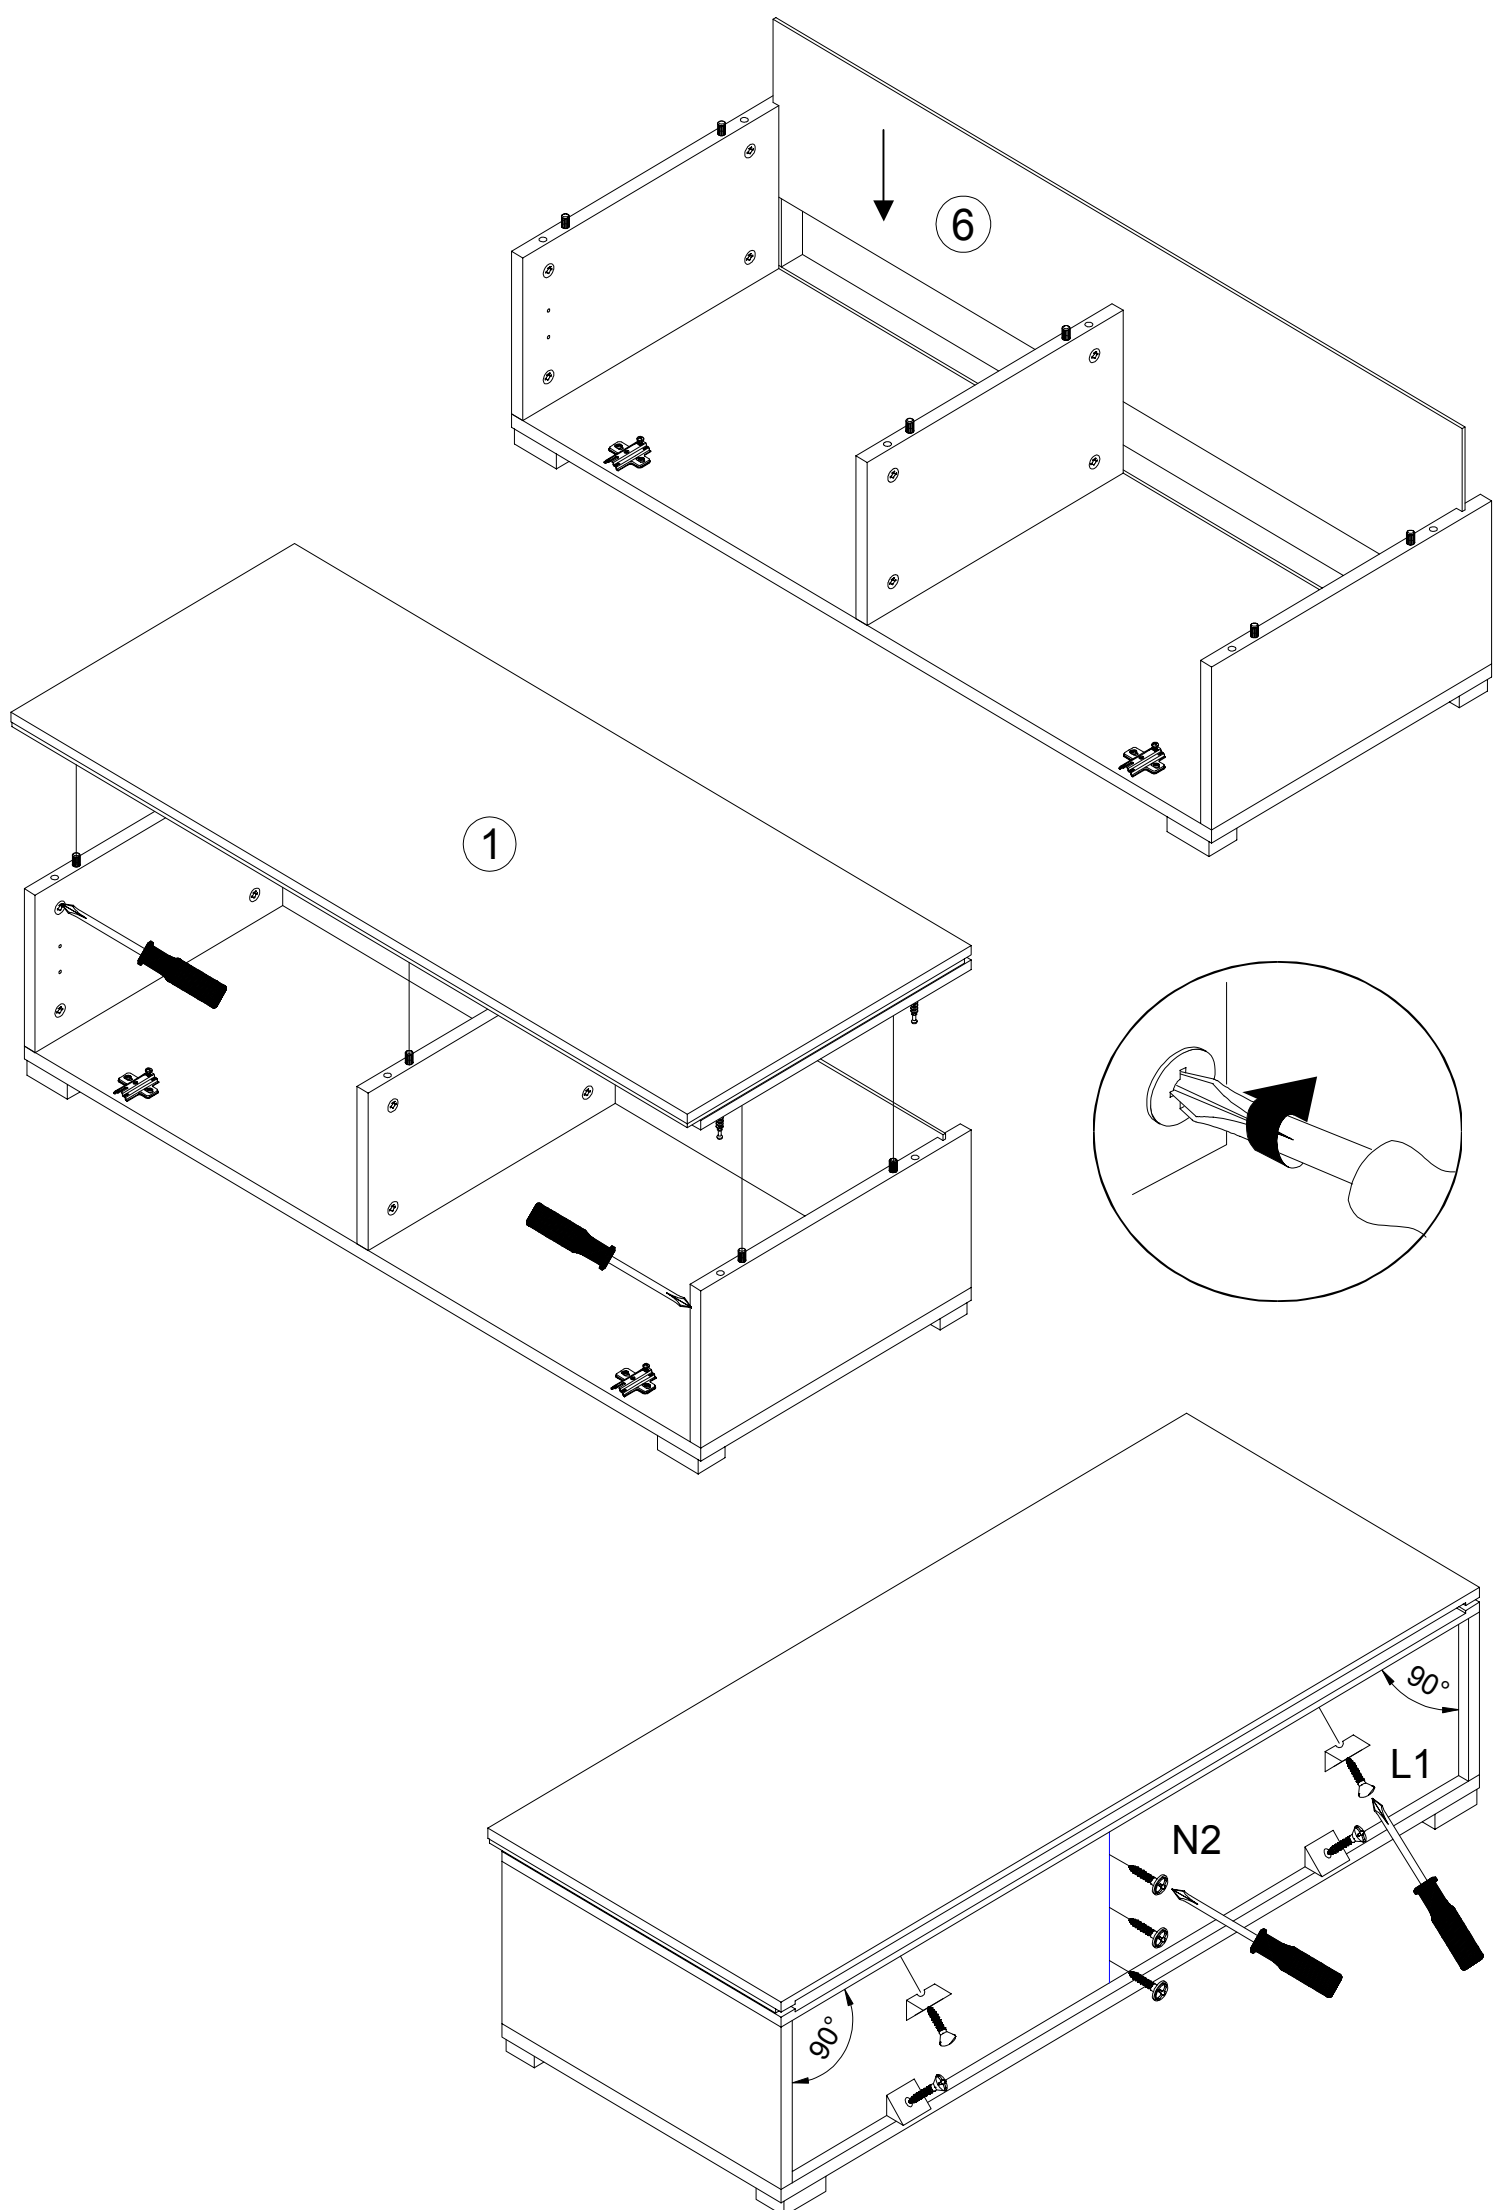 

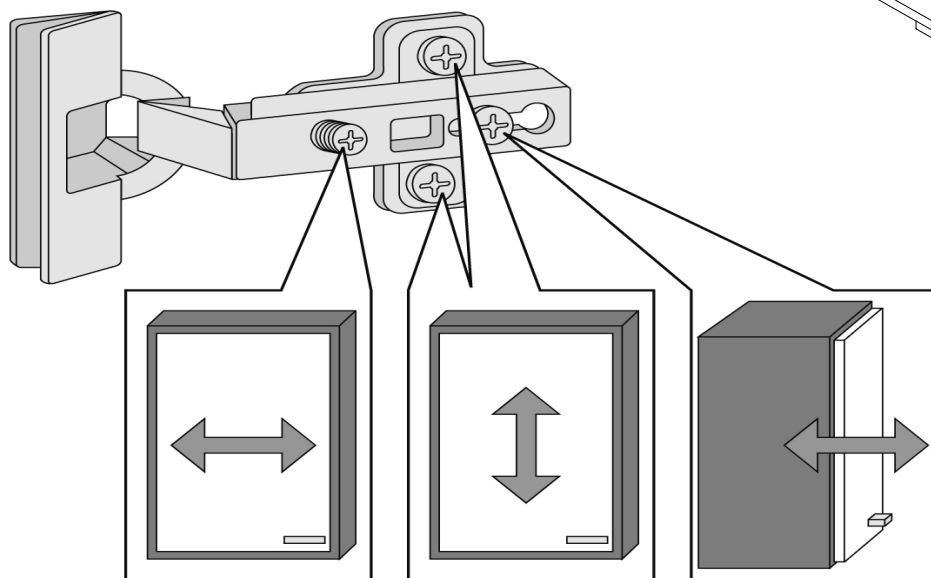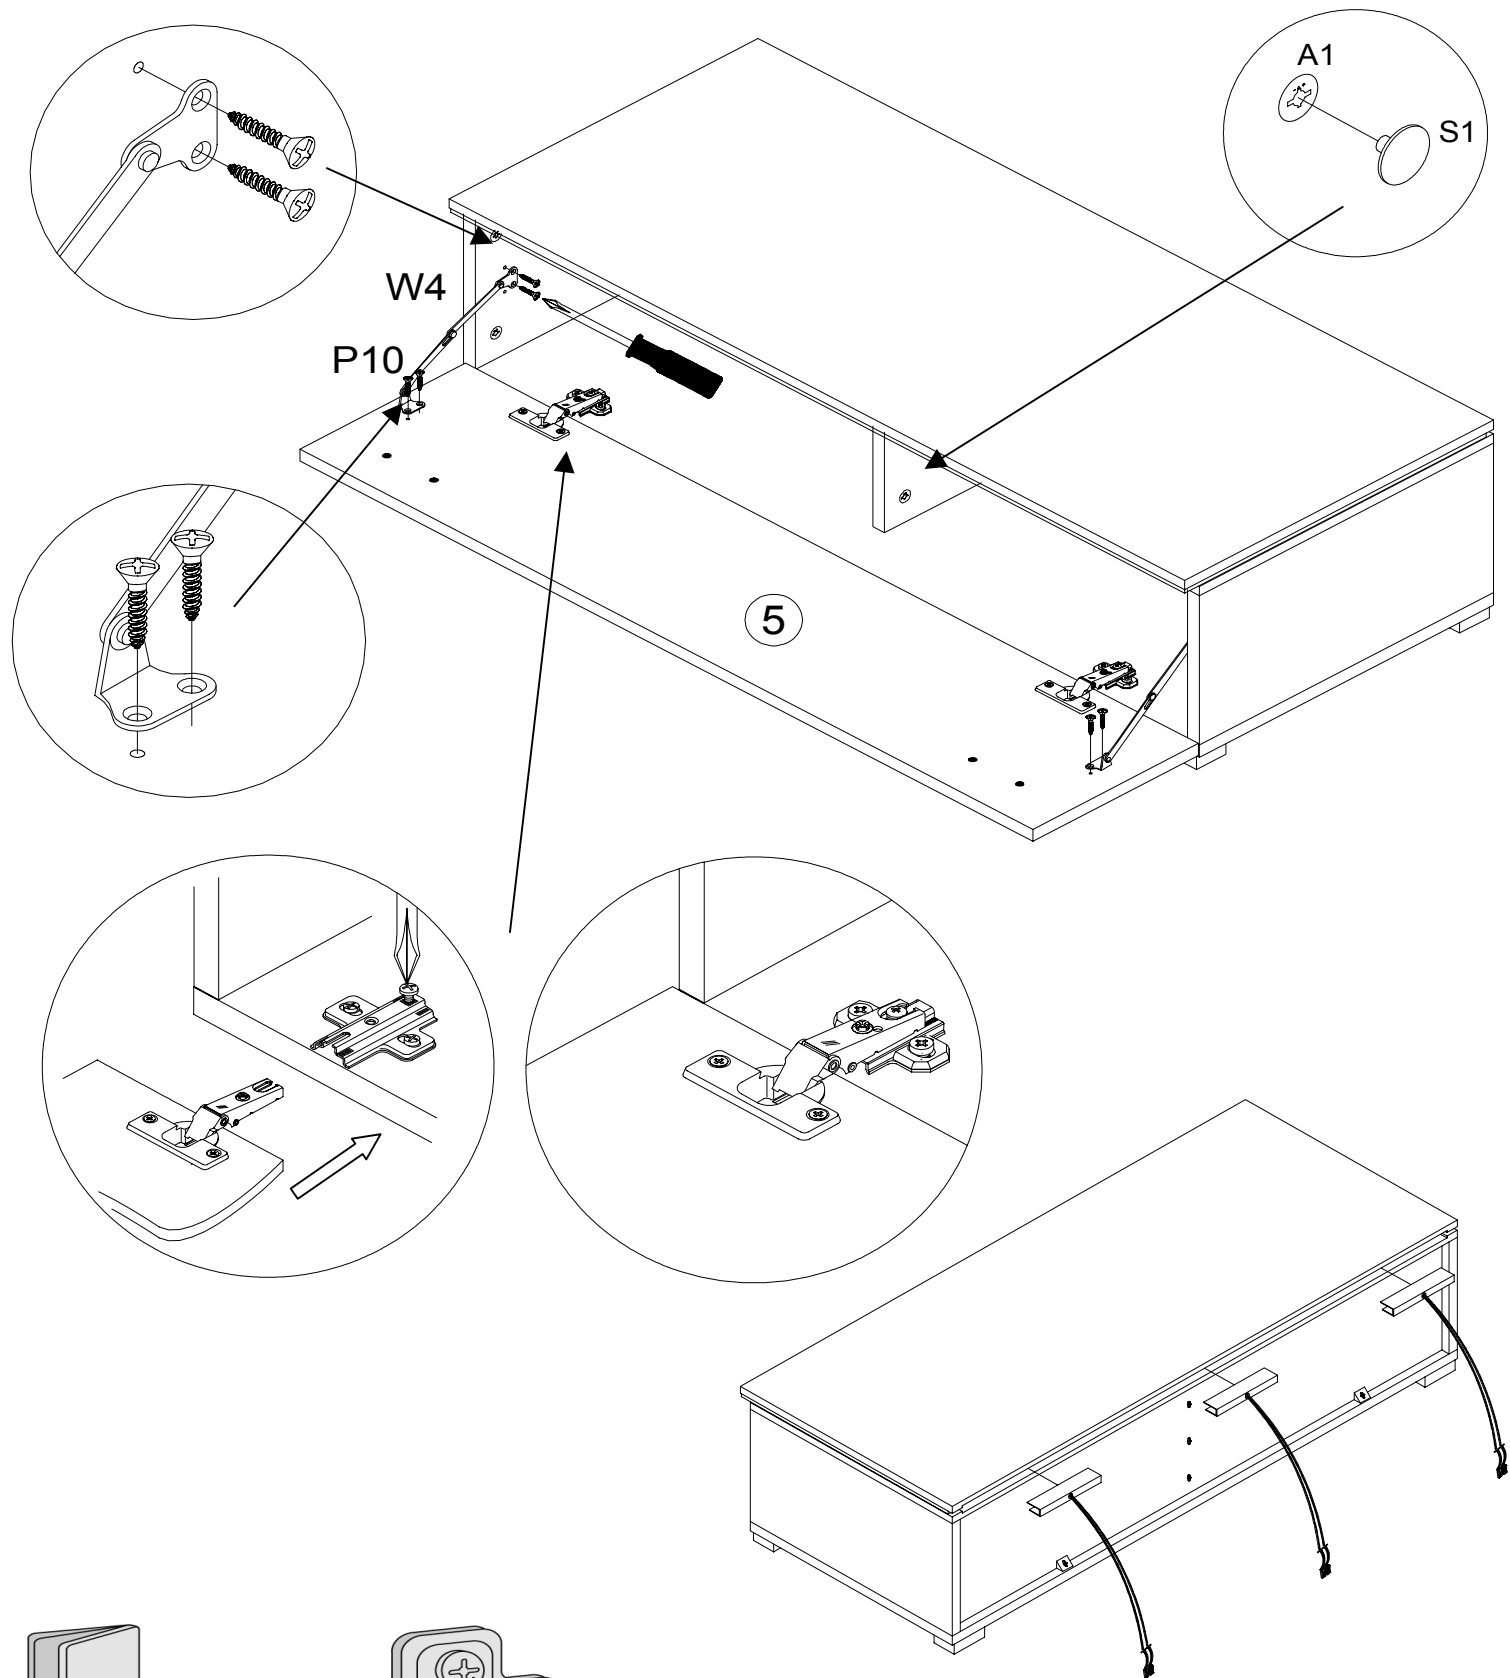  

Beleuchtung optional /
 Lighting optional /
 Rasvjeta izborno /
 Világítás opcionális /
 Iluminat opțional /
 Osvětlení volitelné /
 Osvetlenie voliteľné /
 Osvetljenje opciono /
 Освещение дополнительно /
 Verlichting optioneel /
 Oświetlenie opcjonalne /
 Aydınlatma isteğe bağlı