

Ⓛ Aufbauanleitung

Ⓛ Notice de montage

Ⓛ Handleiding voor de montage

Ⓛ Montážní návod

Ⓛ Szerelési útmutató

Ⓛ Montaj talimatları

Ⓛ Assembly instruction

Ⓛ Istruzione di montaggio

 
Ⓛ Instrukcja montażu

Ⓛ Navod na montaž

Ⓛ Instrucțiuni de montaj

Ⓛ Инструкция по монтажу

36-4602-LR-000




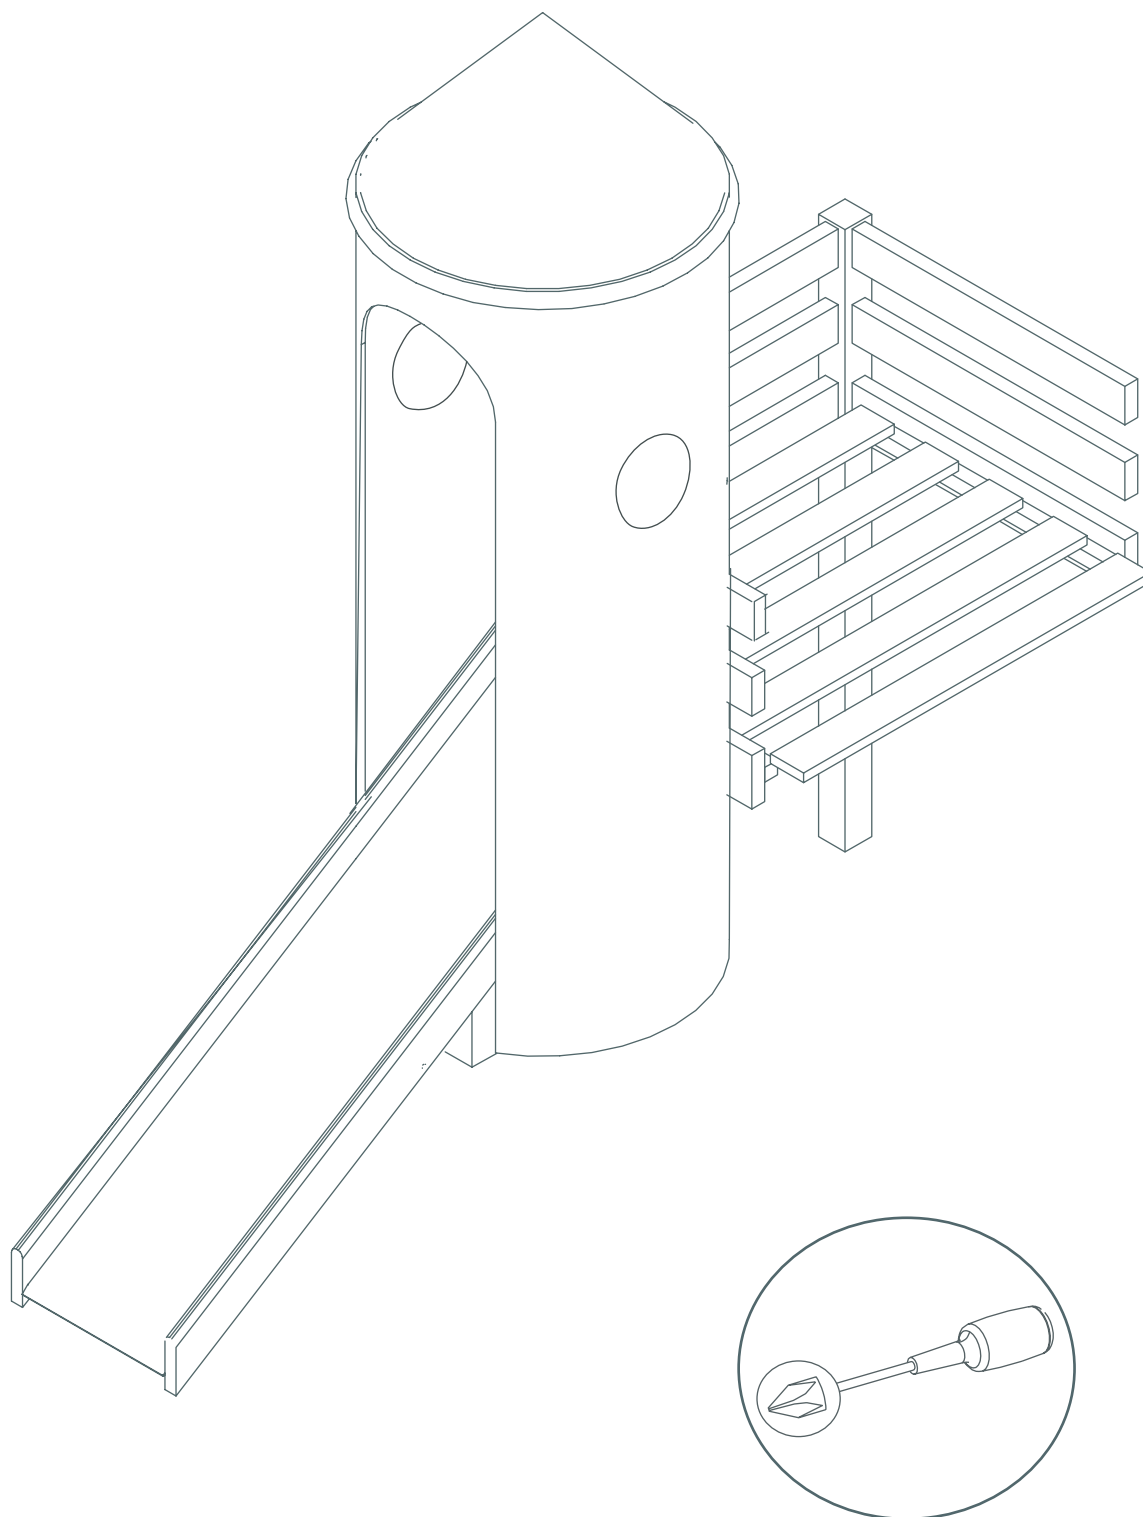


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба




Name • Nom • Nome • Naam • Nazwa • Jméno • Názov
Név • Denumire • Ísim • Название

Nr. • No. • N° • Č • Sz • Номер

    Typ • Type • Tip • Tipus • Druh • Типо • Тип

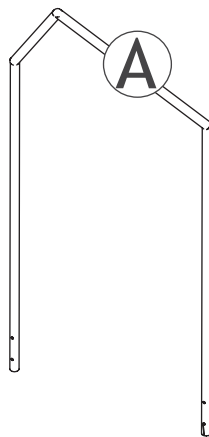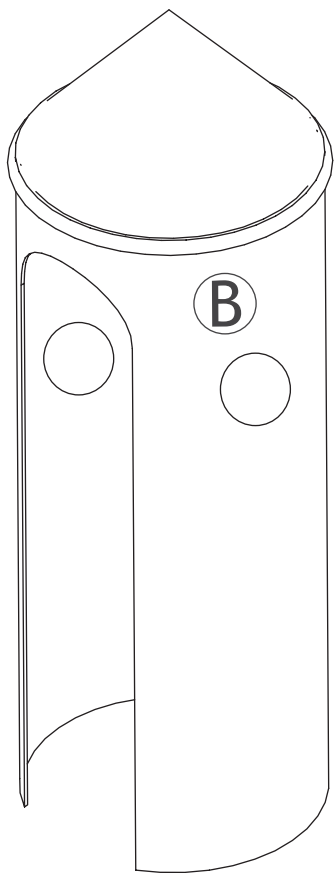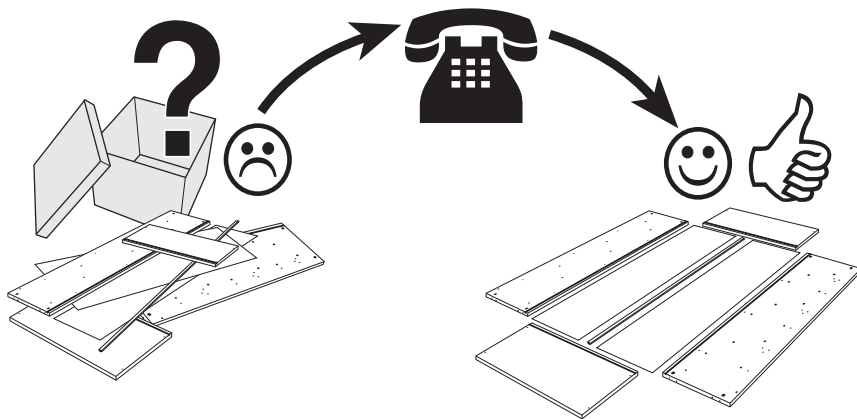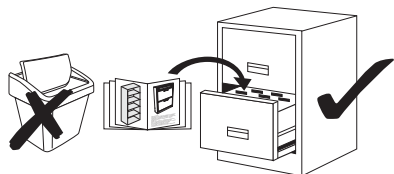


A	x1
B	x1

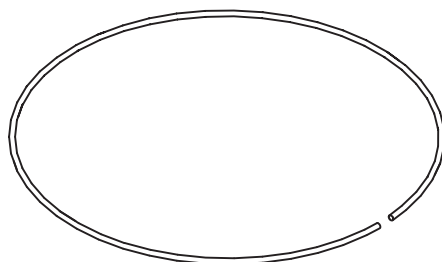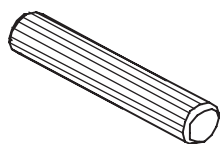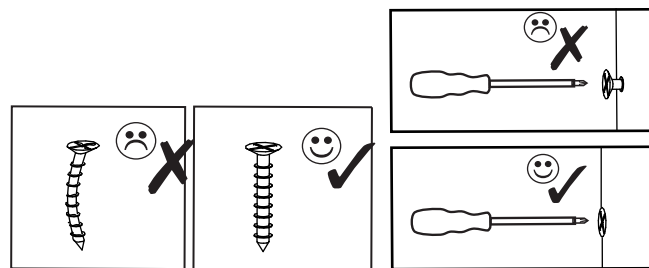   

		mm	
①	1-000109-00	8x30	x1
②	1-000145-57		x1
③	1-103265-07	3,5x35	x4

 1-000001=

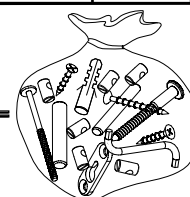


①


②

③

 
1.
1.1

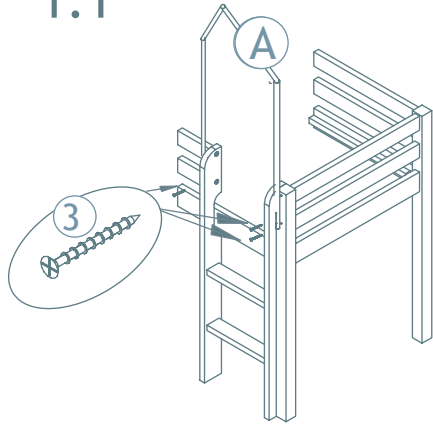

 
1.1

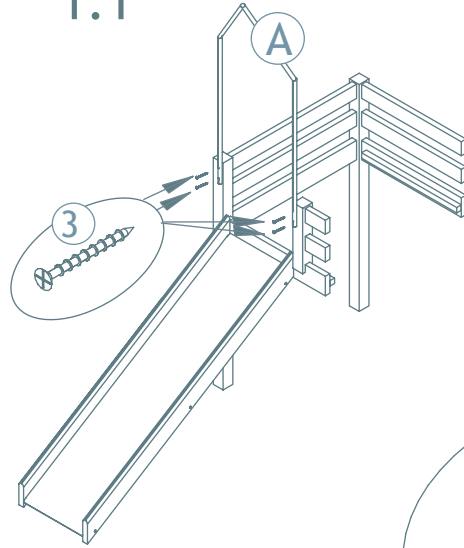

 2.

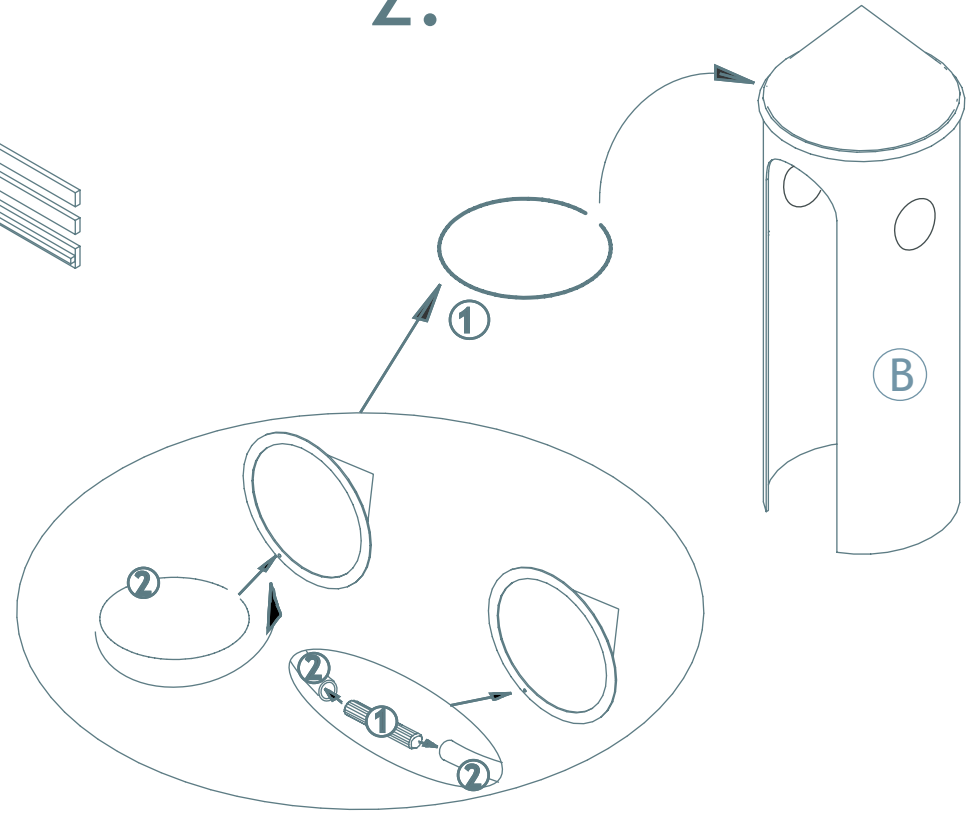

 3.
3.1

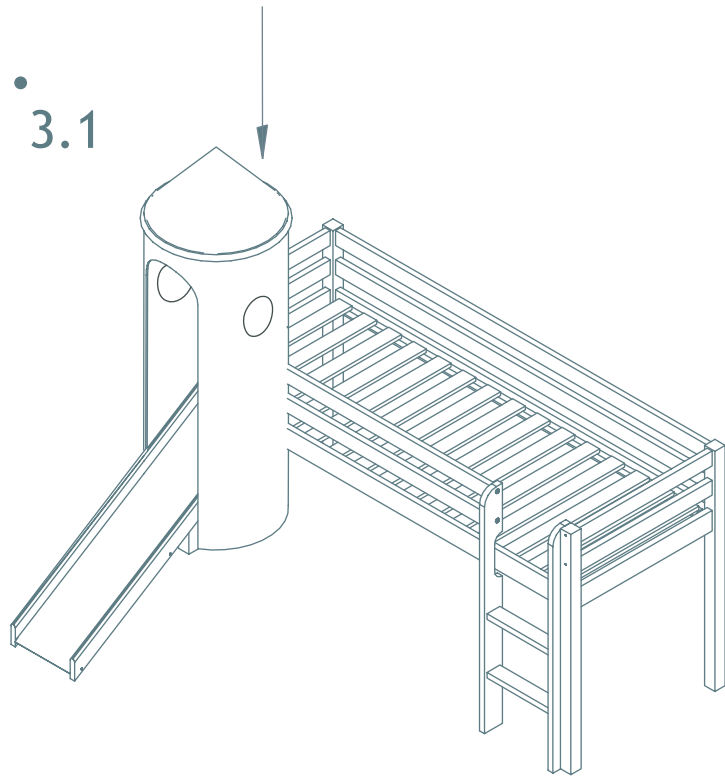

3.2

