





- | | | | |
|----|-----------------------------|----|-------------------------|
| Ⓓ | Montageanleitung | ⒼⒷ | Assembly instructions |
| ⒻⓇ | Notice de montage | ⒾⓉ | Istruzioni di montaggio |
| ⓃⓁ | Handleiding voor de montage | ⓅⓁ | Instrukcja montażu |
| ⒸⓏ | Montážní návod | ⓈⓀ | Návod na montáž |
| ⒽⓊ | Szerelési utmutato | Ⓡⓞ | Instrucțiuni de montaj |
| ⓉⓇ | Montaj talimatı | ⓇⓊ | Инструкция по монтажу |



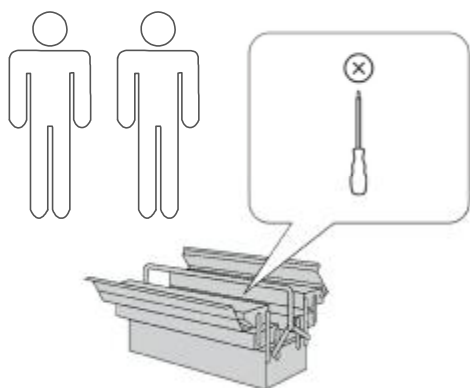

Ausgabe: 2021 0820




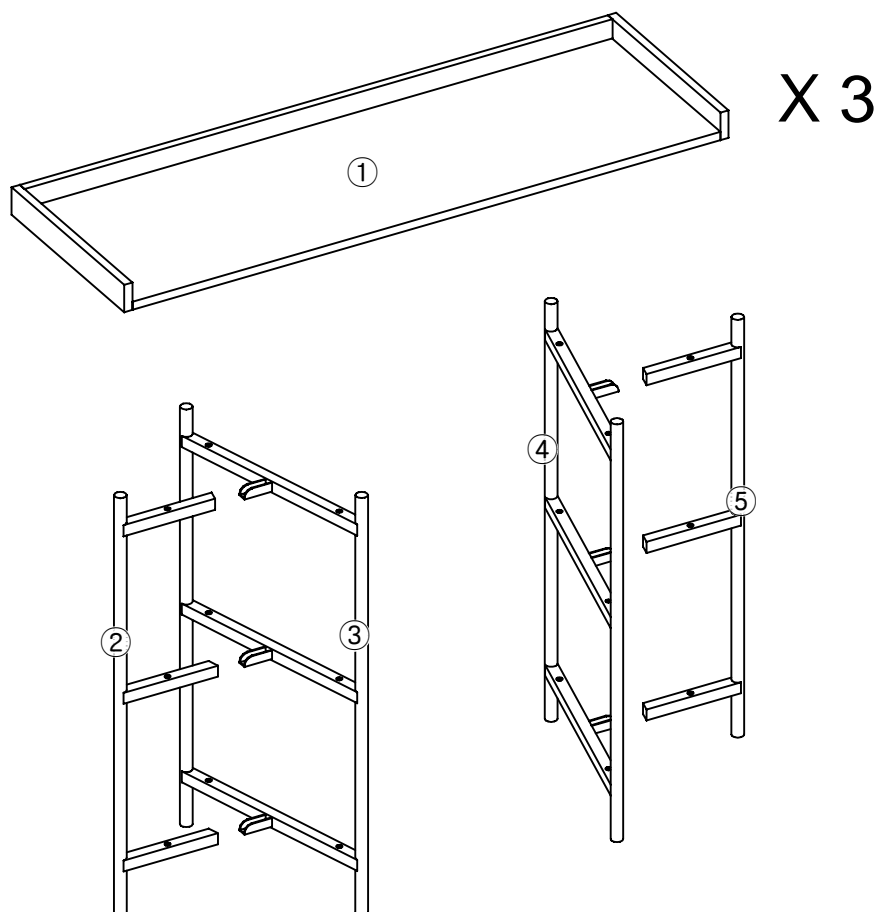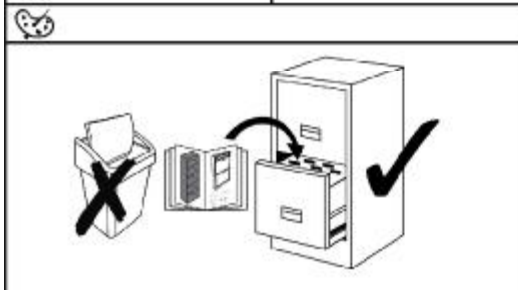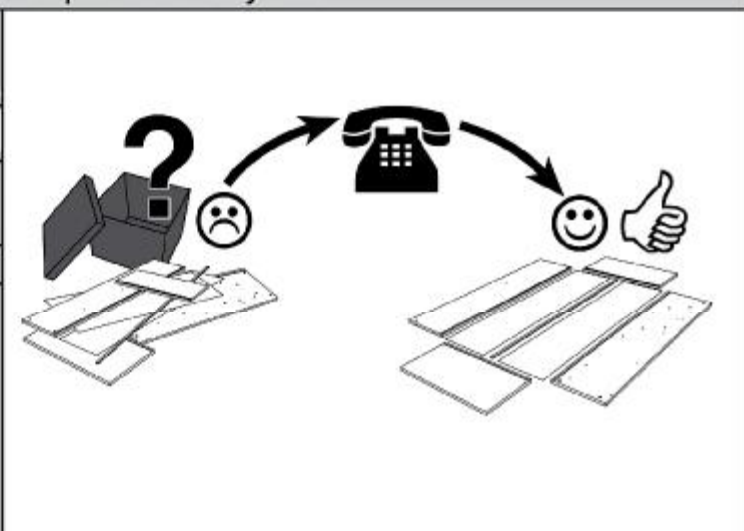Service • Assistenza • Dienstverlening • Serwis
 Servis • Szerviz • Сервисная служба



Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • Isim • Название	BENGT
Nr. • No. • N° • Номер • Č. Sz	3544 9563
Typ • Type • Tip • Típus • Tipo Тип	YS-HT6678

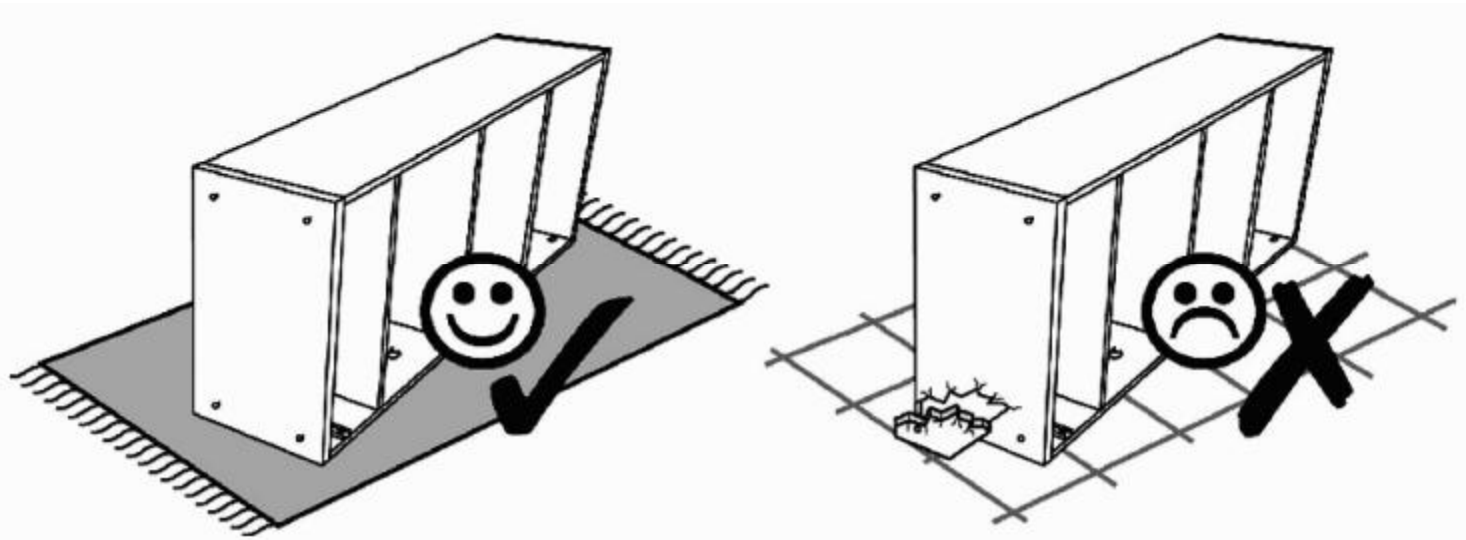


A	M6X12MM		X12
B	M4X35MM		X18
C		X4	
D		X1	






1
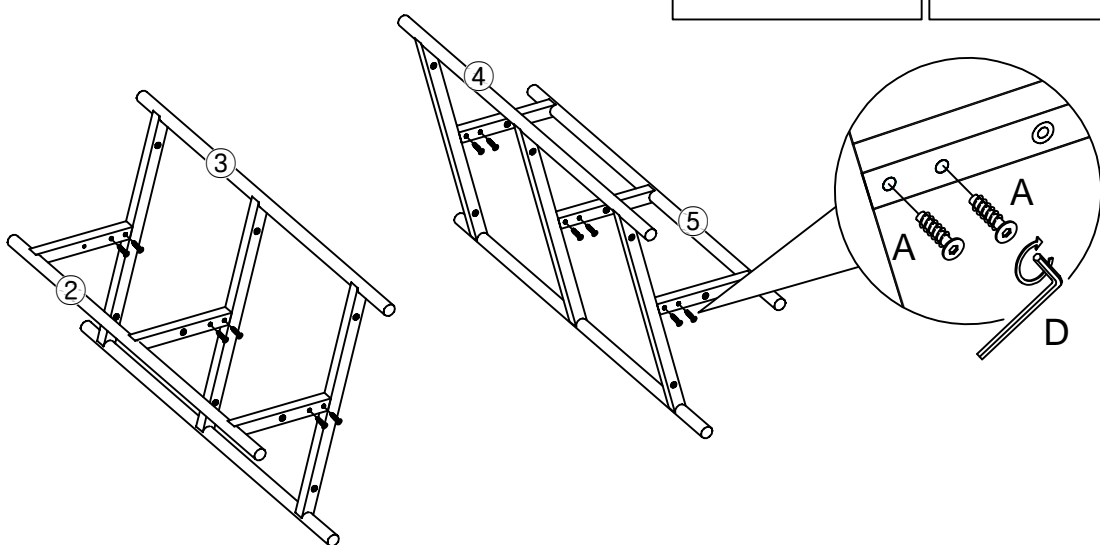
<p>A M6X12MM  X12</p>	<p>D  X1</p>
--	---




2

<p>B M4X35MM  X18</p>	<p>C  X4</p>
--	---

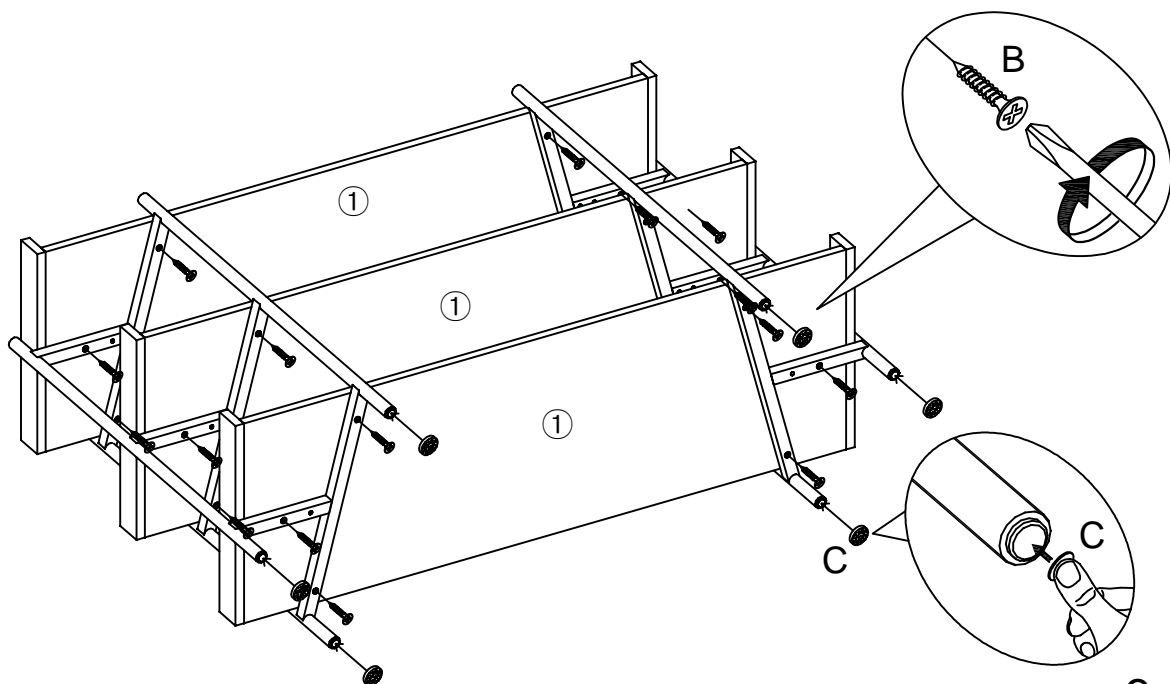

3

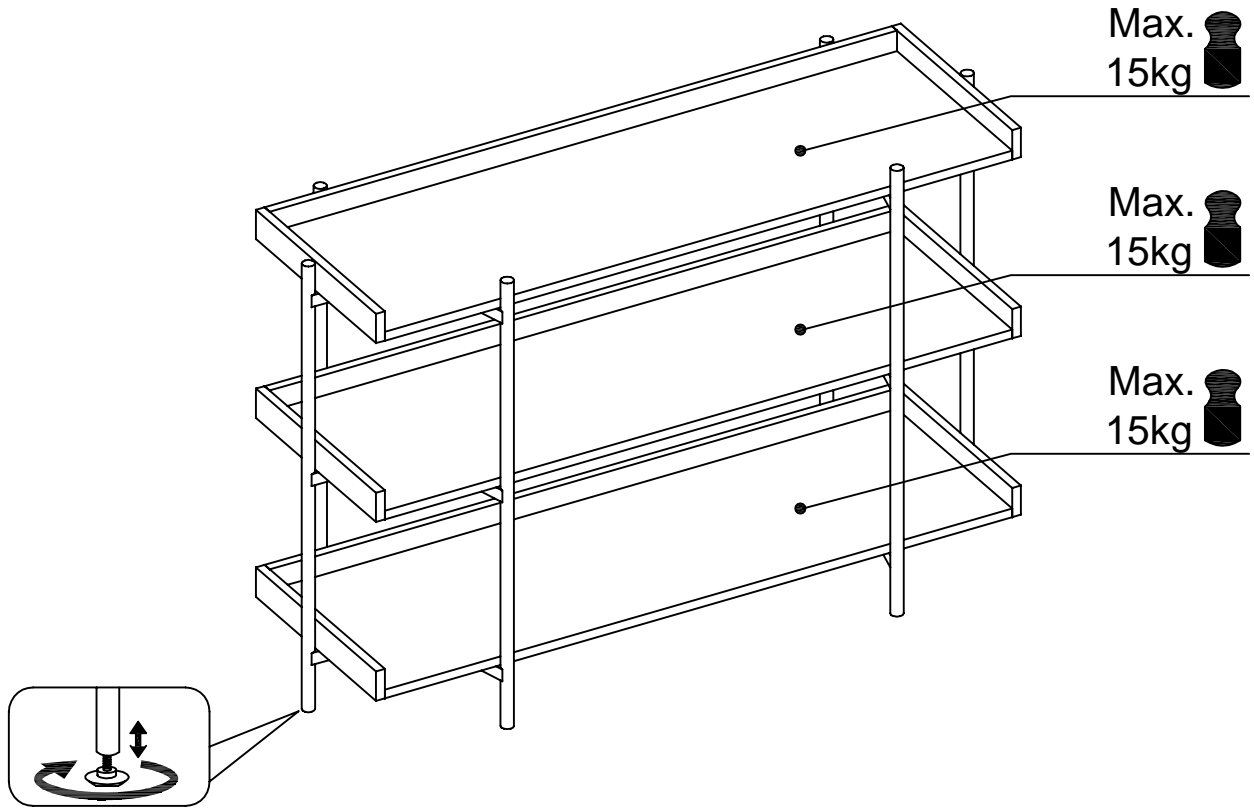

4

