



Diana DL

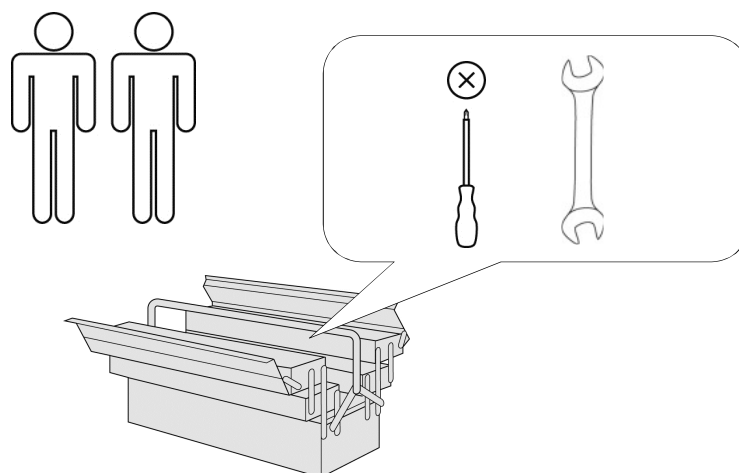

- | | |
|-----------------------------|----------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (NL) Handleiding voor de montage |
| (CZ) Montážní návod | (IT) Istruzioni di montaggio |
| (RO) Instrucțiuni de montaj | (RU) инструкция по сборке |
| (PL) Instrukcja montażu | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (TR) Montaj talimati |

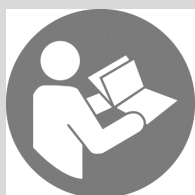

Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam
Nazwa • Jméno • Názov • Név
Denumire • İsim • Название




Diana

Nr. • No. • N° • Номер • Č • Sz

SH42/SH55


Typ • Type • Tip • Típus • Tipo
Тип


DL

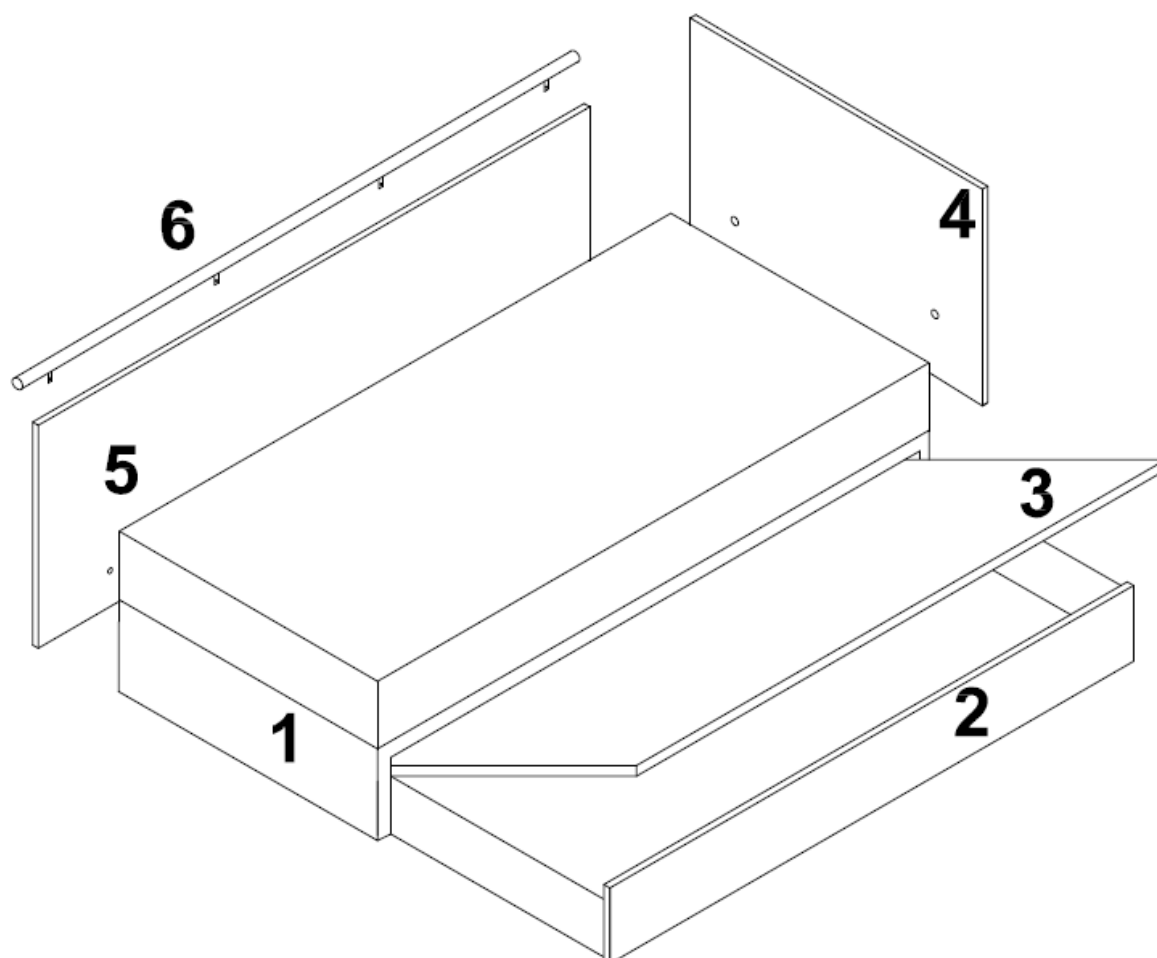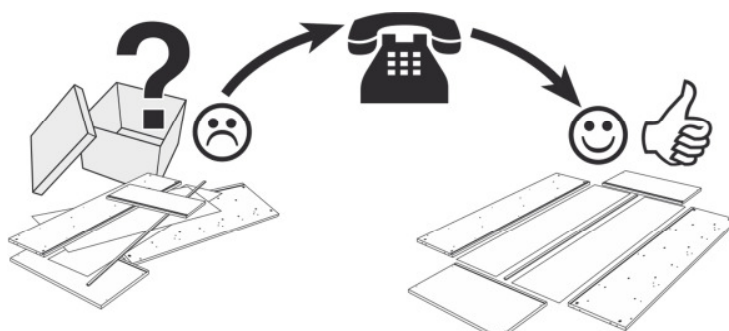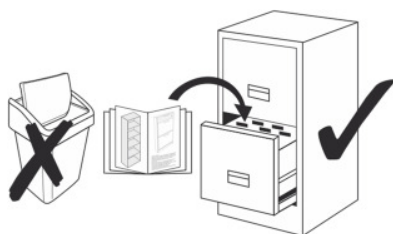

A	B	C	D	E	F
					
2x 6x50	5x M8	2x M6	3x 6x45	3x 3,5x16	1x

 



A	B	C
		
2x 6x50	2x M8	2x M6

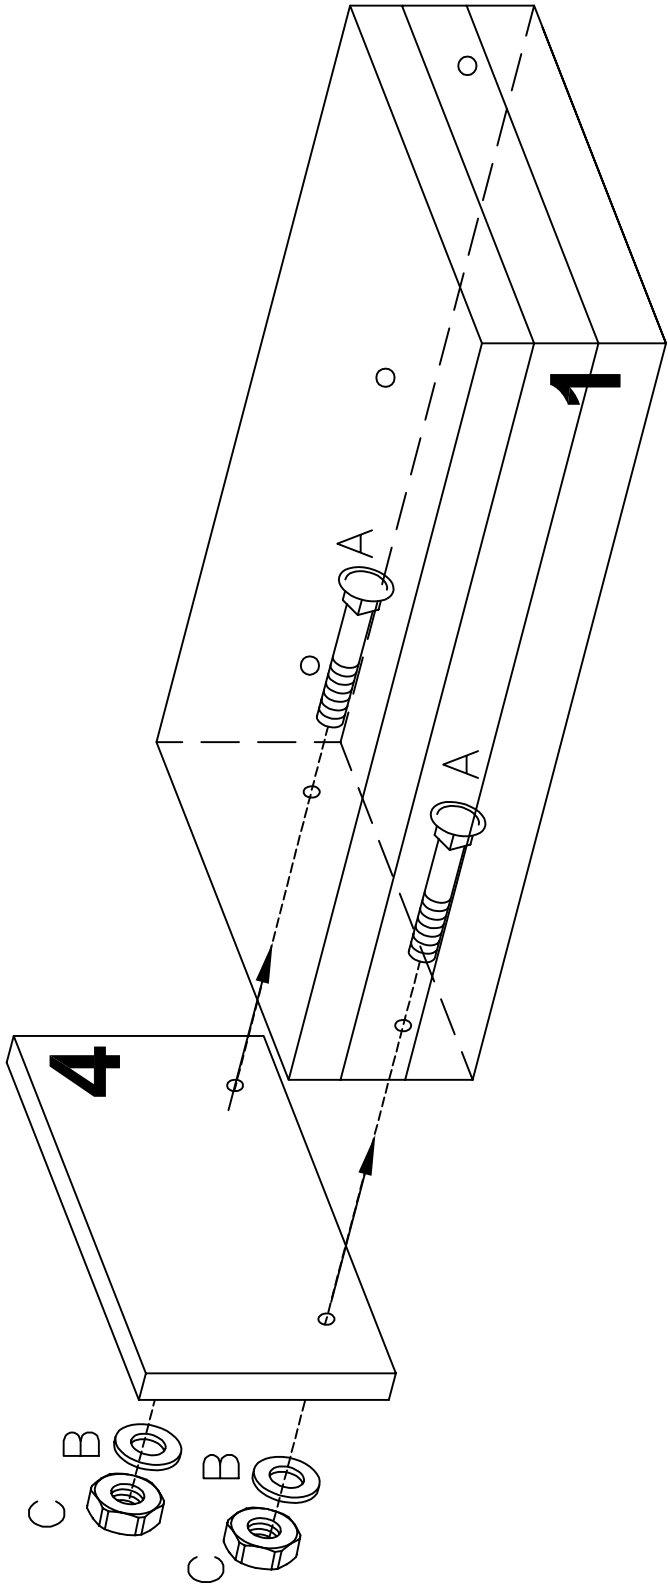

DL_KT_2xSchloss_6x50


 



D	B
	
3x 6x45	3x M8

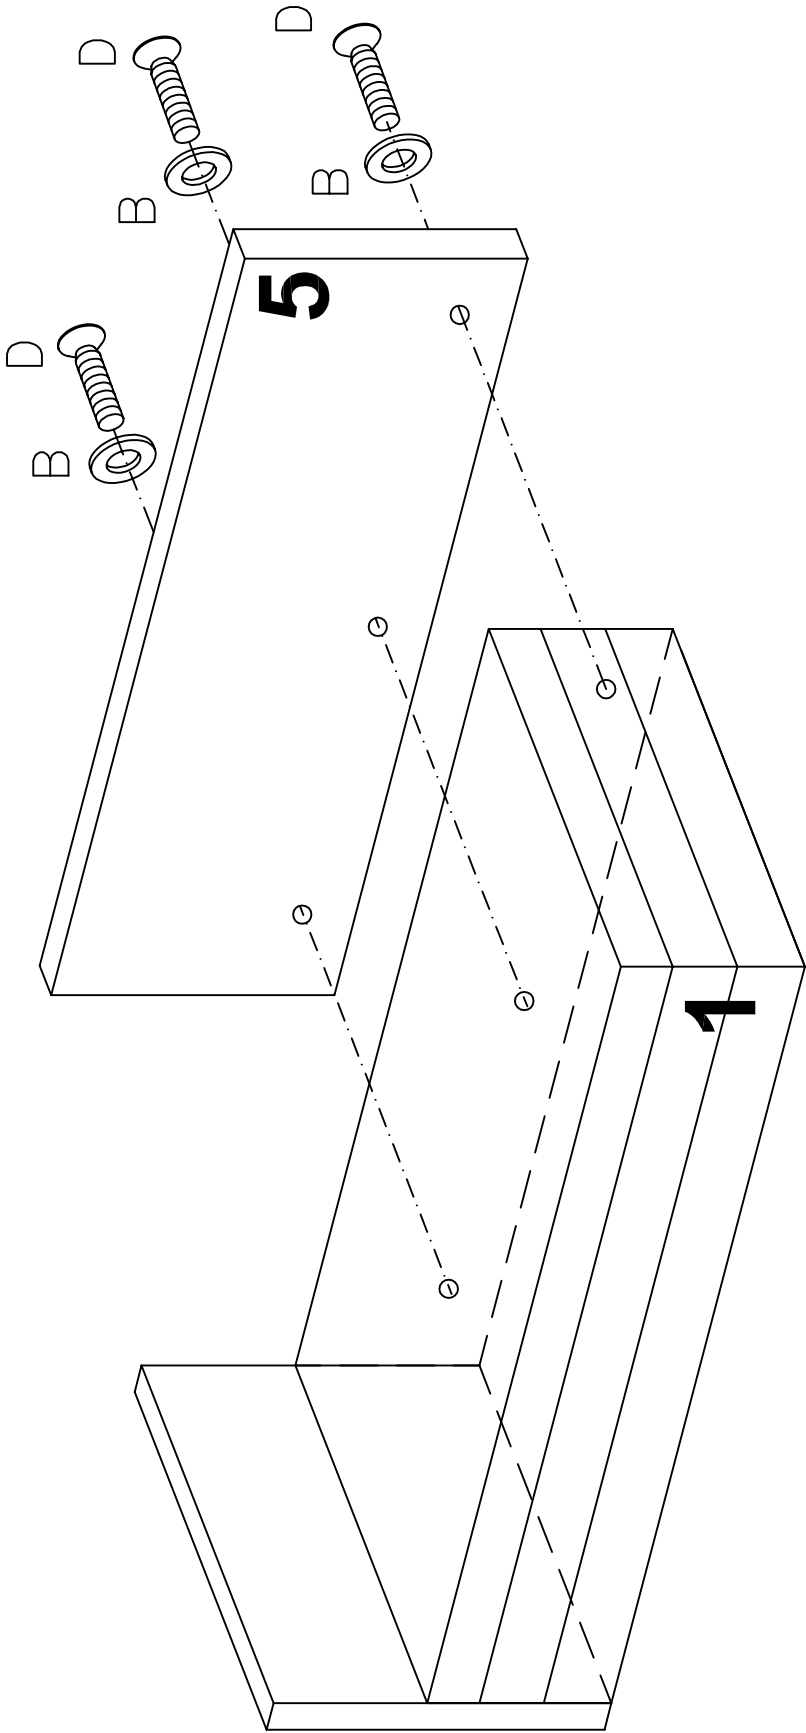

DL_RÜ_3xSenk_6x45

  

E	F
	
3x 3,5x16	1x

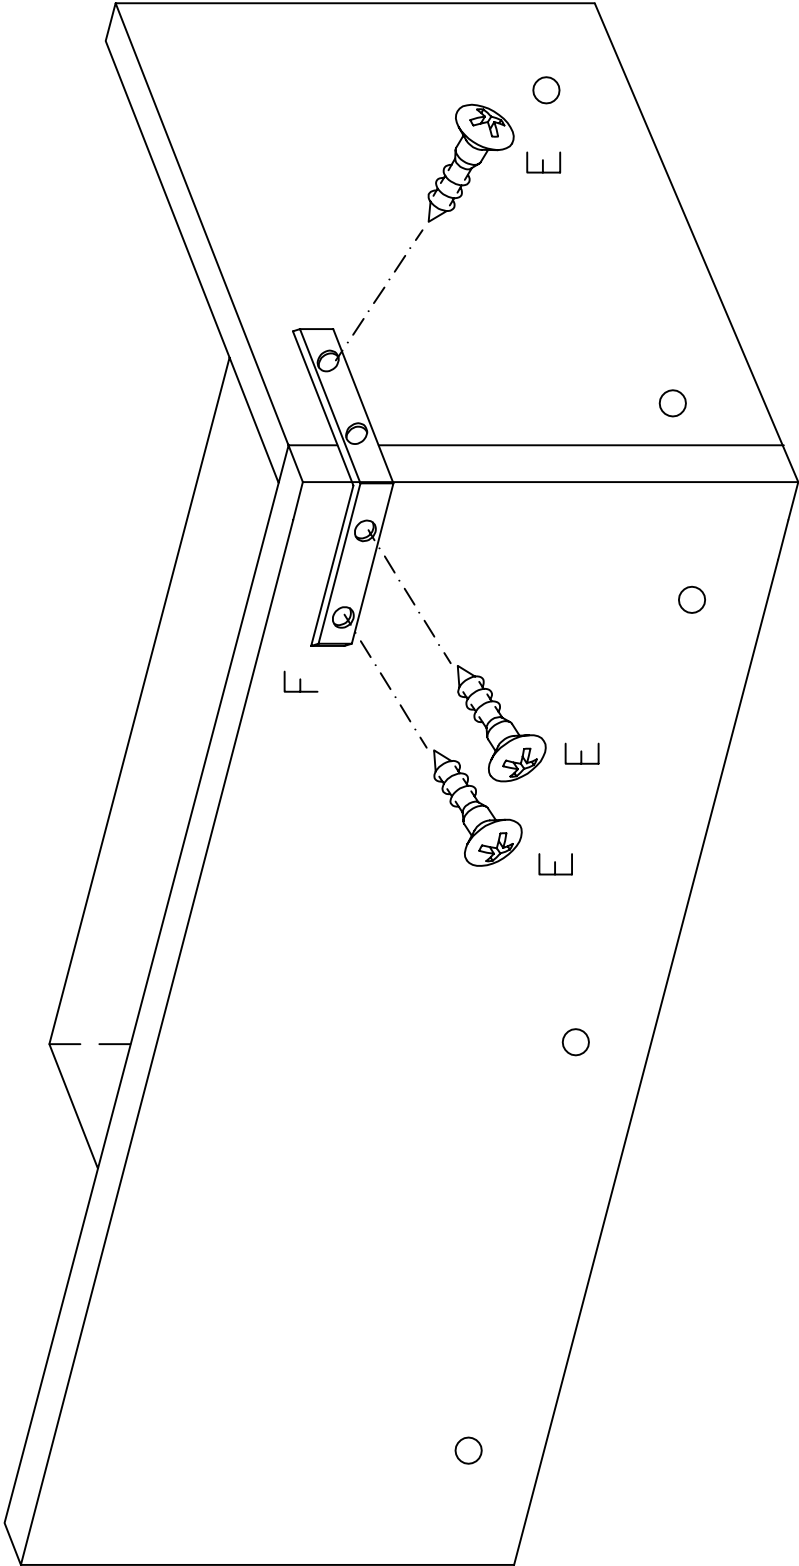

DL_SCHL_WI