






Progress Beds

90 x 200

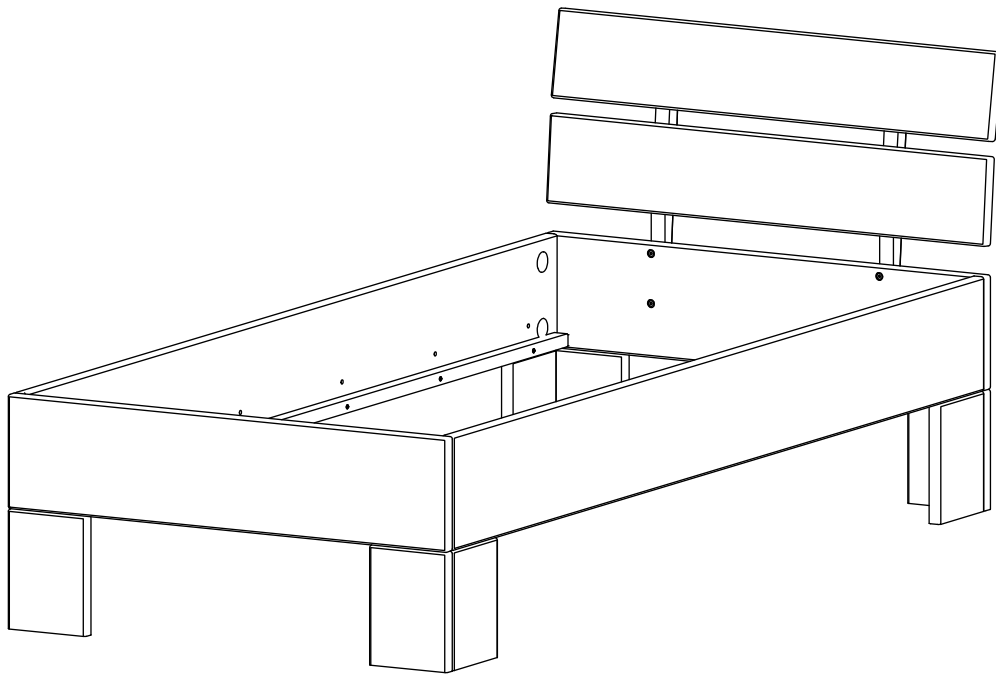



90 x 200 cm: 901 109 + 901 217

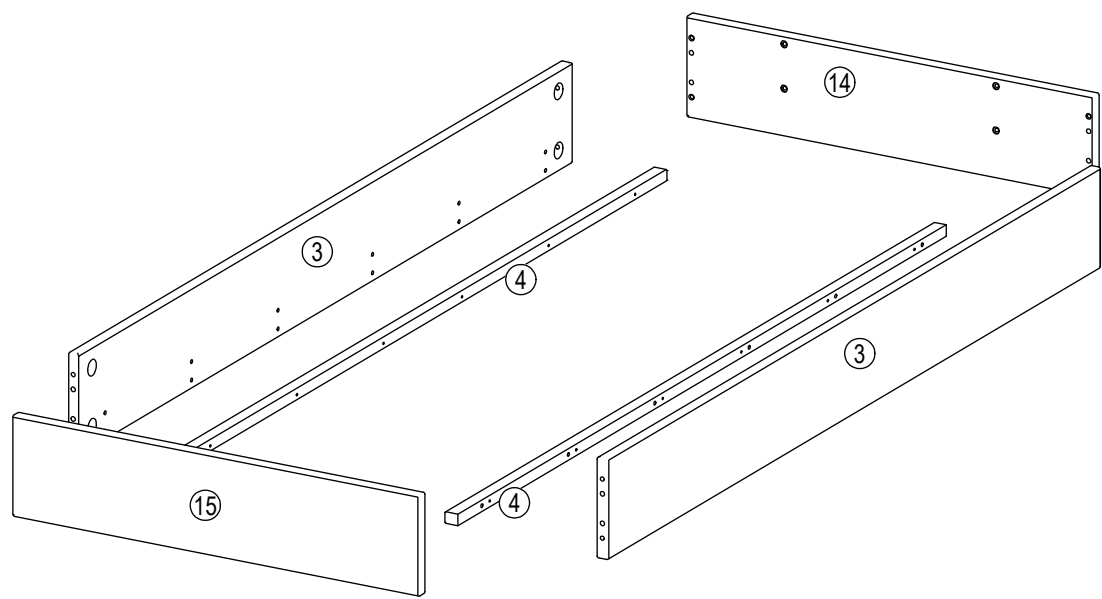



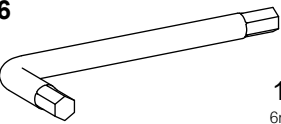
A24  12 x ø8 x 30mm	A45  8 x ø10 x 50mm	B50  8 x ø35mm	B51  8 x	B52  8 x M6
D37  12 x ø4 x 45mm	Z04  1 x 4mm	Z06  1 x 6mm		

901 121



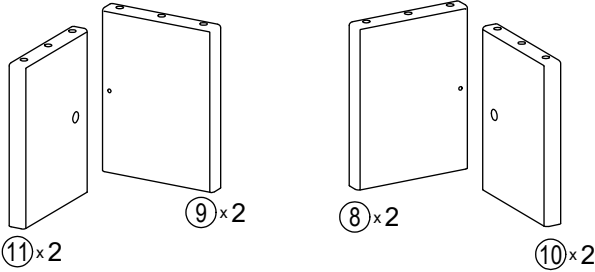


A45  24 x ø10 x 50mm	B01  4 x ø15 x 12,5mm	B10  4 x cc34, ø5 x 11mm
--	--	---



1

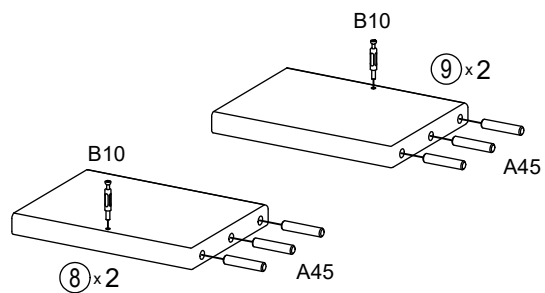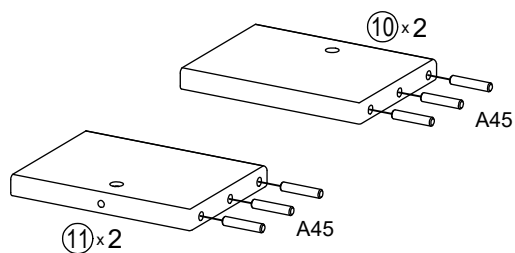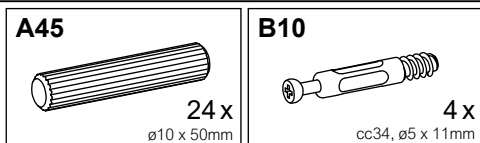



2

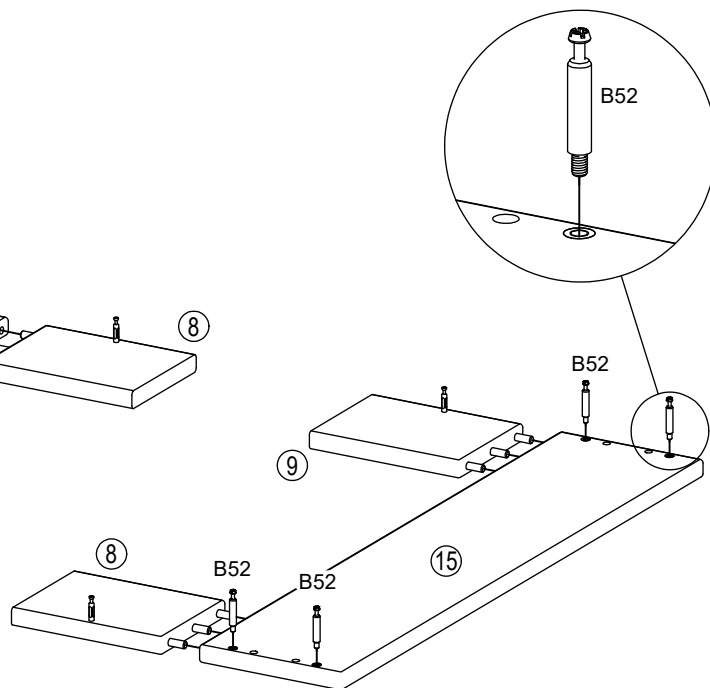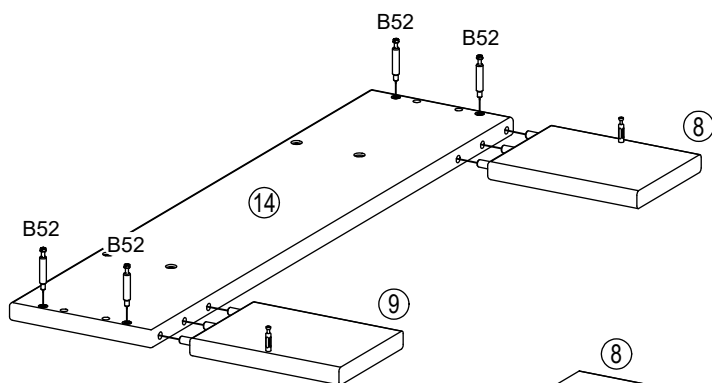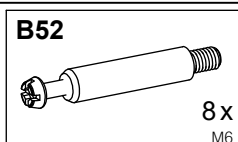



3

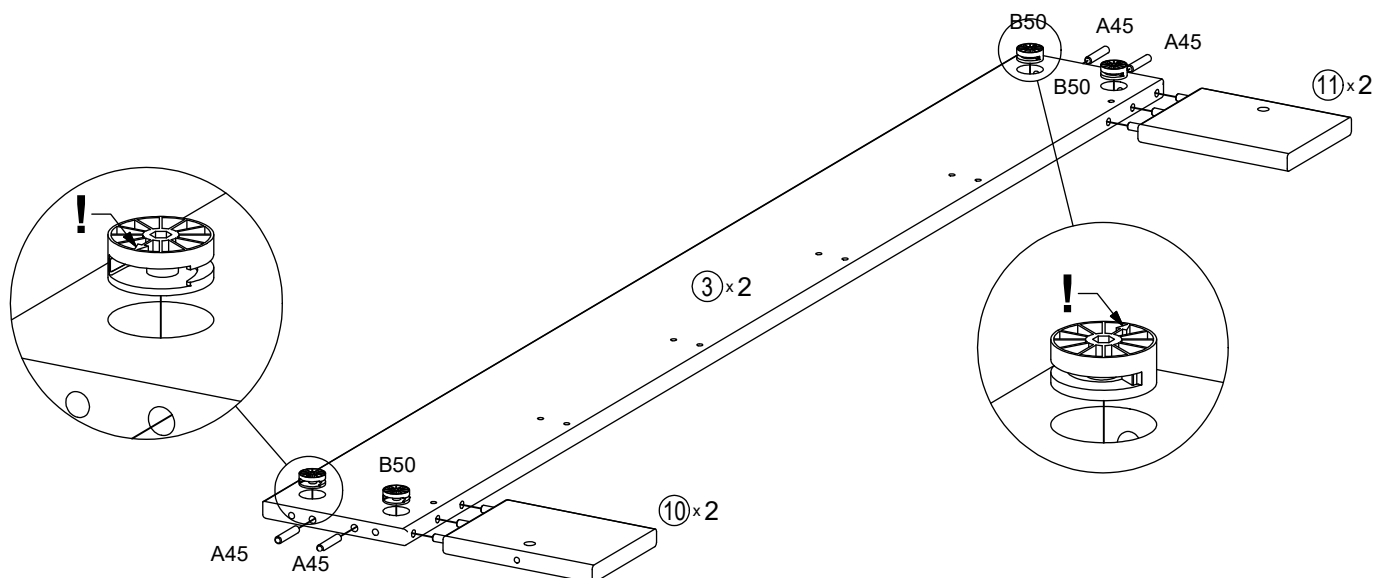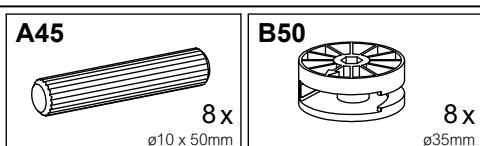



4

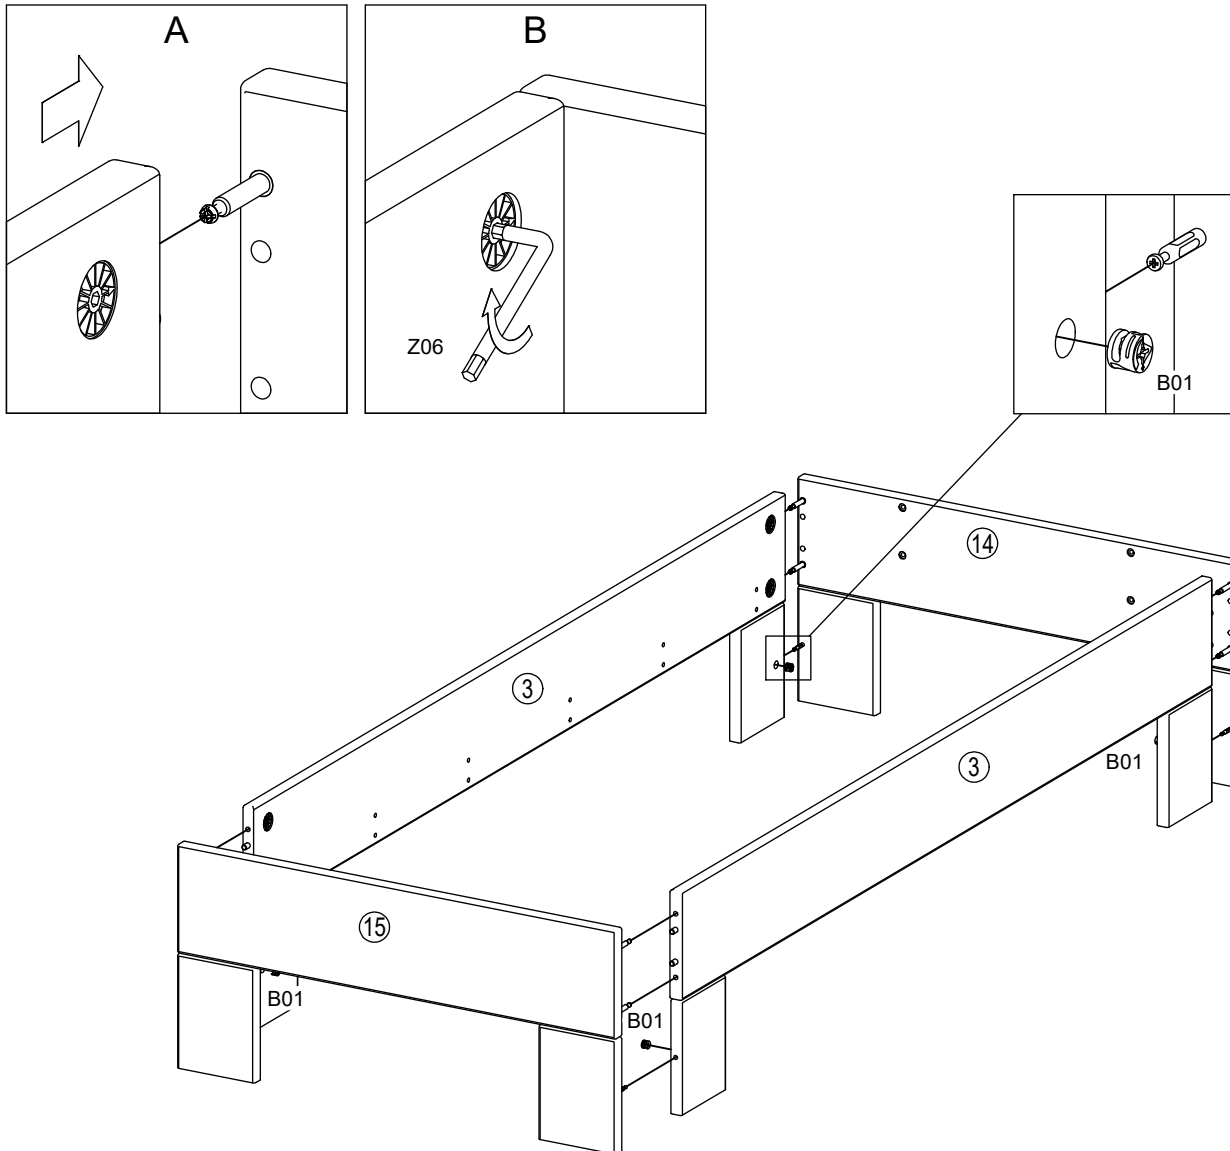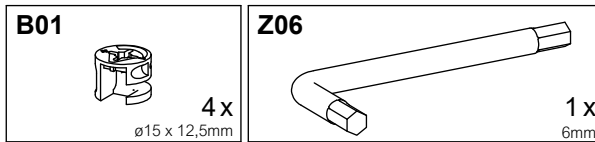


5

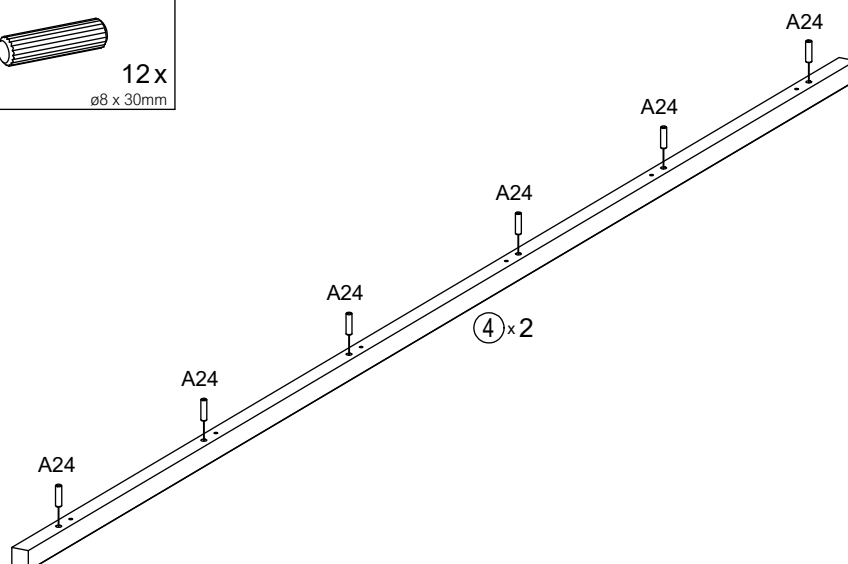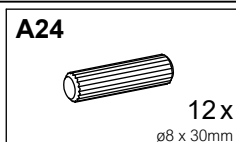


6

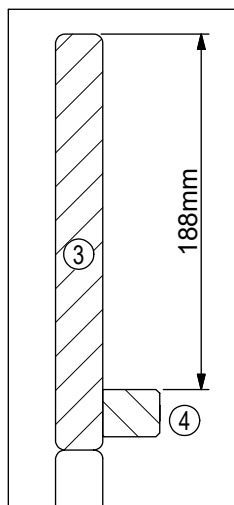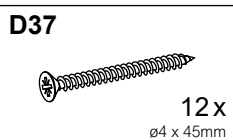


6A

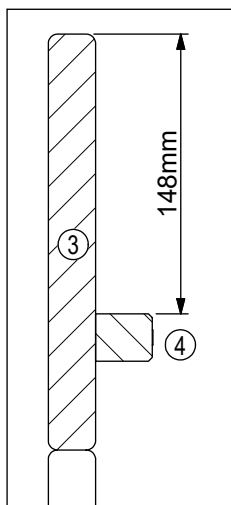


6B





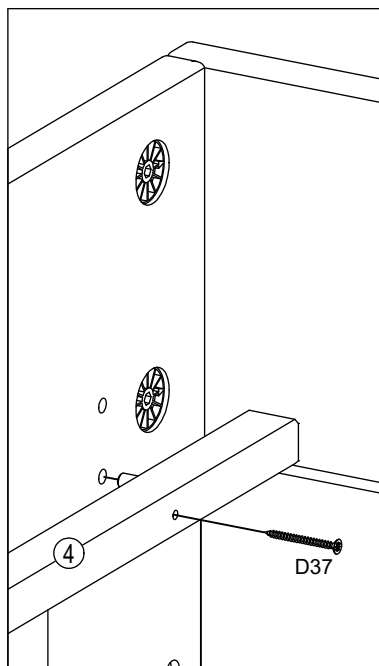


6A


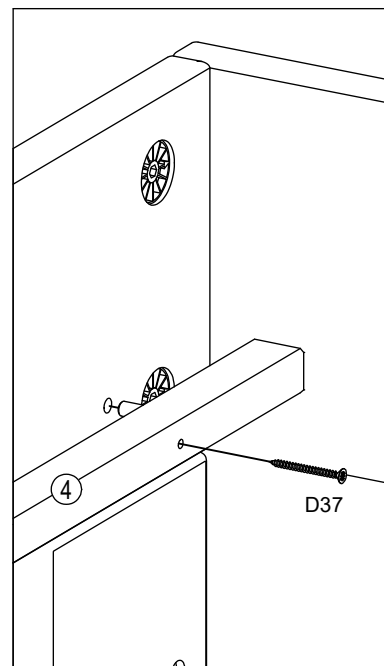


6B


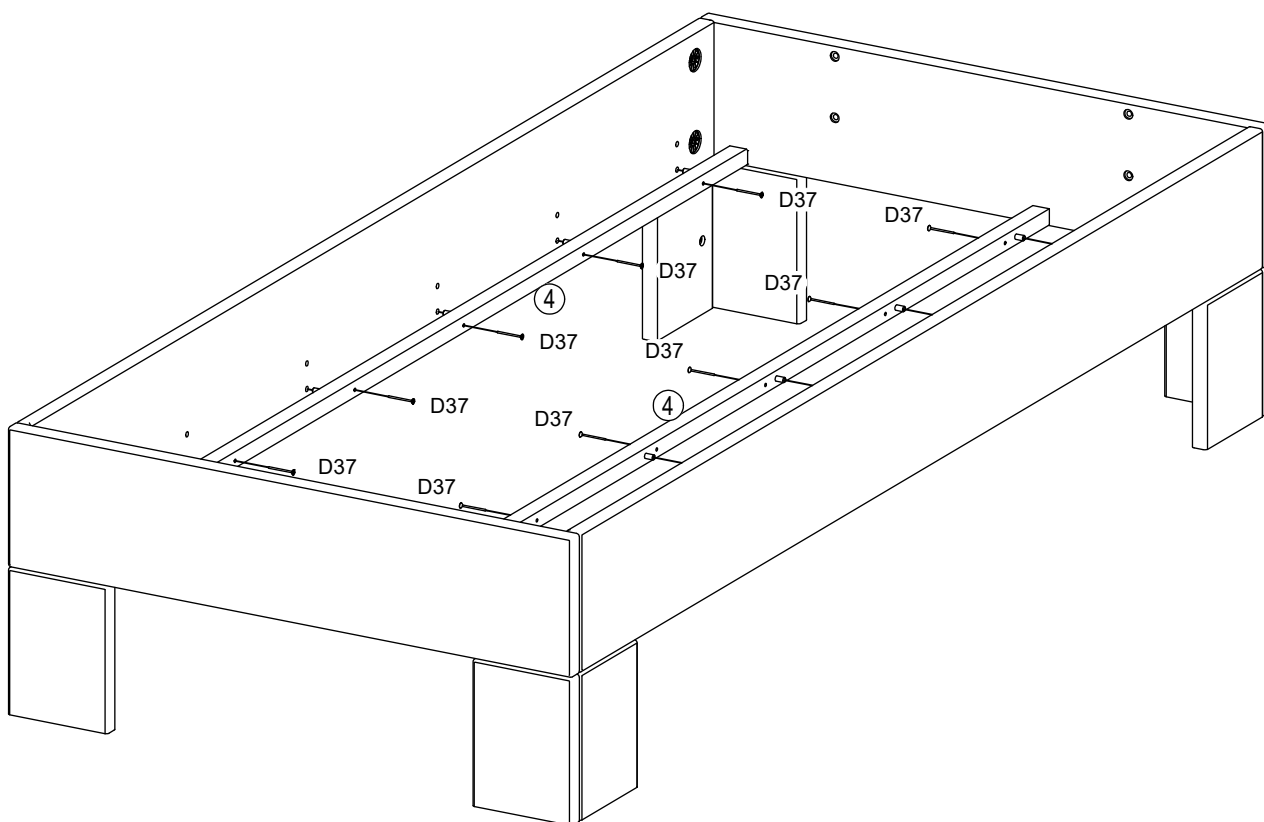


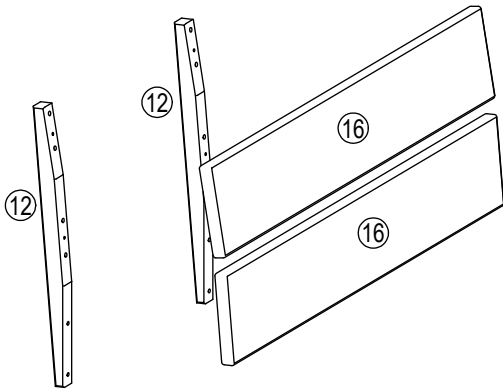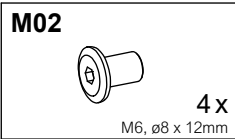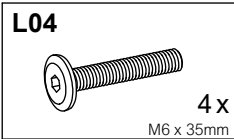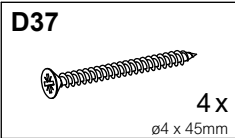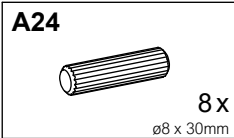

7

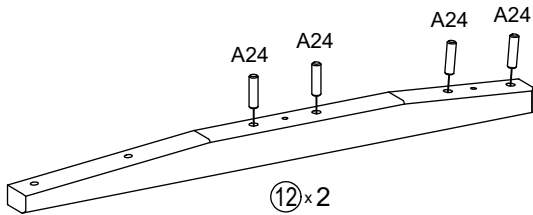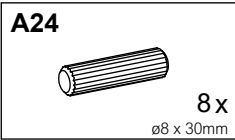

8

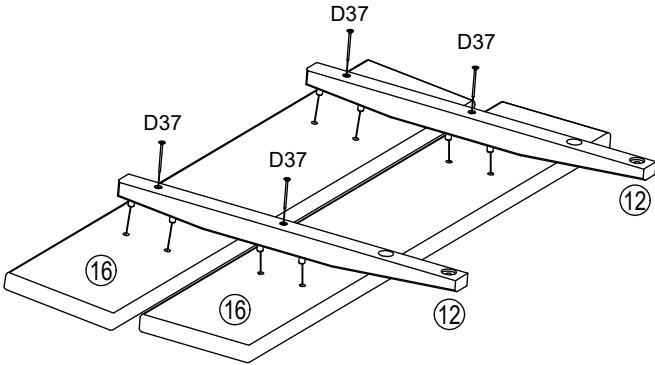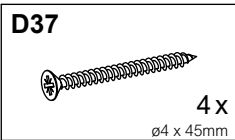

9

