

(D) Aufbauanleitung

(NL) Handleiding voor de Montage

(PL) Instrukcja montażu

(SK) Montážny návod

(RO) Instrucțiuni de asamblare

(GB) Assembly Instruction

(TR) Montaj Talimatları

(CZ) Shromazďování instrukce

(I) Istruzioni per il montaggio


(F) Instructions de montage

(RU) Инструкция по монтажу






(H) Gennyesevés utasítások

Nizza






Polsterbett-Gestoffteerde bed-Tapicerowane łóżko-Tapițate pat-Upholstered bed-Мякая крэват-яатак капітоне-Letto imbottito-Lit rembourré
Čalouněná postele Čalouněné postele kárpitovaný ágy

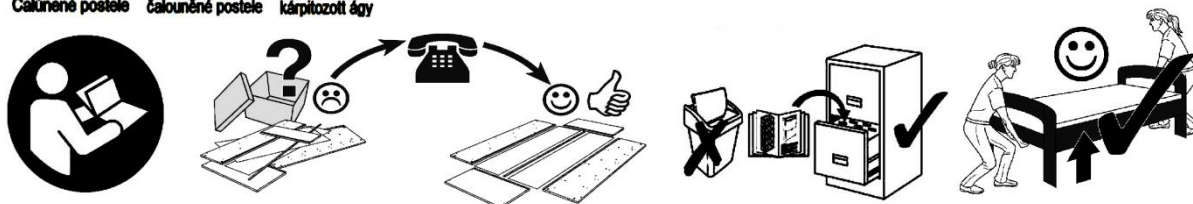






90 cm

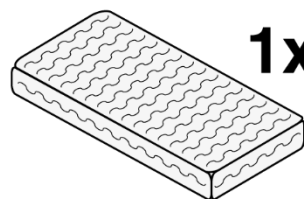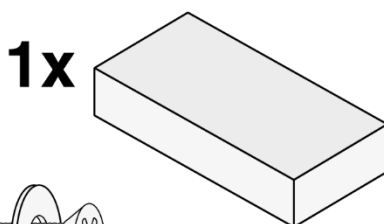
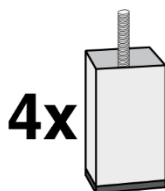
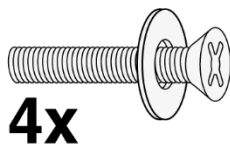
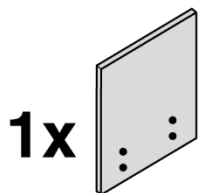


140 cm

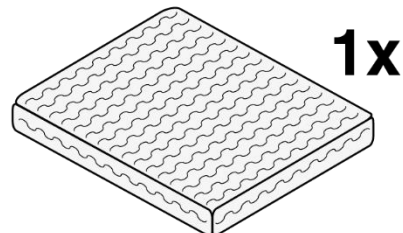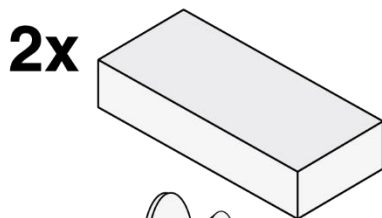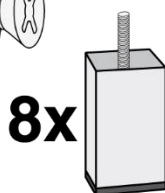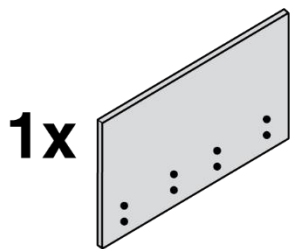

180 cm

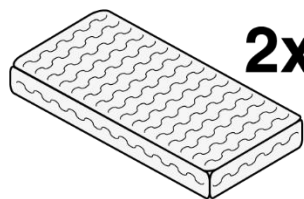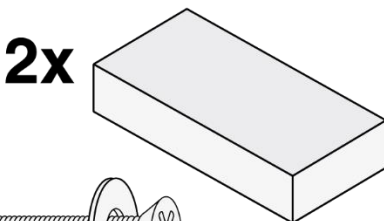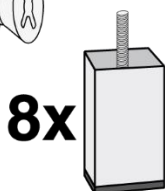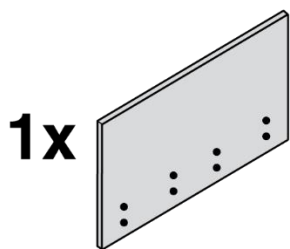

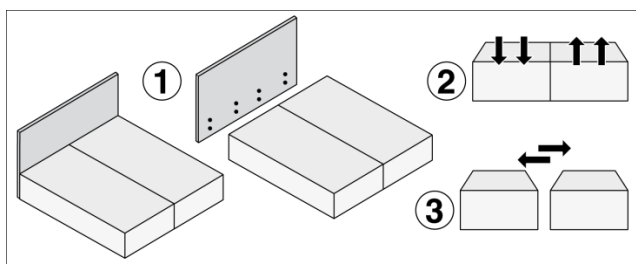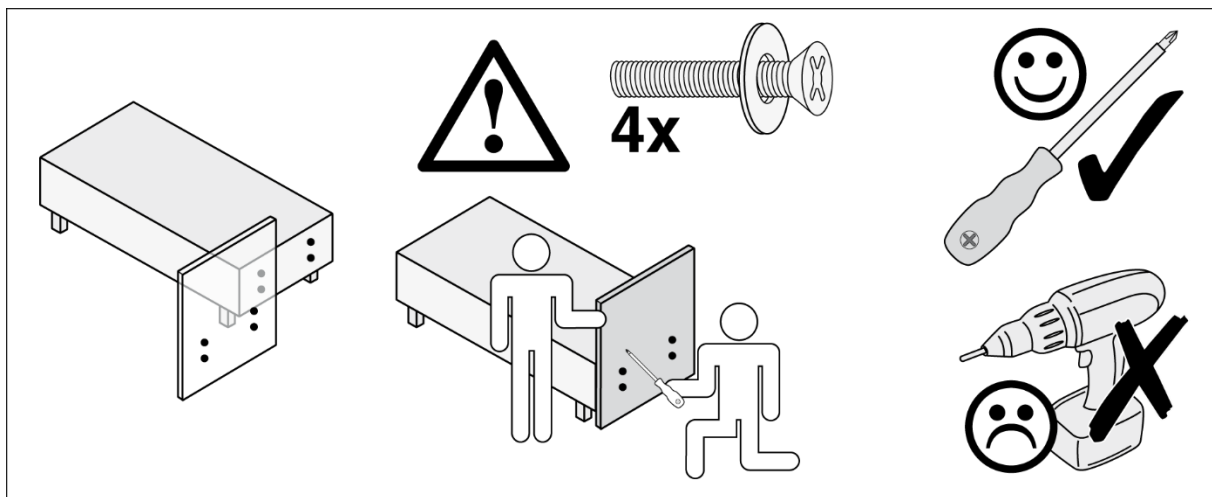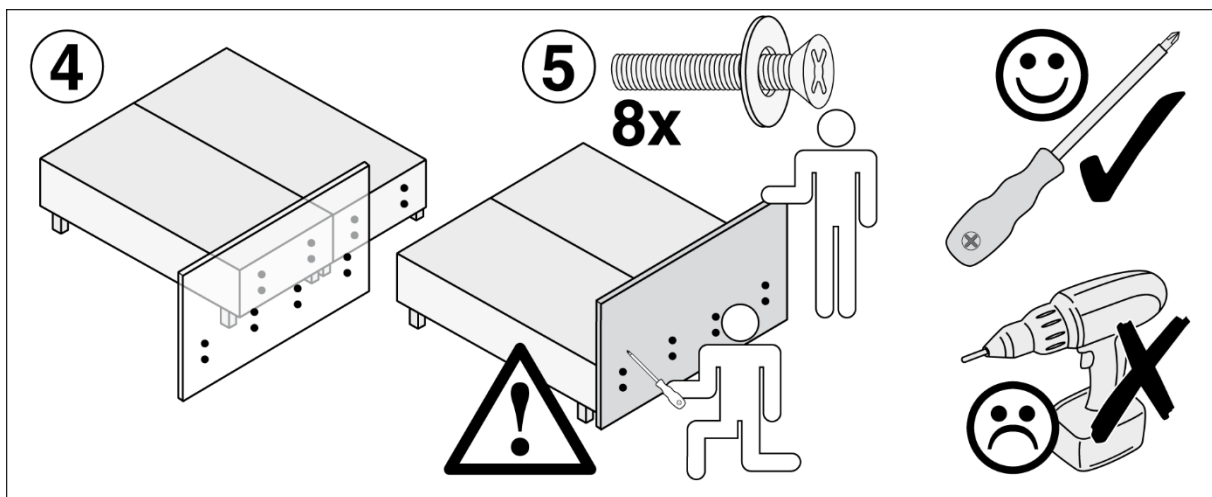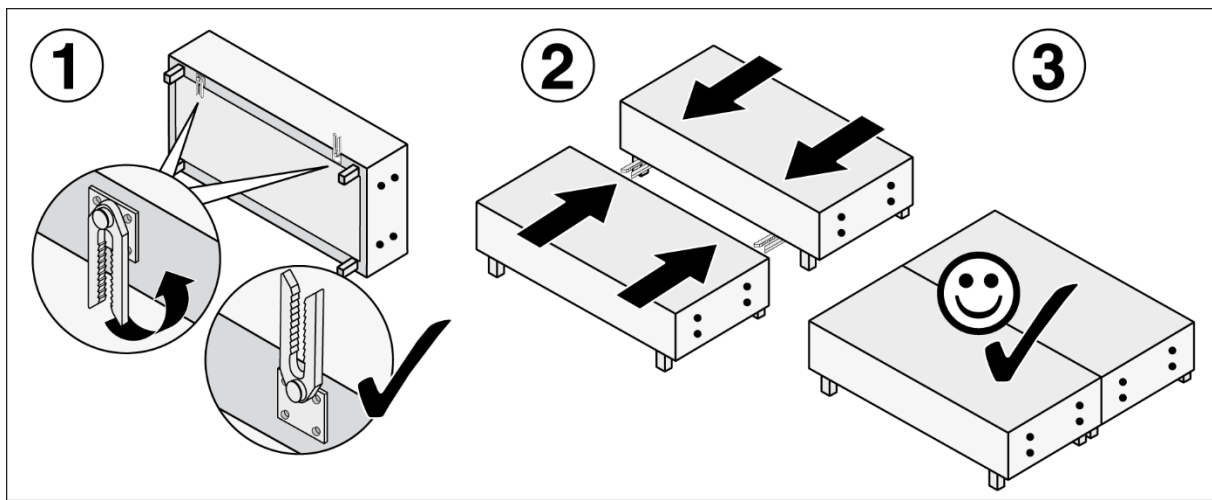

WESTFALIA®
Polsterbetten

Made in Germany

Elastoflex GmbH
Löhner Str. 123
32584 Löhne / Germany