

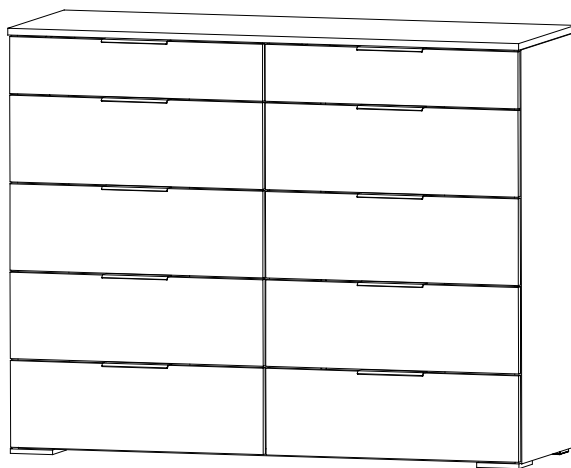
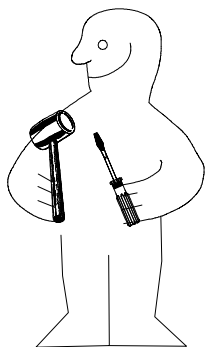
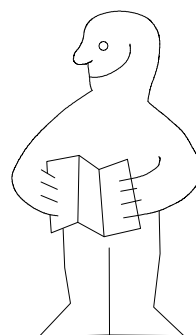














980184

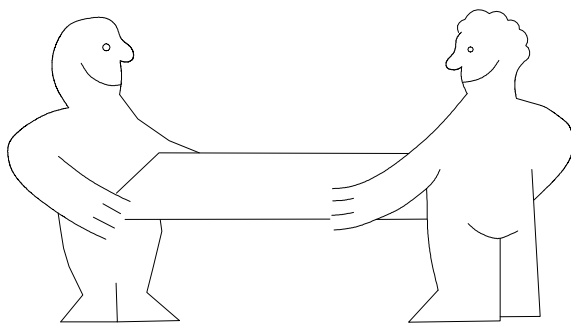

804

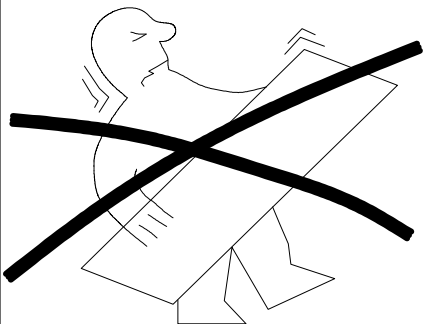

1-2-3-4... ○ ○




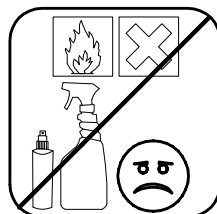
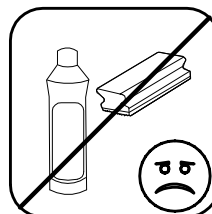
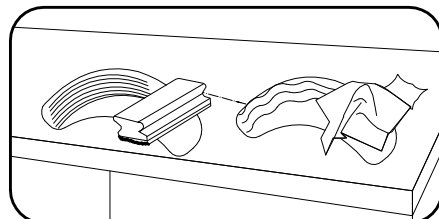
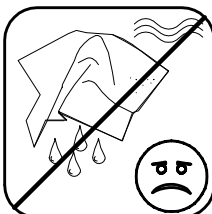
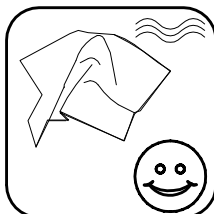
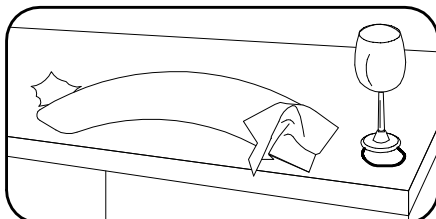
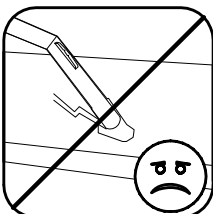
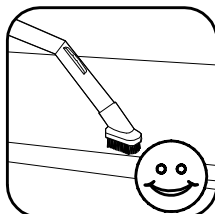
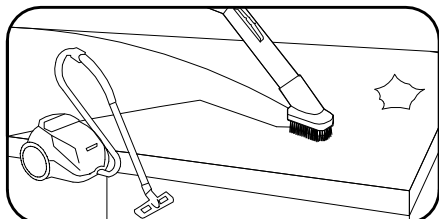
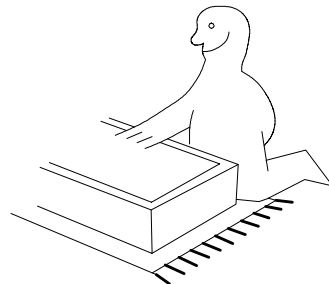
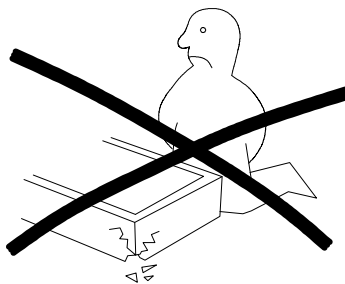
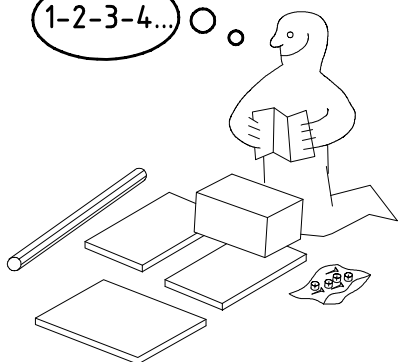


980184



09.06.15 / 31.07.17




07 17











1/10

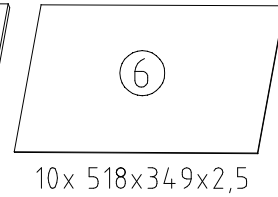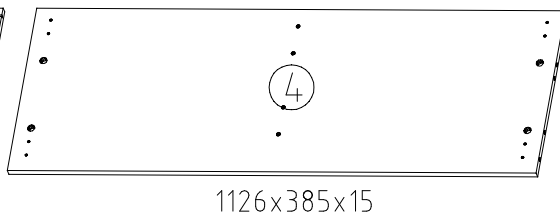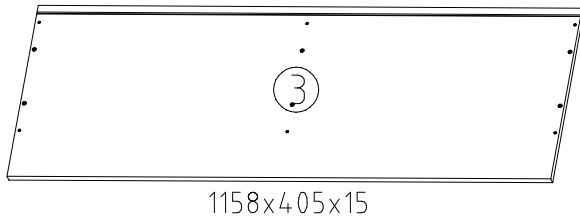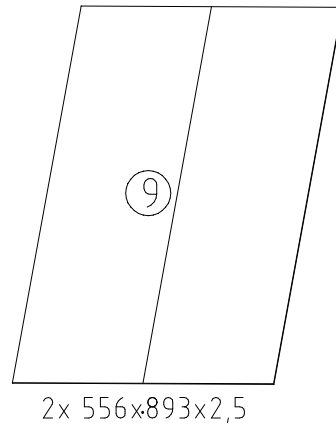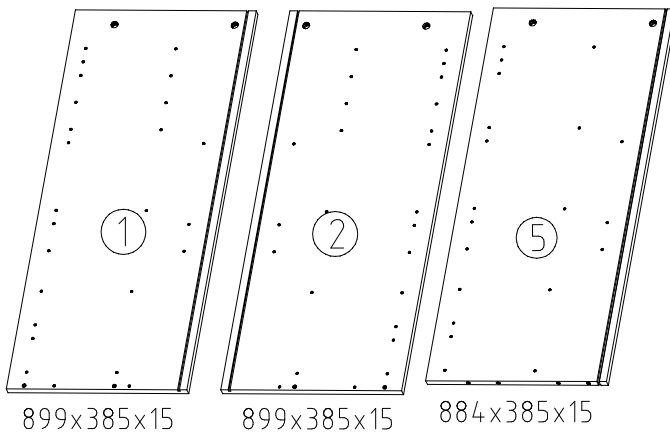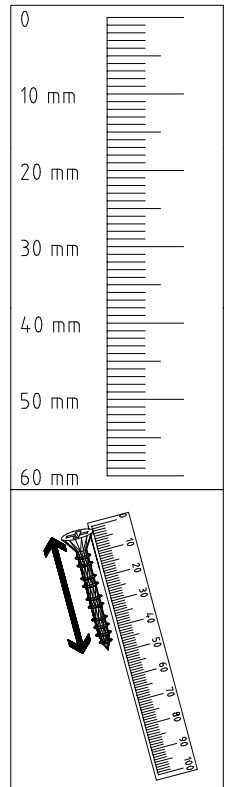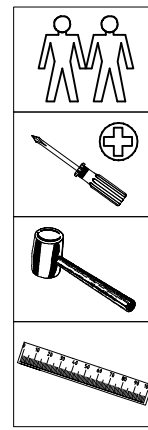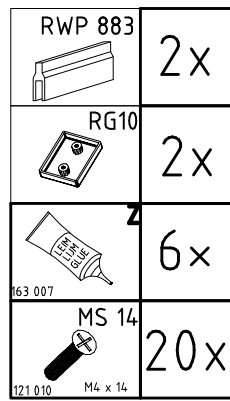
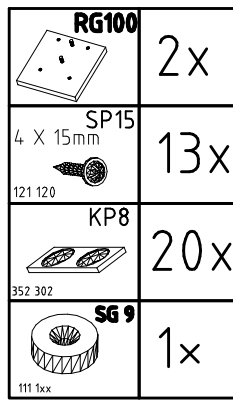
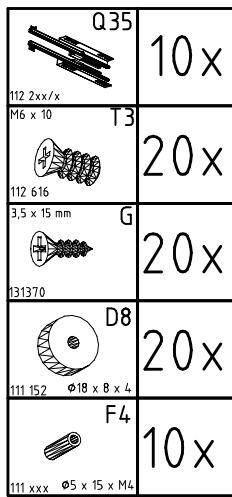
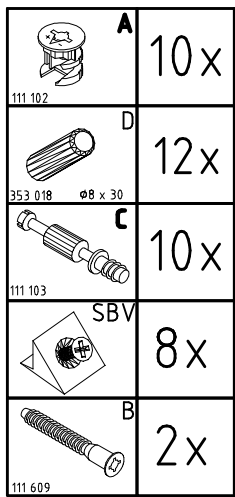


1.

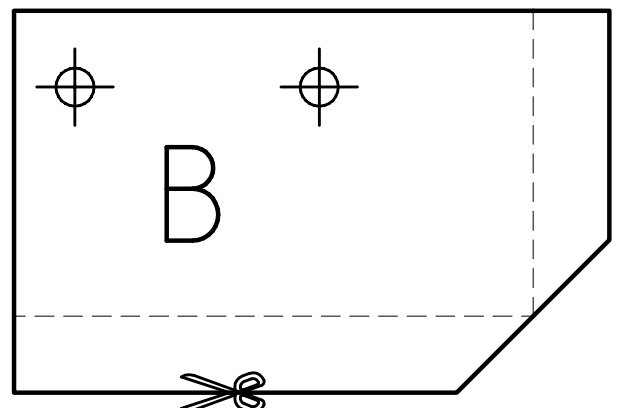
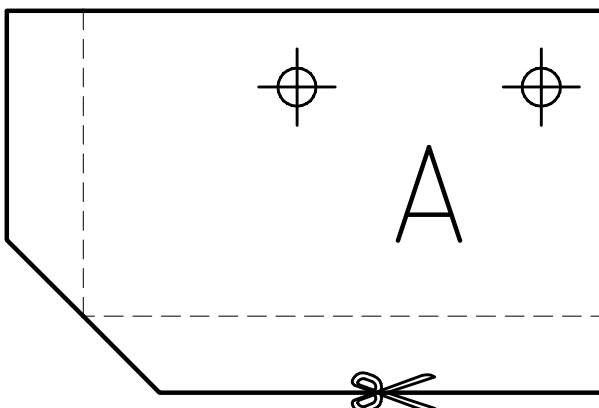


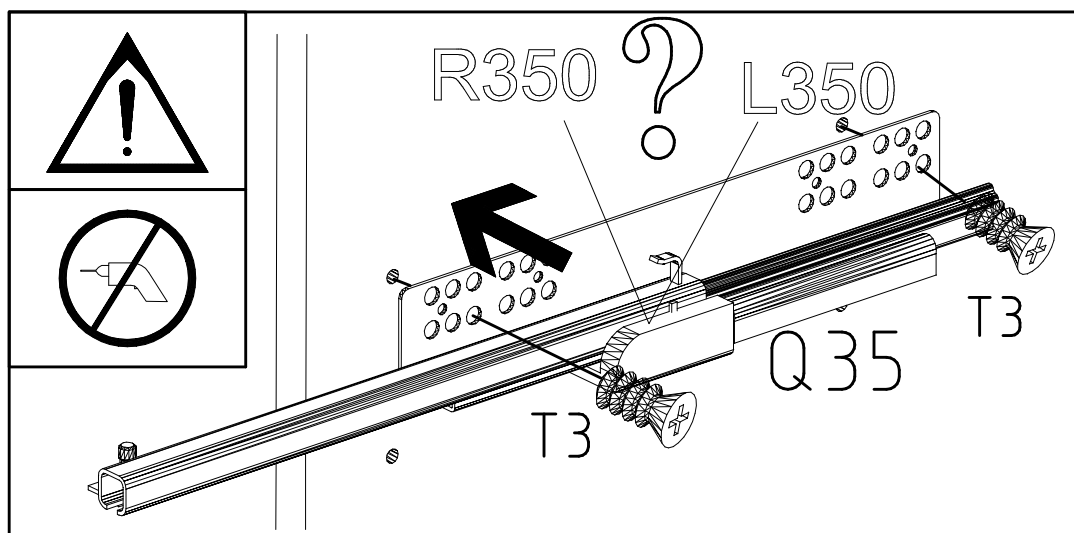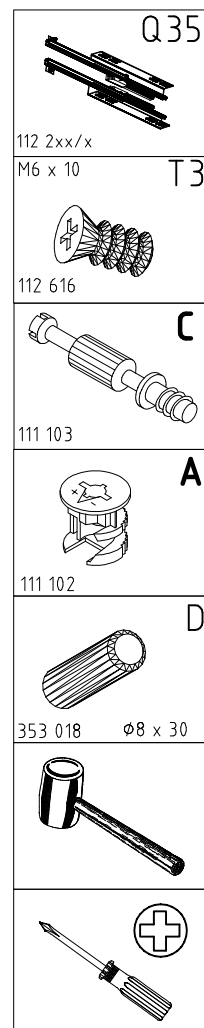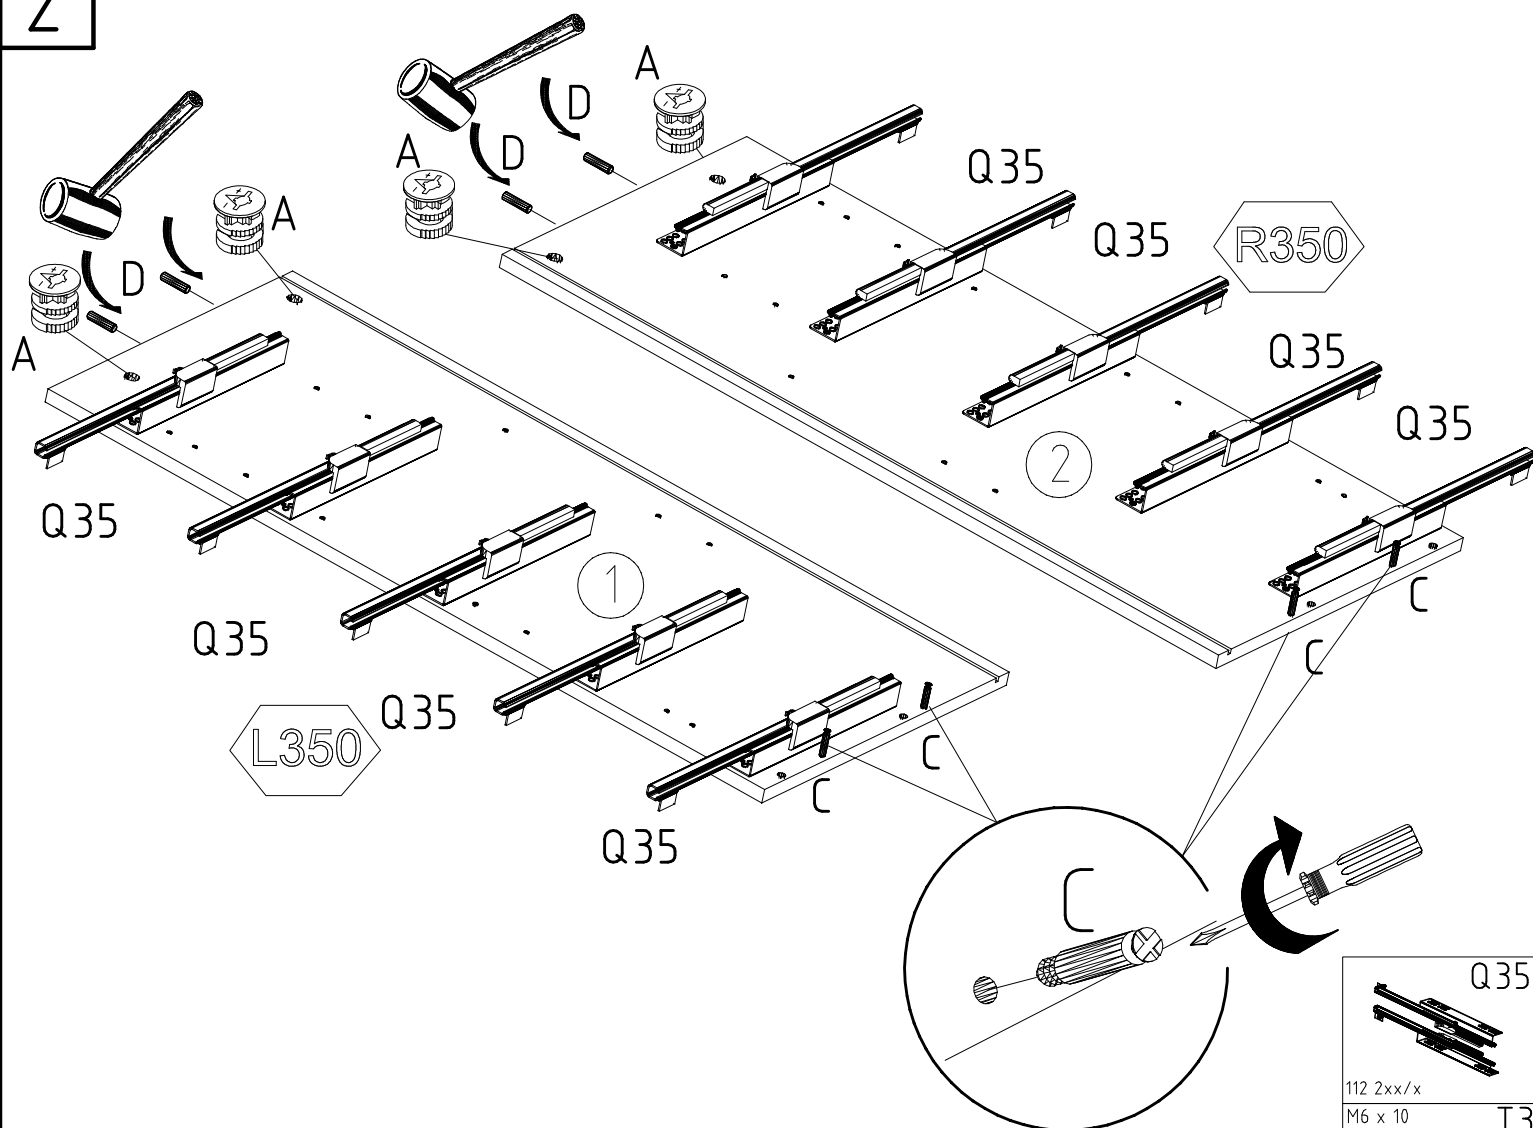

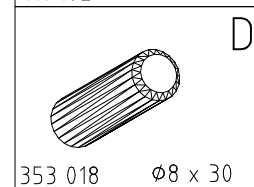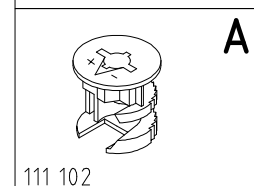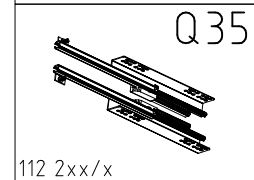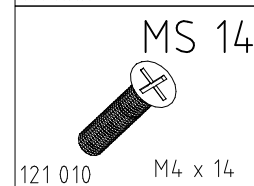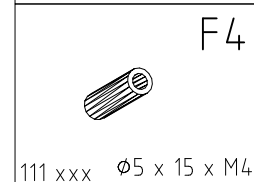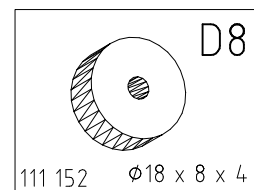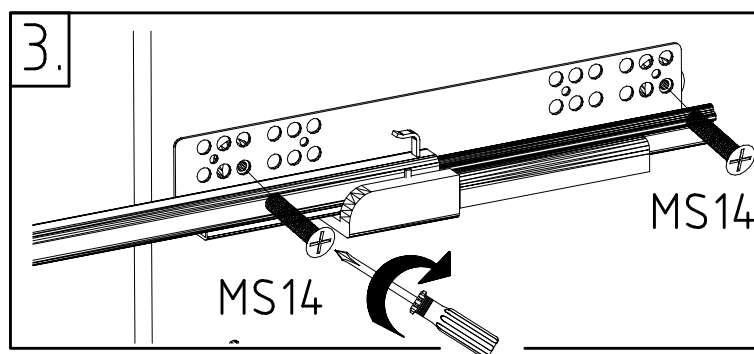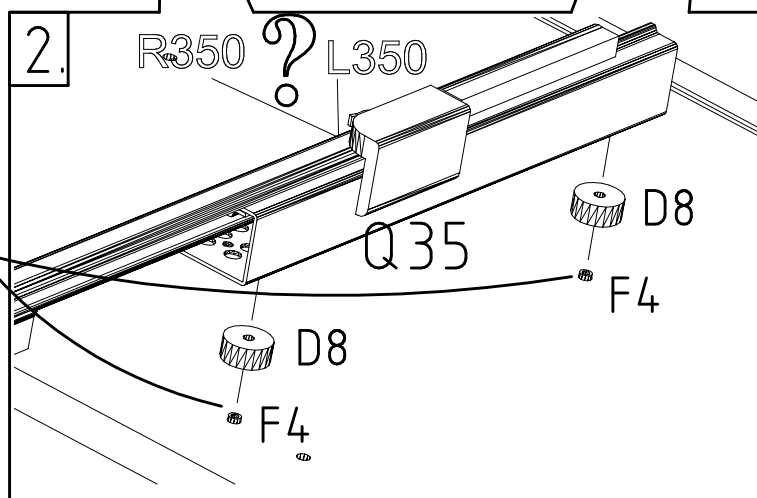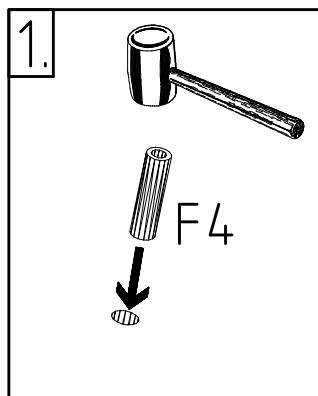
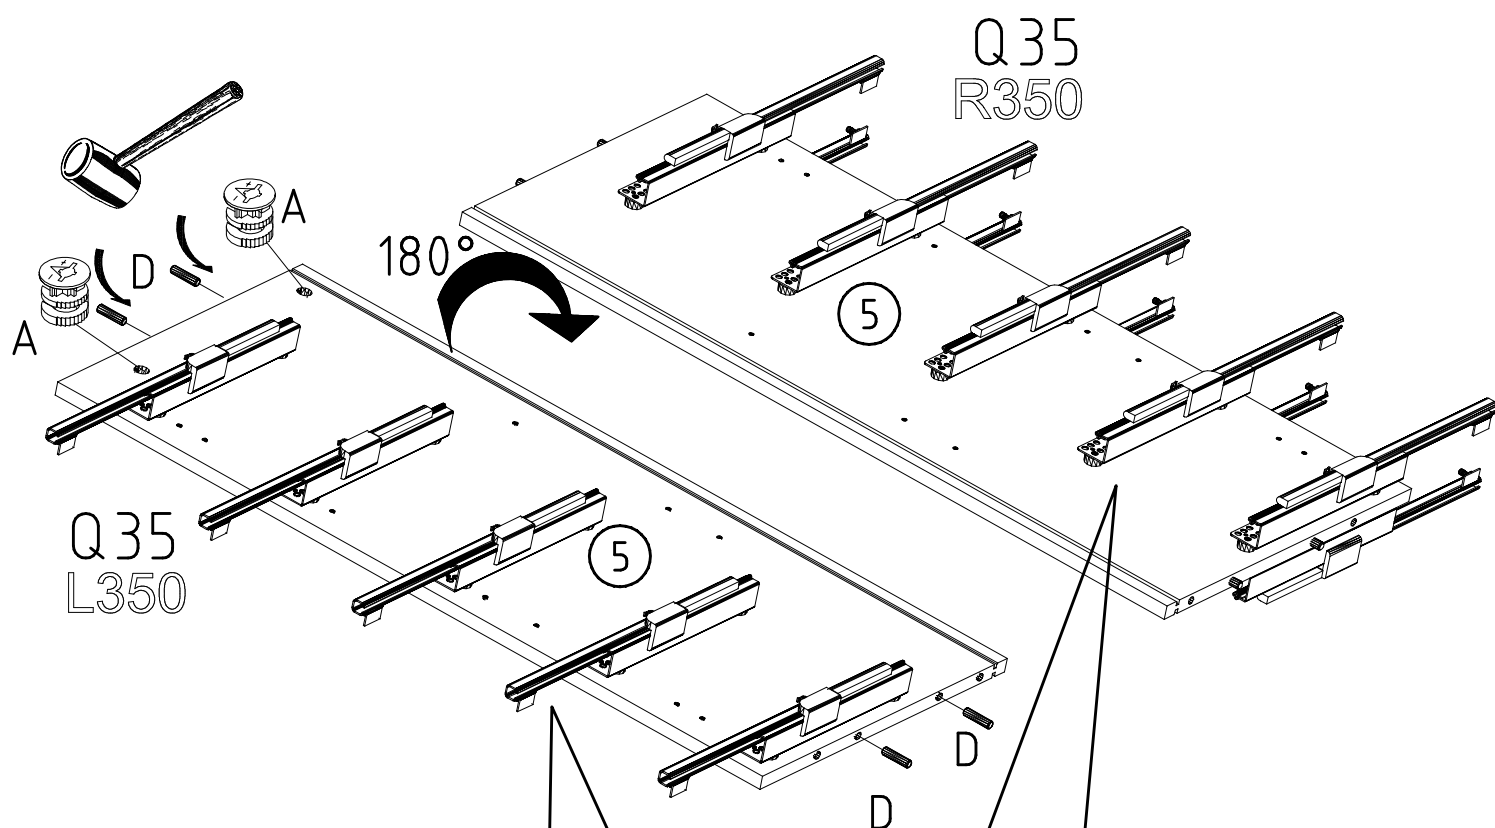


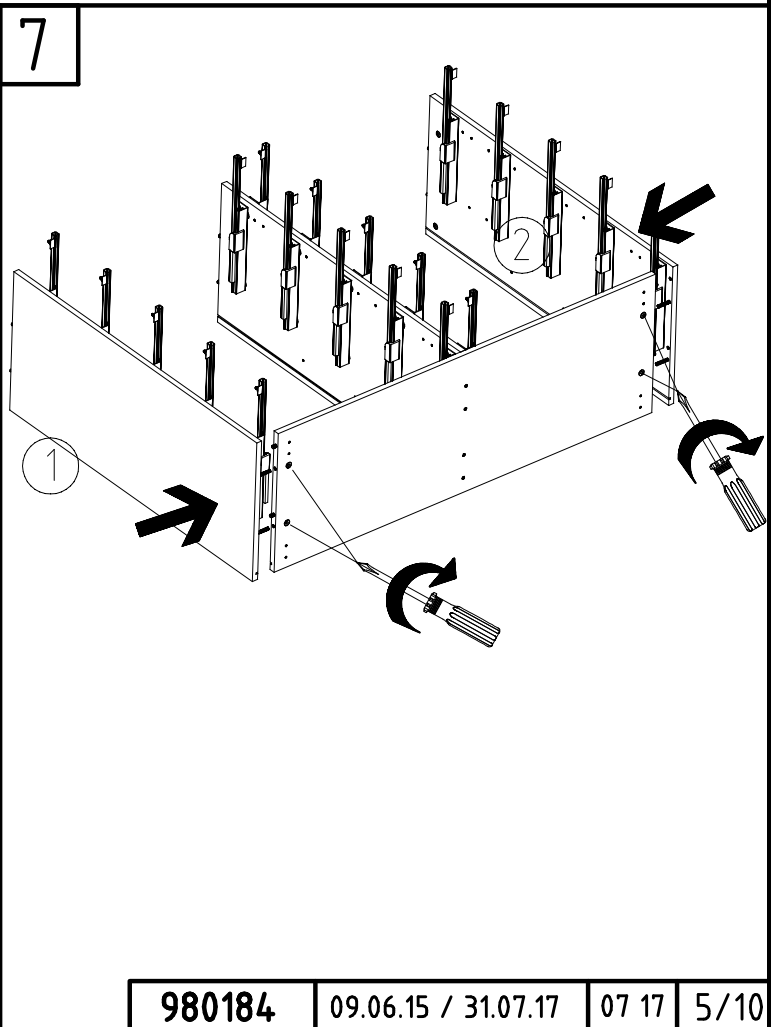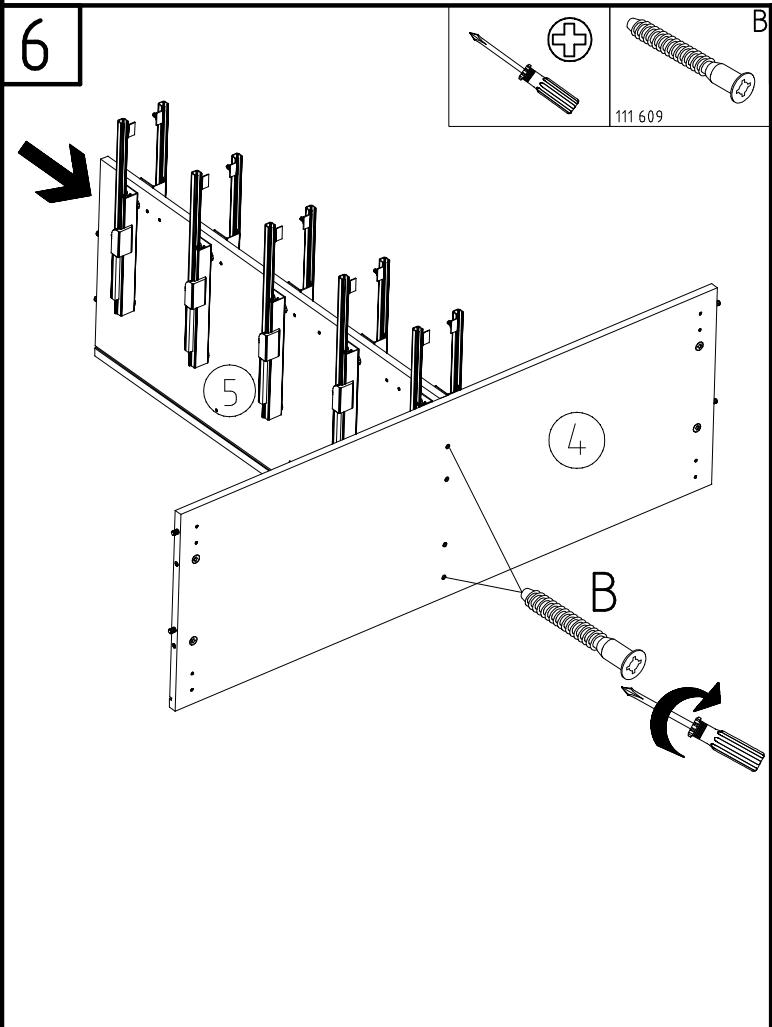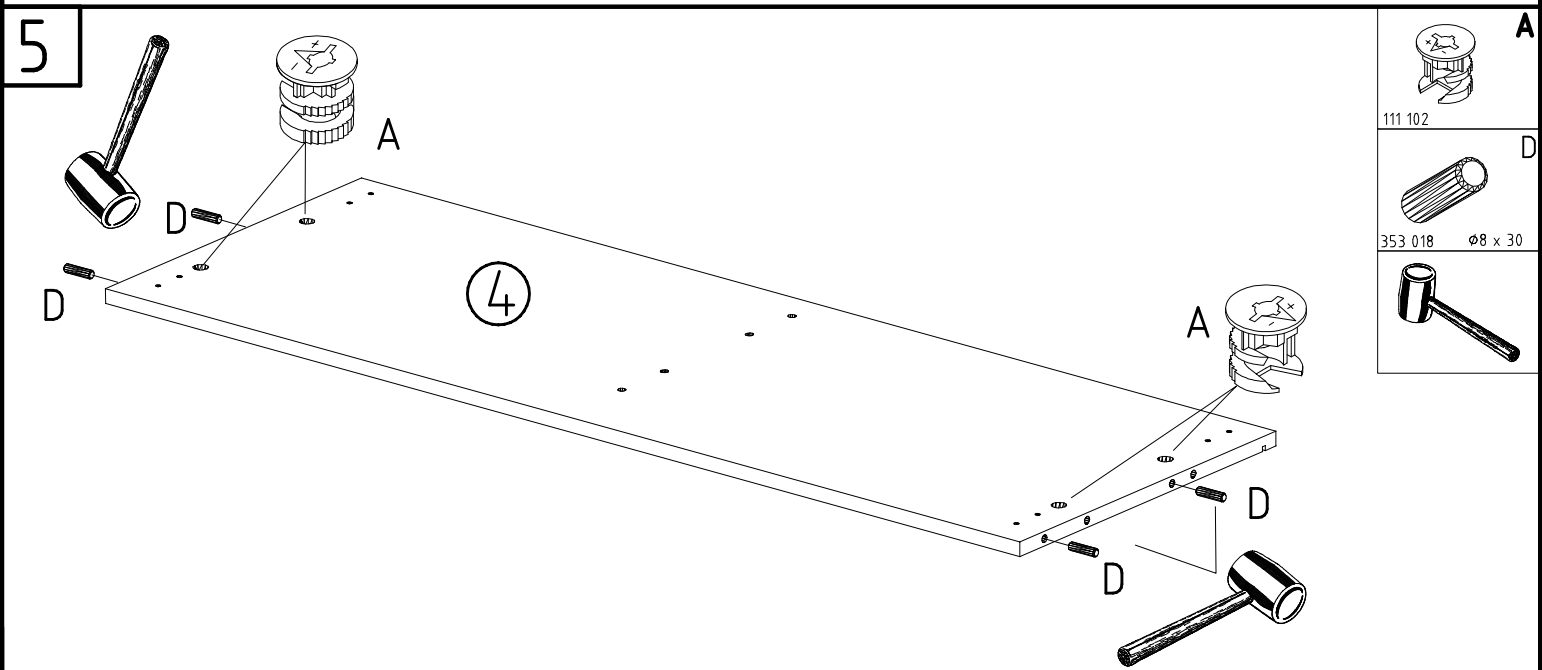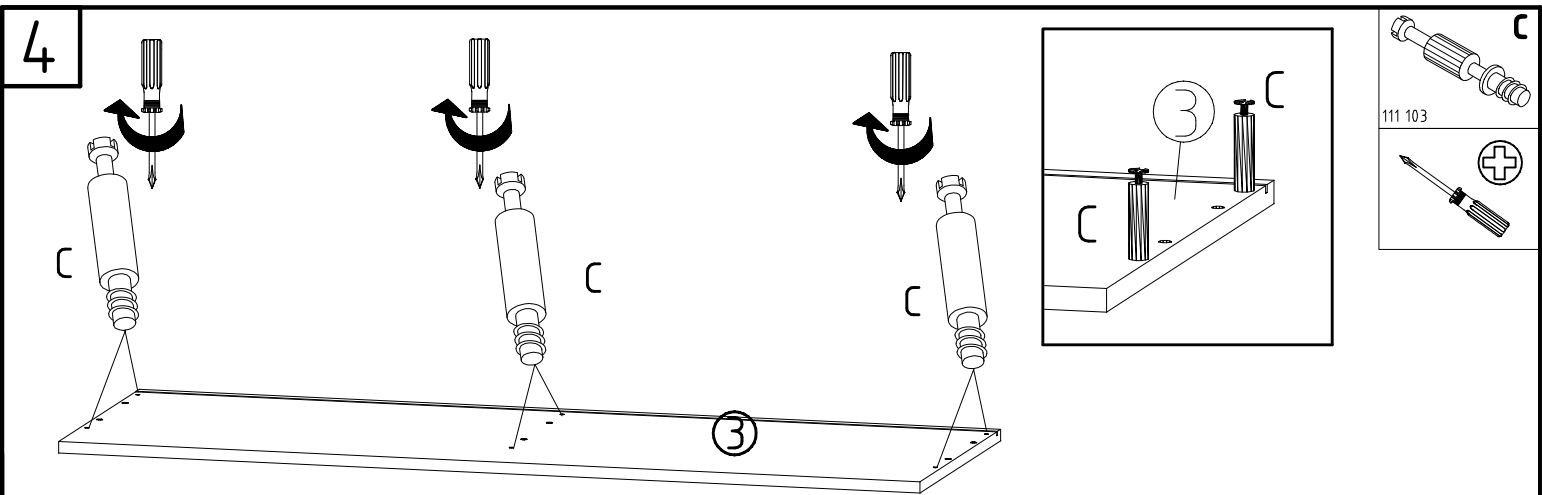




8

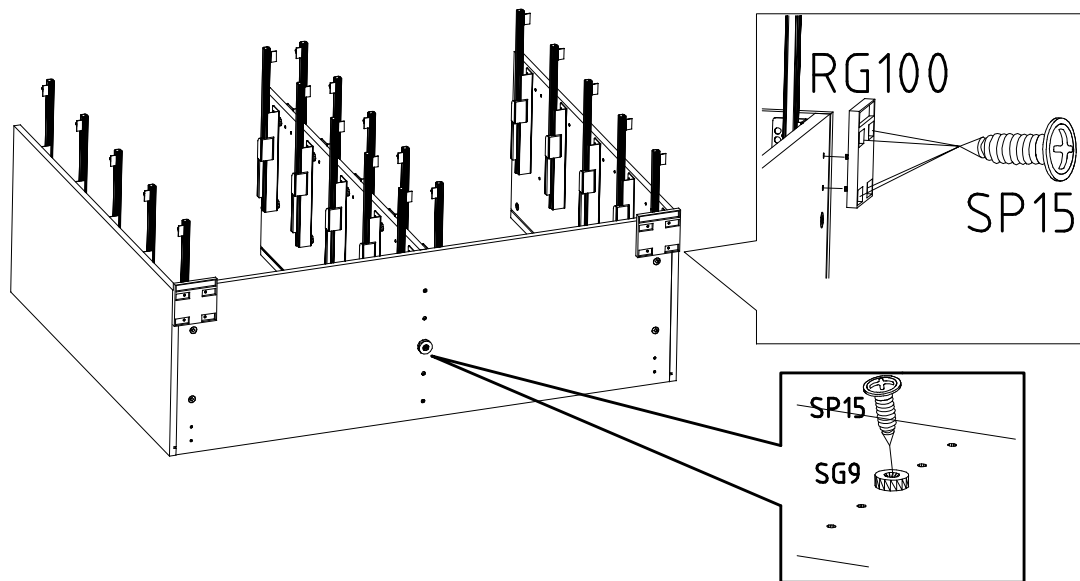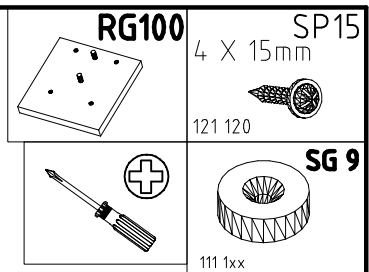



9

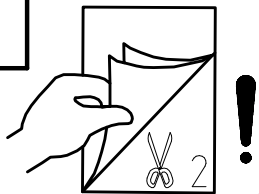


10

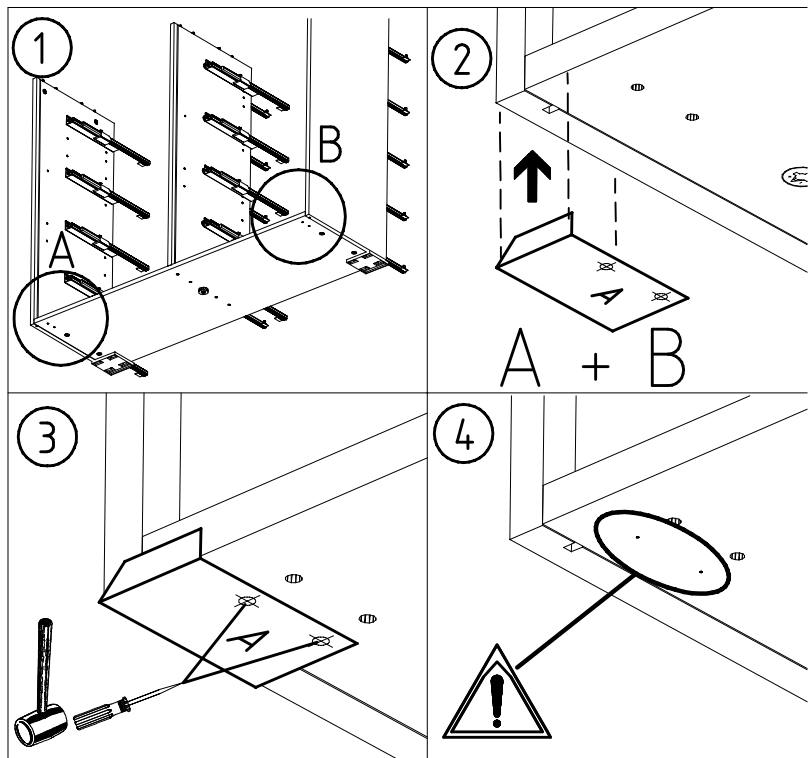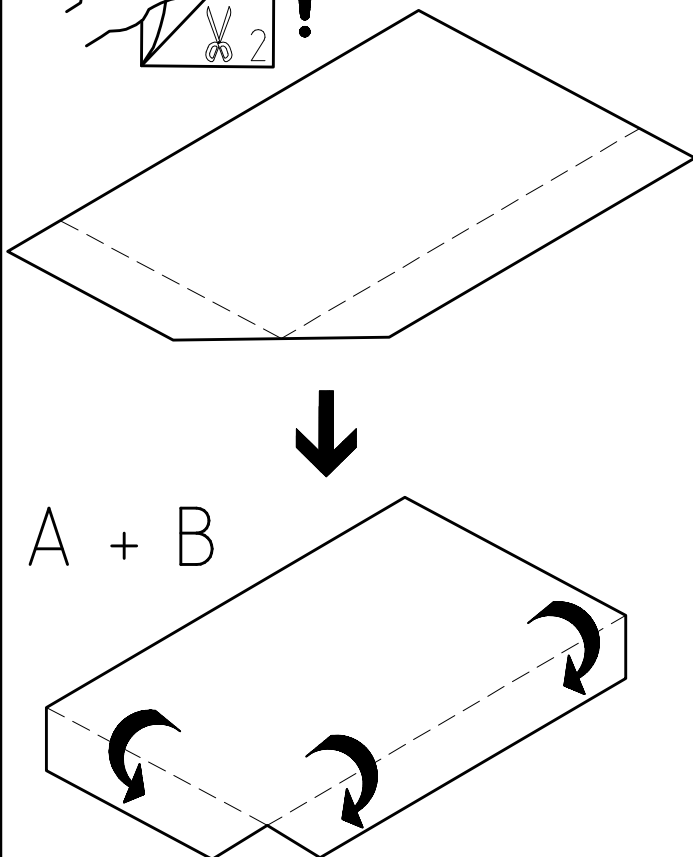


11

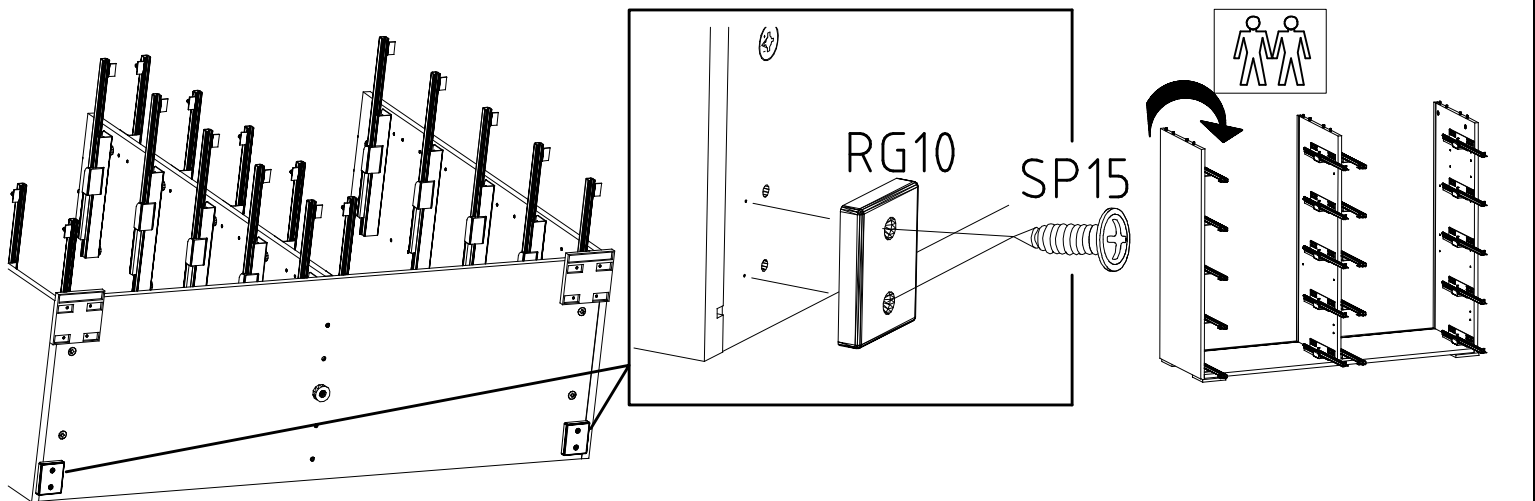


12

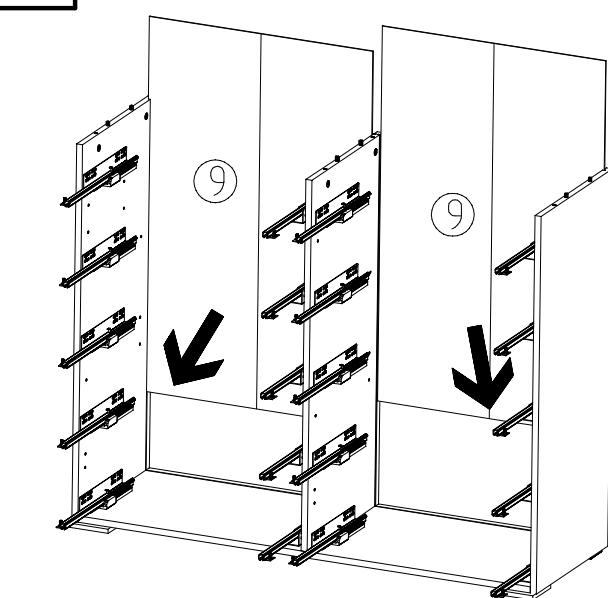

13

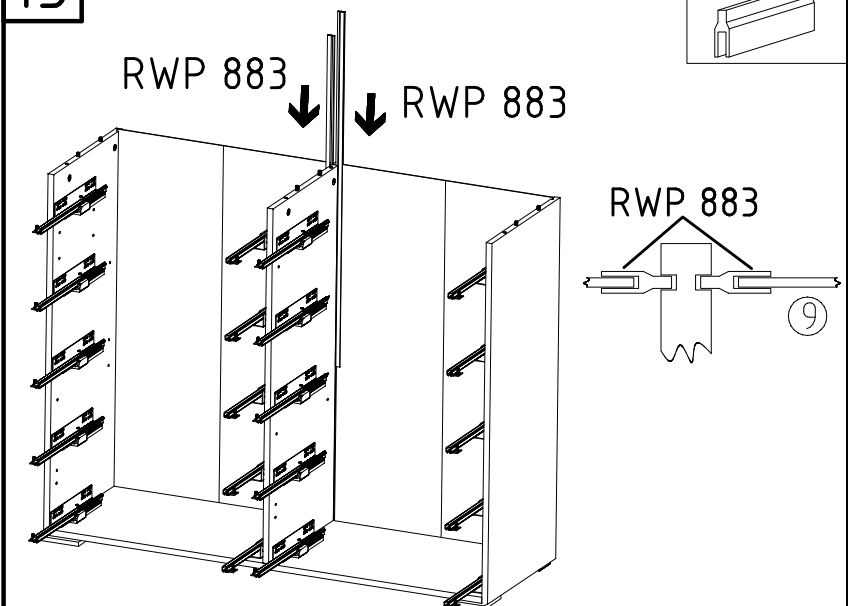

14

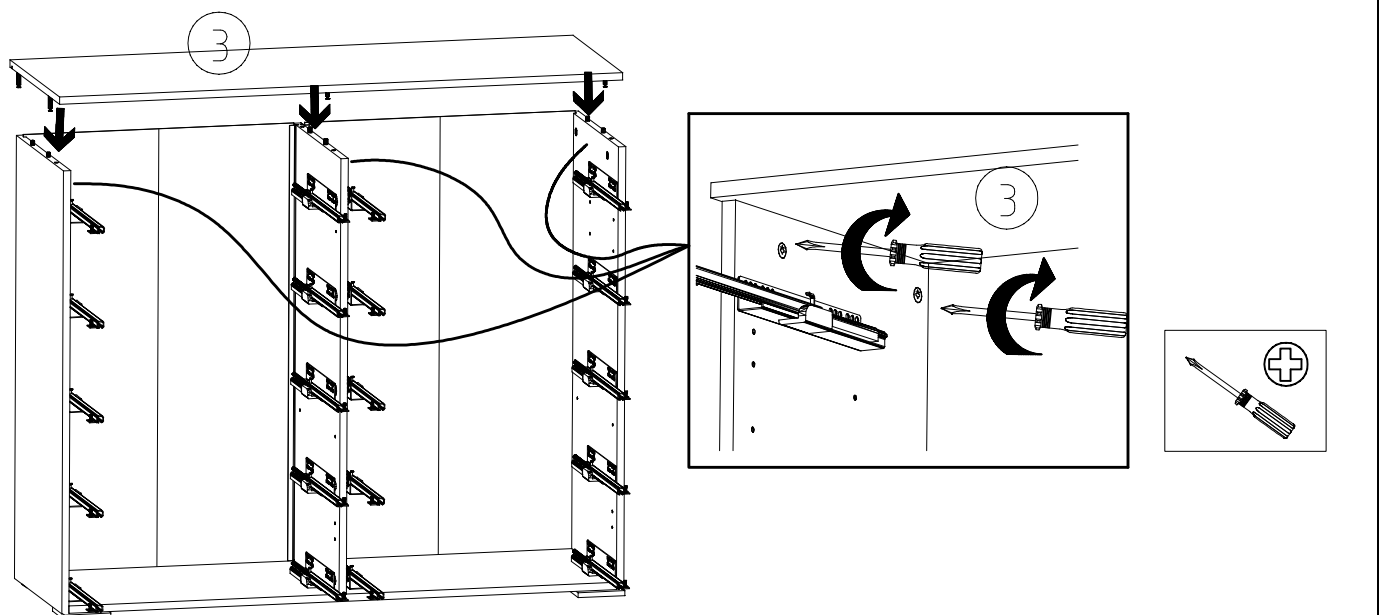


16

Z L0

3 x 13 mm G21

121 113


The diagram illustrates the installation of a shelf (Z L0) into a cabinet. The shelf is shown being inserted into a pre-drilled slot. A screwdriver is used to tighten the G21 screws, which are 3 x 13 mm in size. The distance from the shelf edge to the screw is marked as 'x'. The shelf is labeled 'Z L0' and the screws are labeled 'G21'. The part number 121 113 is also indicated.

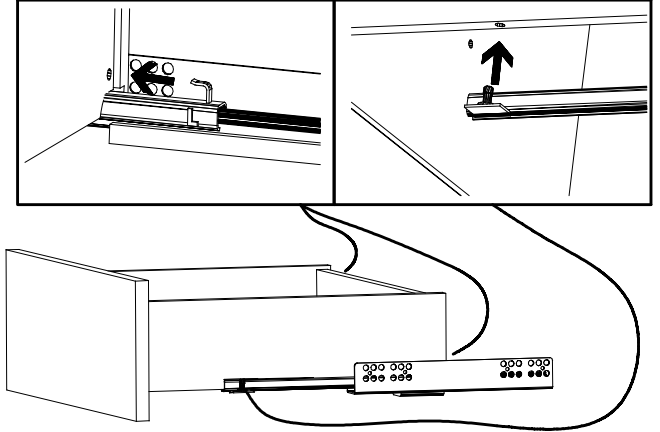

1

KP 8

2




KP 8




KP8





352 302

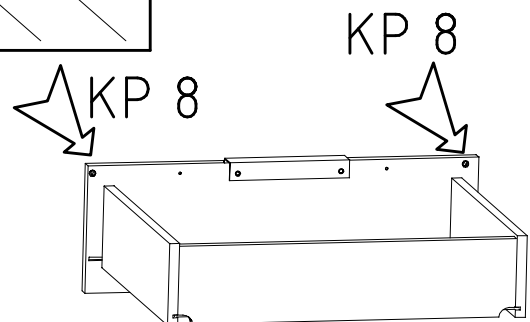



19

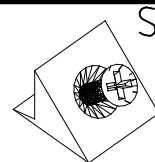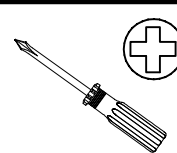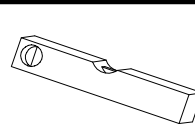




SBV

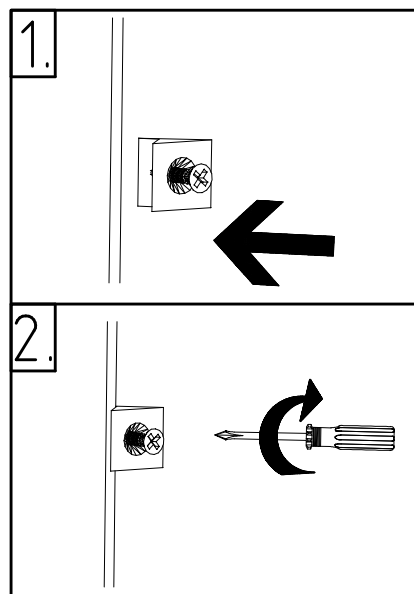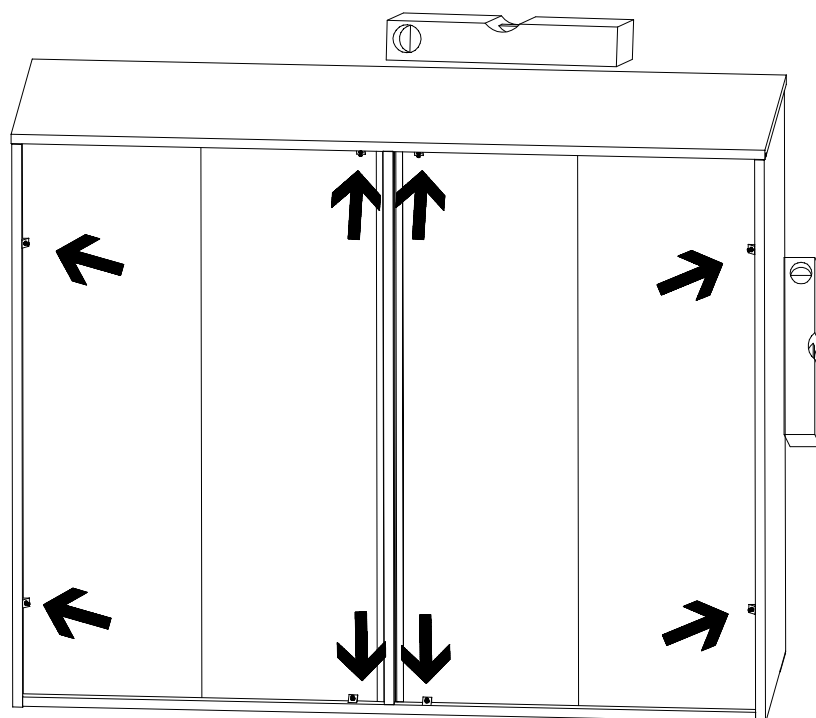




20

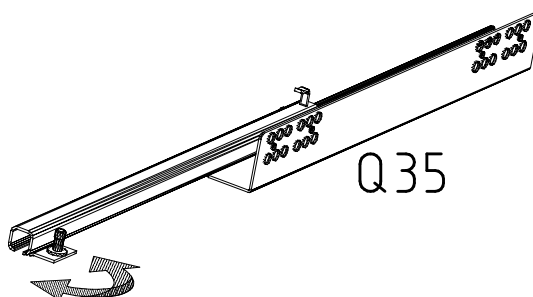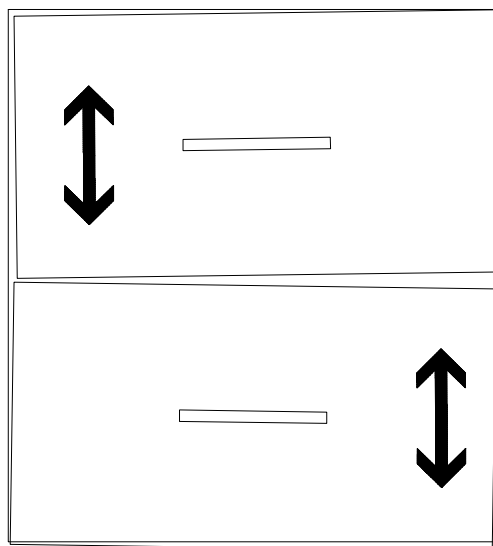

Q35

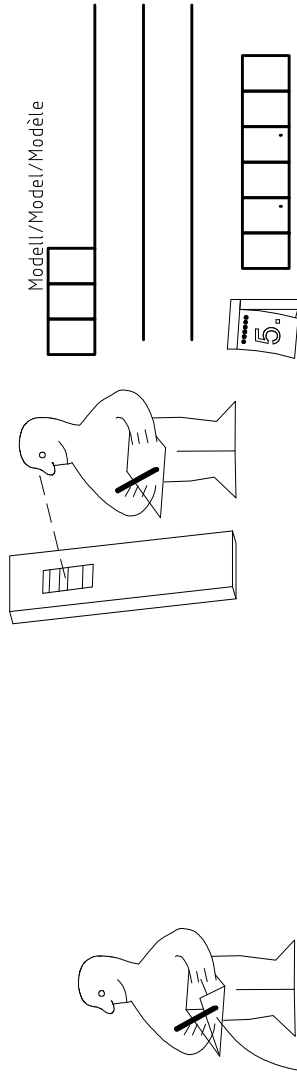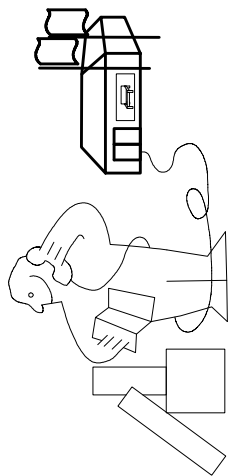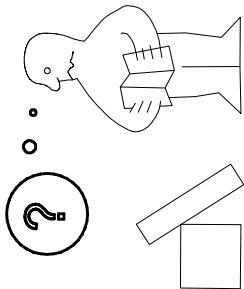

Modell/Model/Modèle

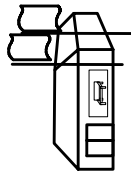

{121 370}	{ G 1 }	{4x}


Änderungen die dem technischen Fortschritt geschuldet sind behalten wir uns vor !
Bei nicht vorschriftsmäßiger und/ oder nicht fachmännischer Montage wird bei Personen- und/ oder Sachschäden keinerlei Haftung übernommen.

WIMEX Wohnbedarf/ Import Export Handels GmbH/ Postfach 1407/ 49112 Georgsmarienhütte/ Germany
Tel.:(+49) 05401 8598 72 Fax.:(+49) 05401 8598 33 Mail: service_H@wimex-online.com





104P-Nr. / 104P-No.		150X-Nr. / 150X-No.		Ausgag / Order-No. / No. de commande	
23203		30110XY			
Kunde / Customer / Client MAX MUSTERMANN					
Kommission / your order reference / votre reference 3377 MINDEN					
Dekor / Decor / Decor / Modell / Mode / Modelle F99 SAMPLE					
F99842 SCHWEBETÜREN SCHRANK 250 CM H 216CM PLANKENEICHE NB + RA STEEL PLANKENEICHE NACHBILDUNG					
202320301107241476000001					
Paket / Package / Paquet 414760					
SOCKEL					
Paket 1 von 8				Colli Kommission 10	
HSP-SMT BOD 50 TEXT/TEX SOCKEL 32 FRESH TV / LF SO-BOD TEXT RASTEX / ZNBOD D18MM TX KLSTA 104					
Montage - Anleitung					
KS-64		Laenge 520,0		OBEN	
SOCKEL32 KLEB		Breite 568,0		OBEN	














OBEN 5 30/19 HAUT 23.08.19

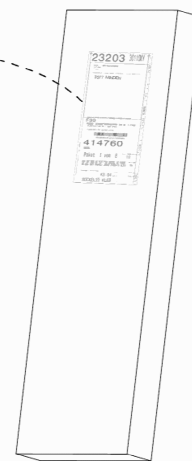


WIMEX Wohnbedarf Import Export Handelsges mbH & Co. KG Werner-von-Siemens-Str. 35 D-49124 Georgsmarienhütte - Germany	
SAMPLE Modellname Model	23.08.19 Produktionsdatum Date of manufacture

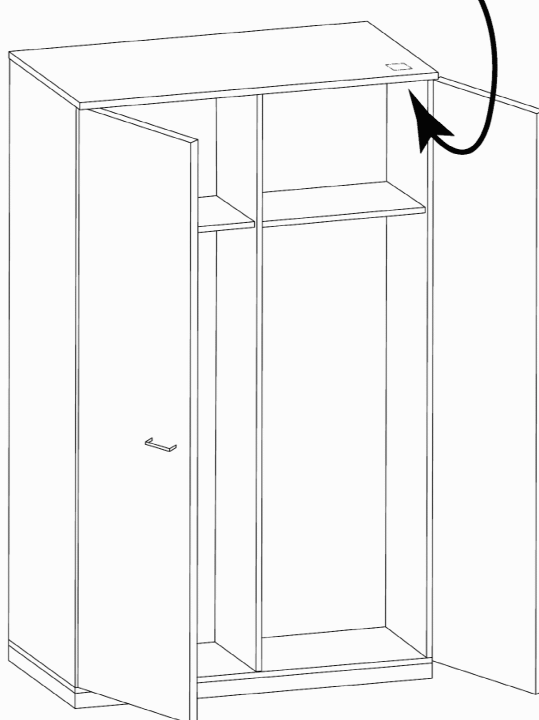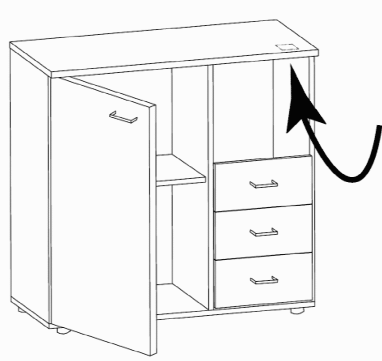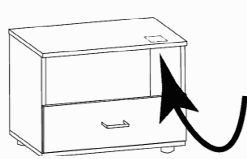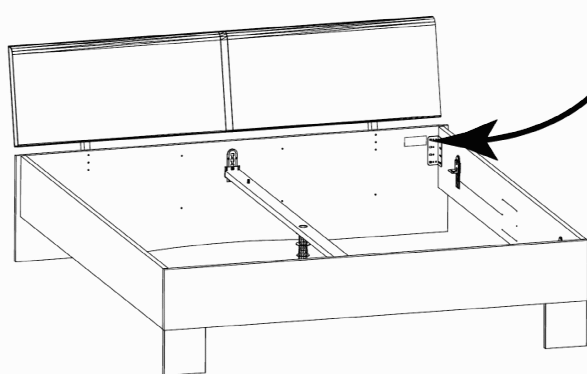





980505

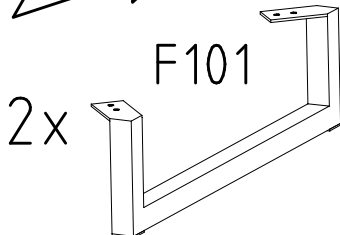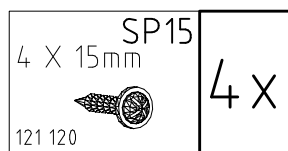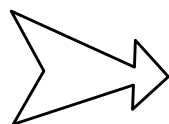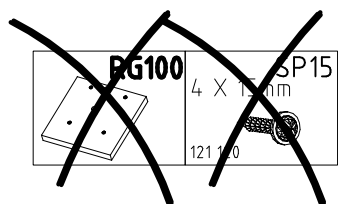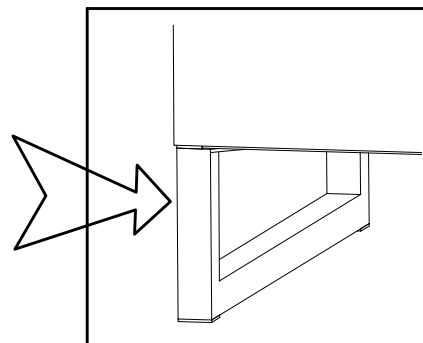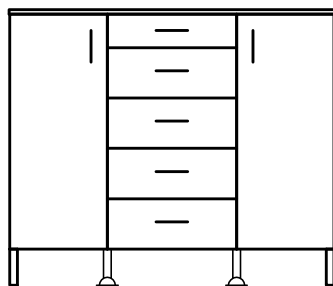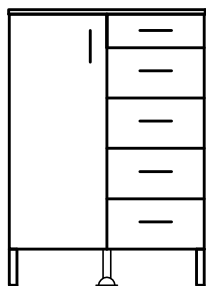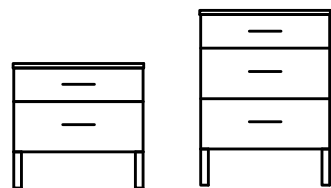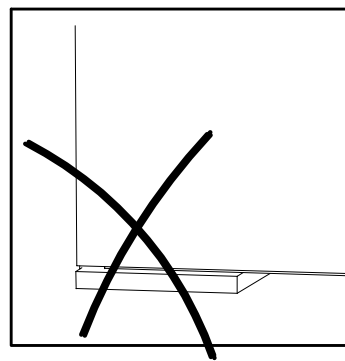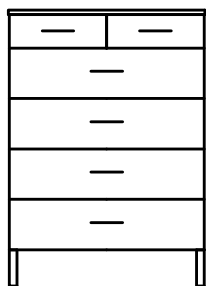
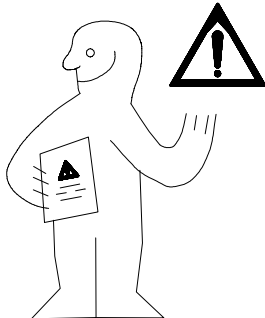


	1x 2x
	1x 2x
	3x 6x




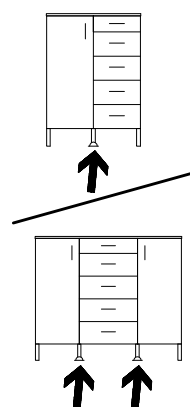


1

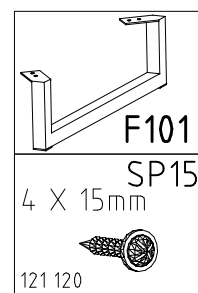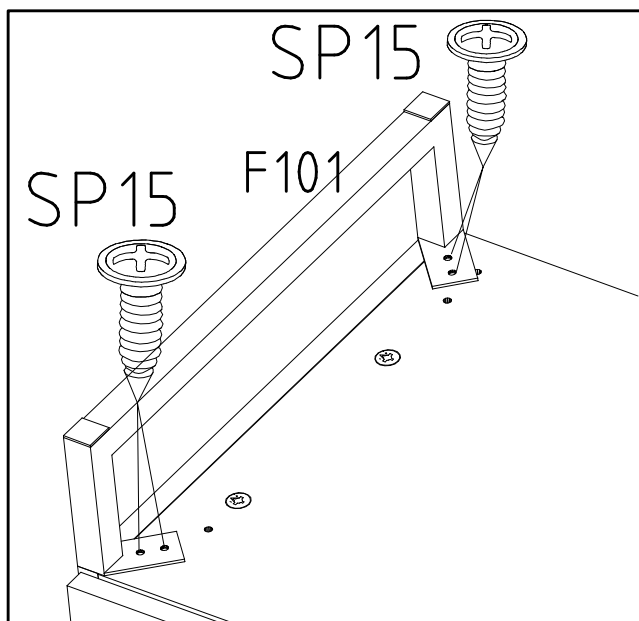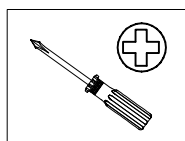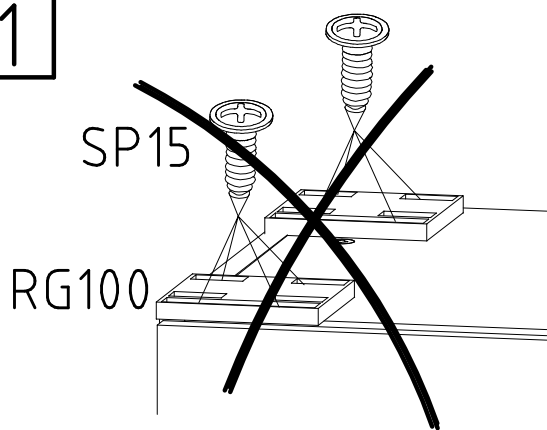

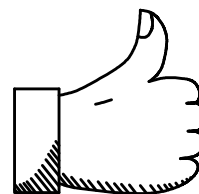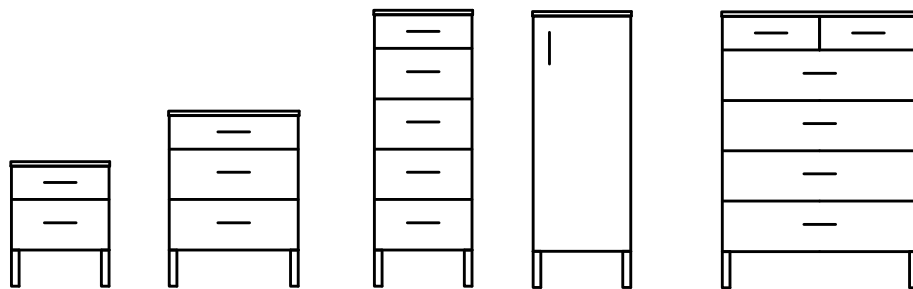

2

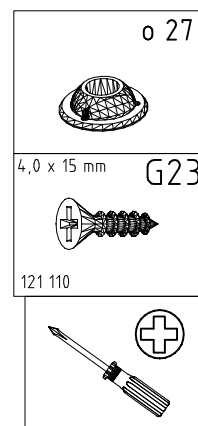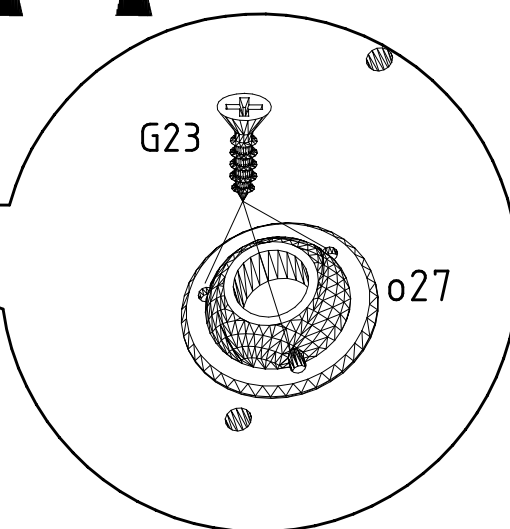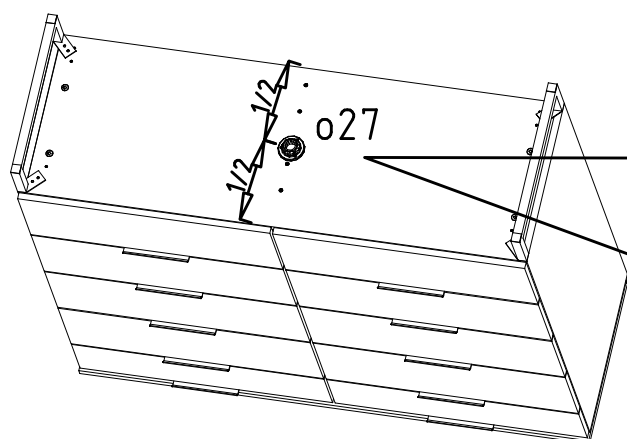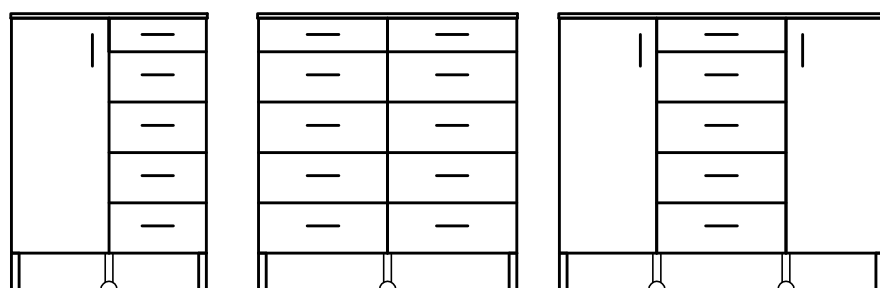

3

