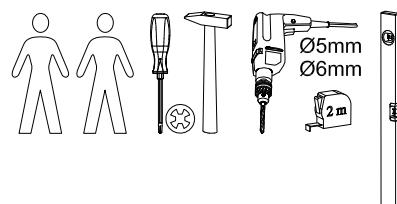

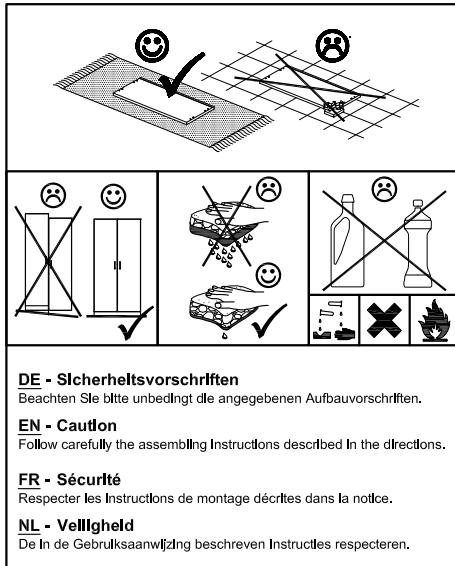
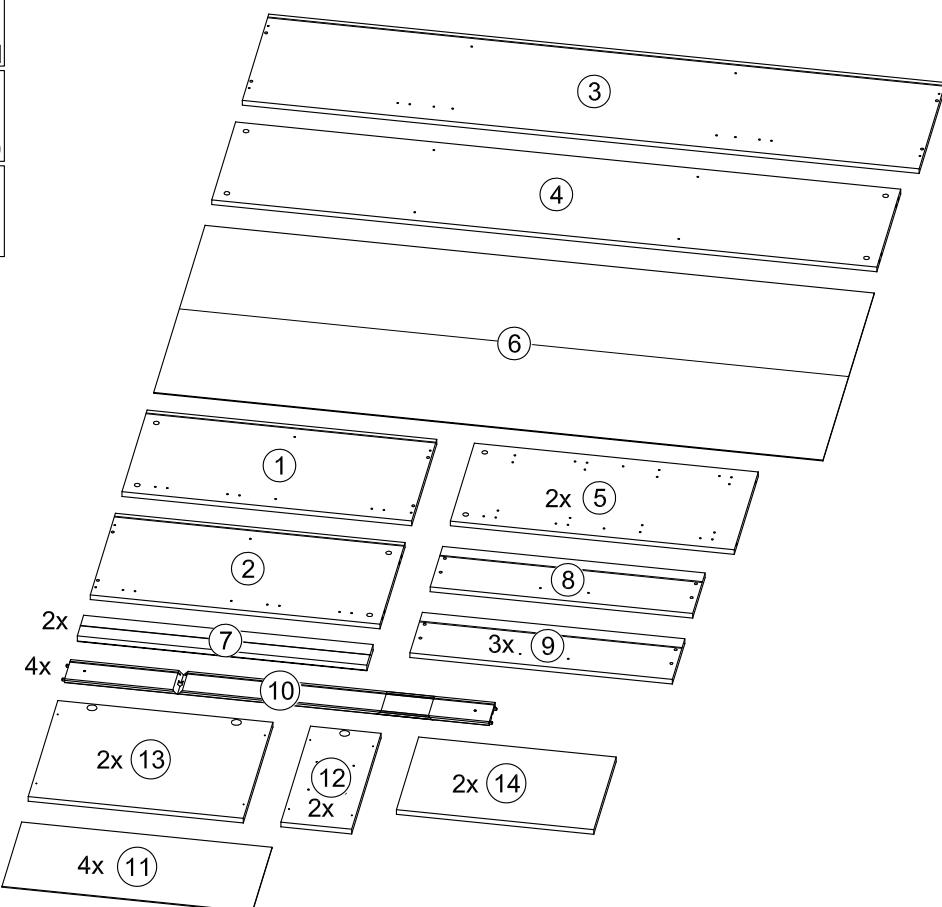
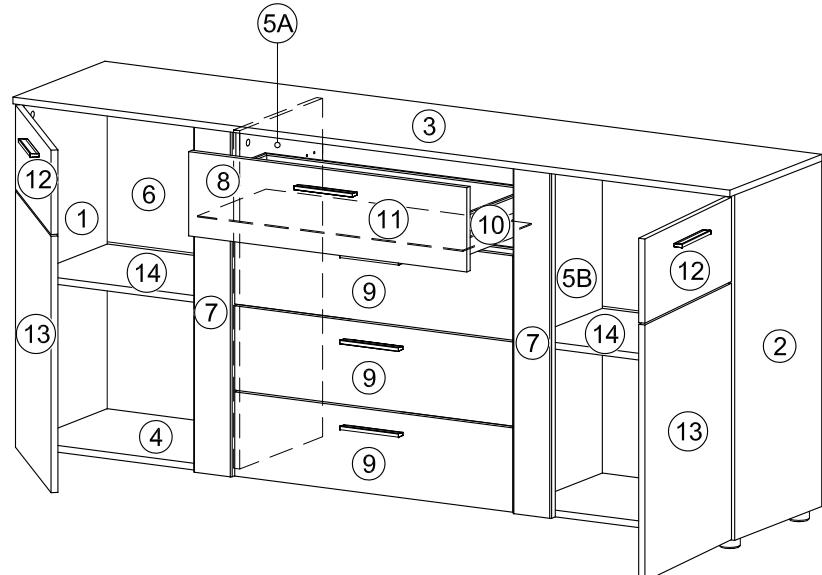


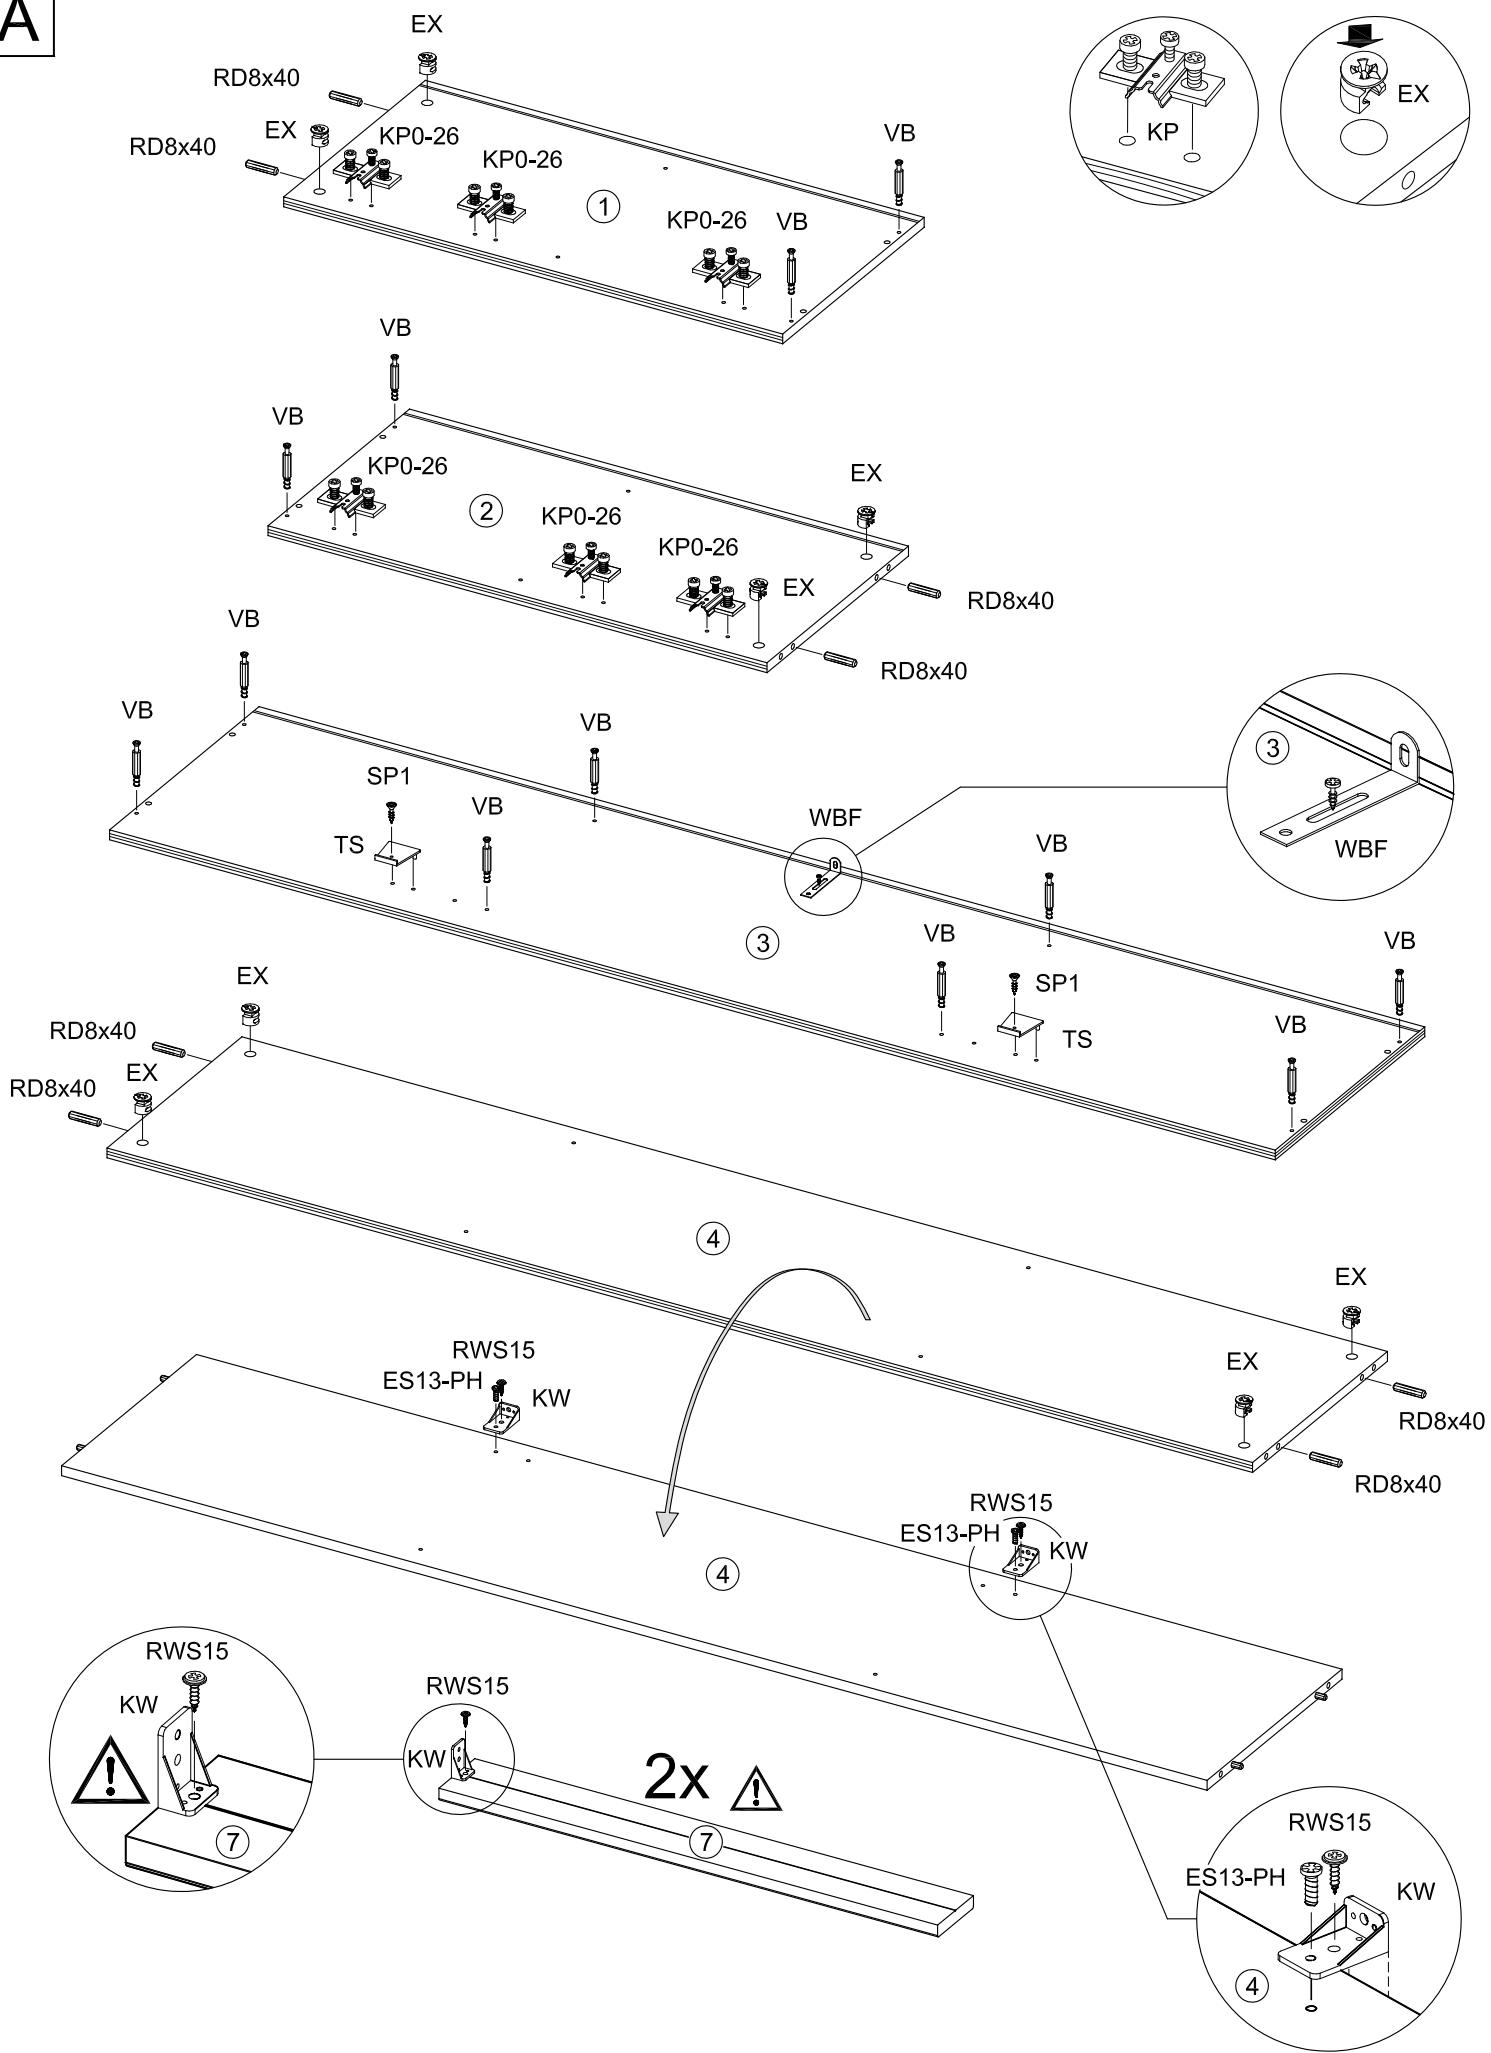
# Montageanleitung

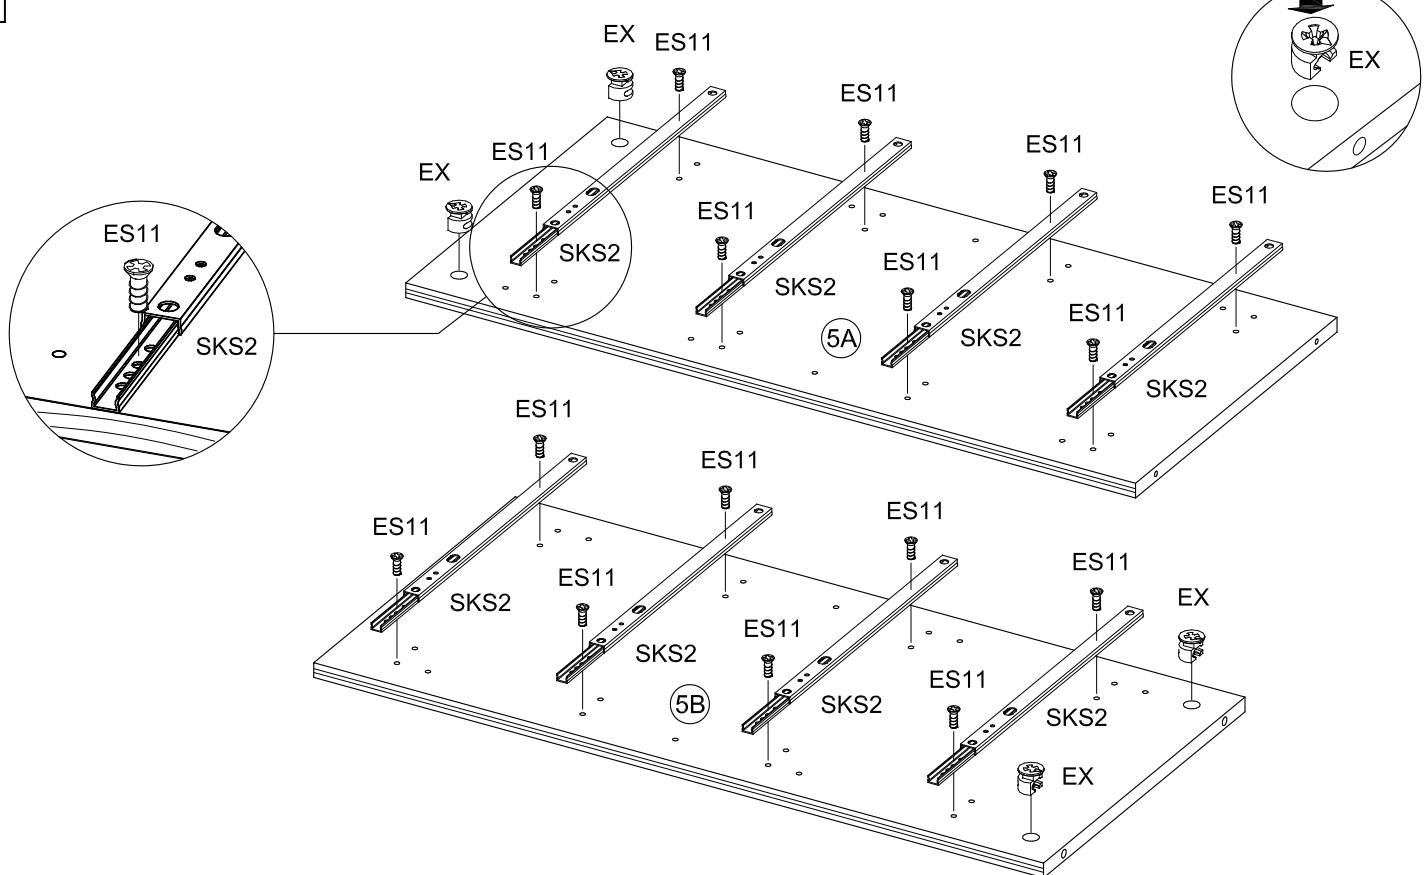
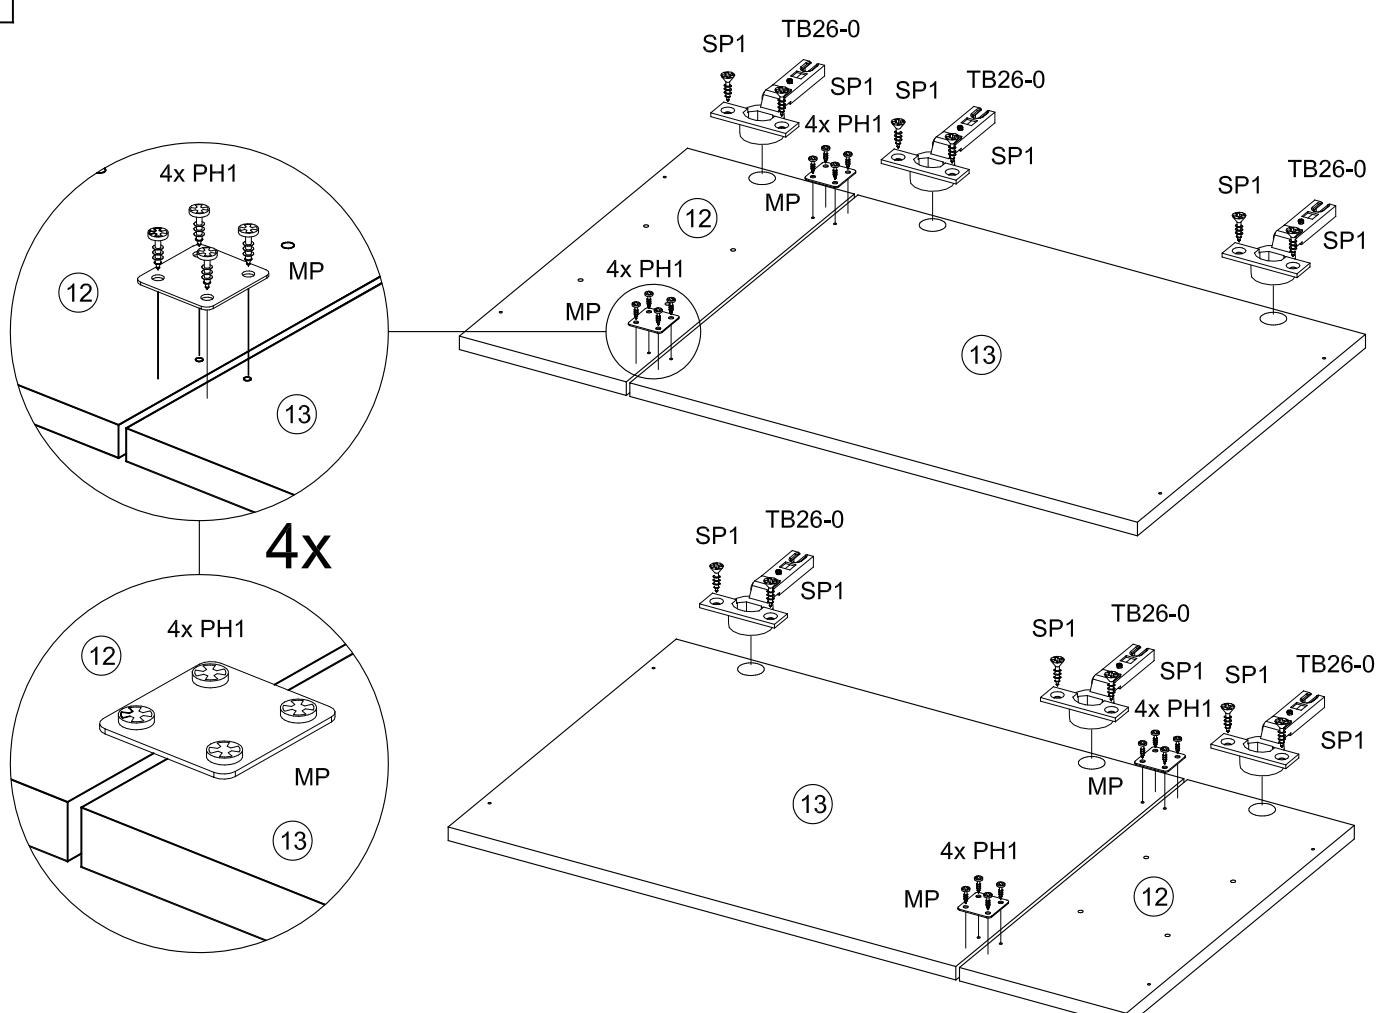
## Trentino 4 Kommode 2trg., 4SK



	4x ADK-EX		6,3x50		4x VBS		8x SKS2
	12x EX		6,3x11		12x VB		16x ES11
	6x KP0-26		8x40		8x RD8x40		M4x9
	6x TB26-0		3,5x13		14x SP1		8x MS9
	1x WBF		2x TS		Leim		4x LM
	12x SB		25x NA				
	6x KG		3,5x30		6x SP5		
	4x MP		4x15		16x PH1		
	6x GLD-128		4x27		12x RWS27		
	4x KW		6,3x13		8x BT		
	4x ES13-PH		4x15		8x RWS15		

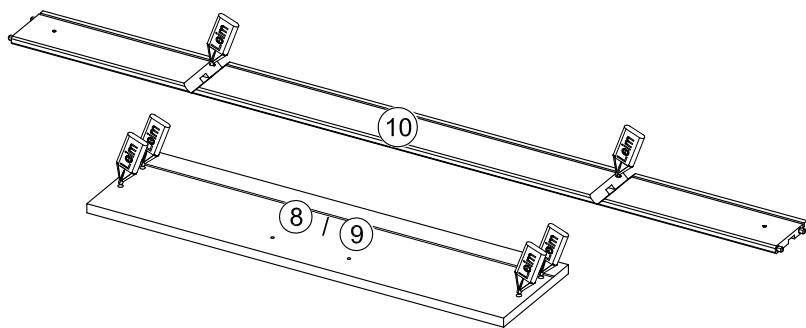


**A**

**B****C**

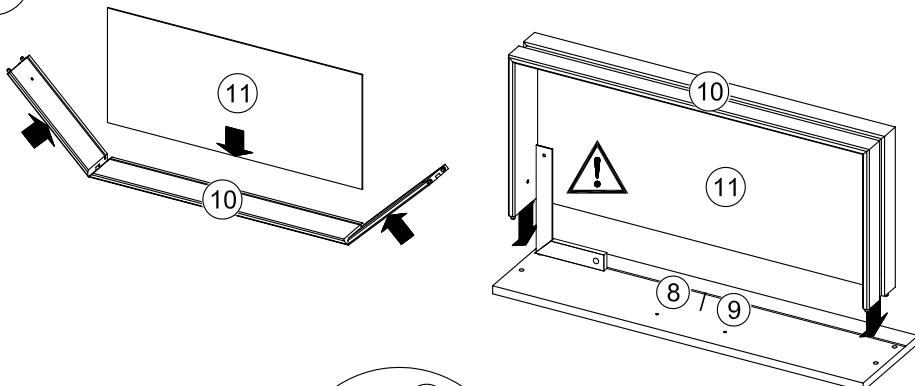
**D**

1

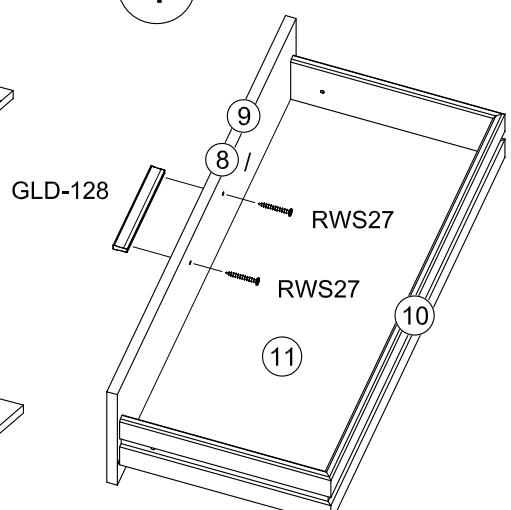


4x

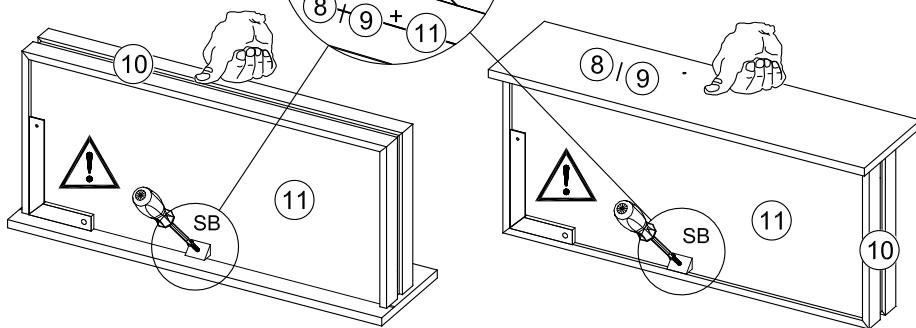
2



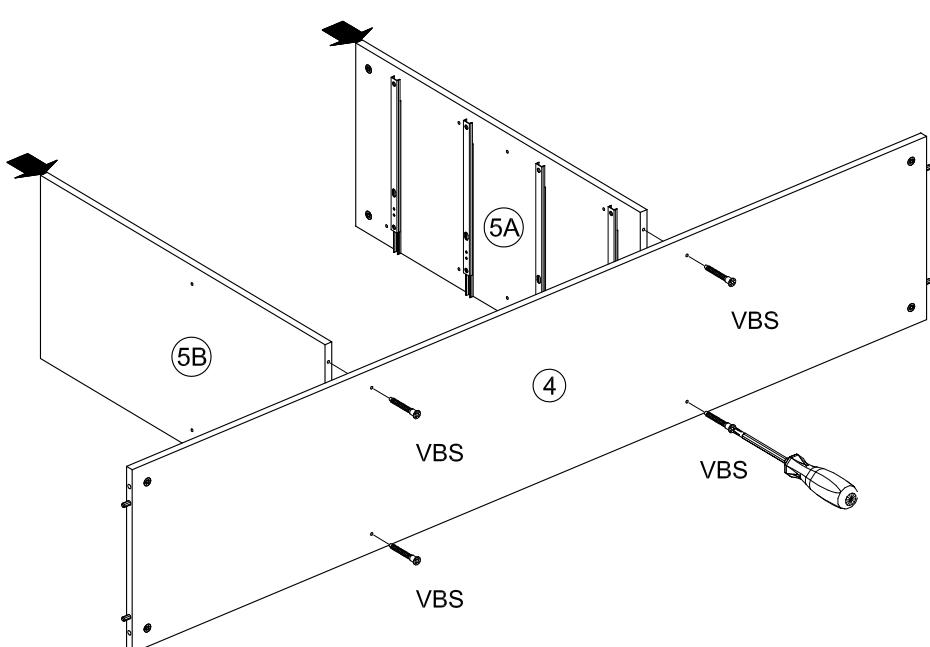
4

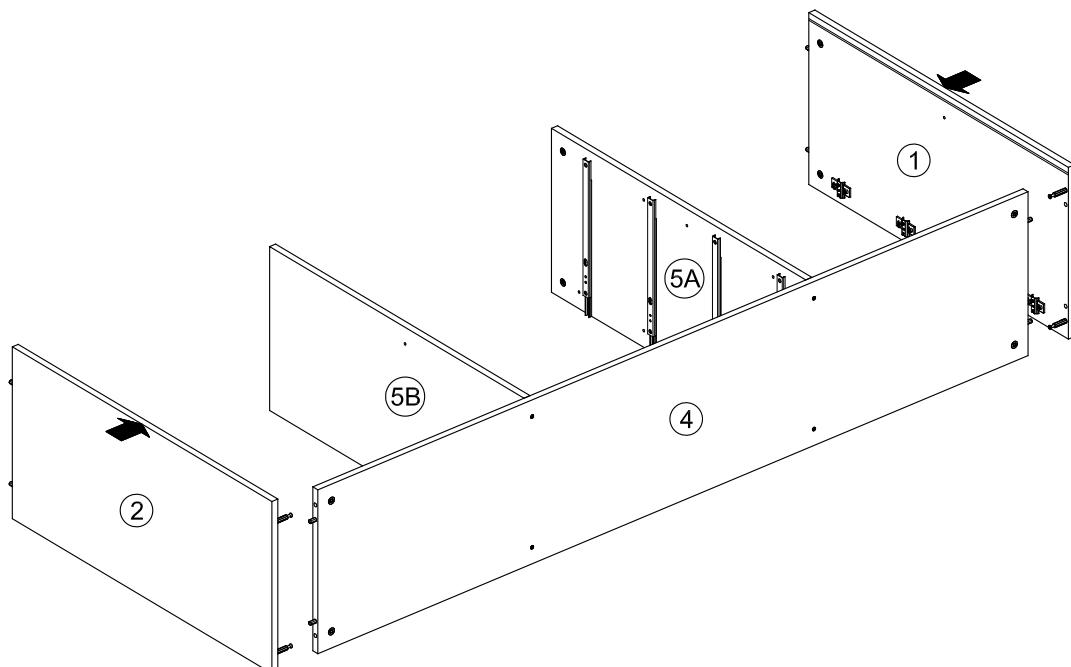
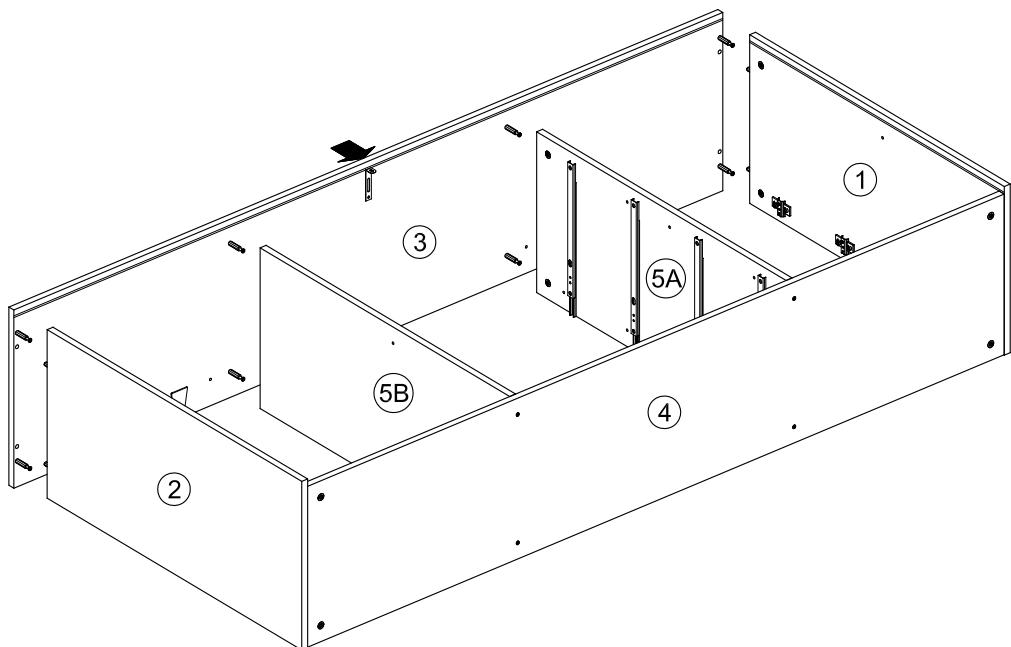
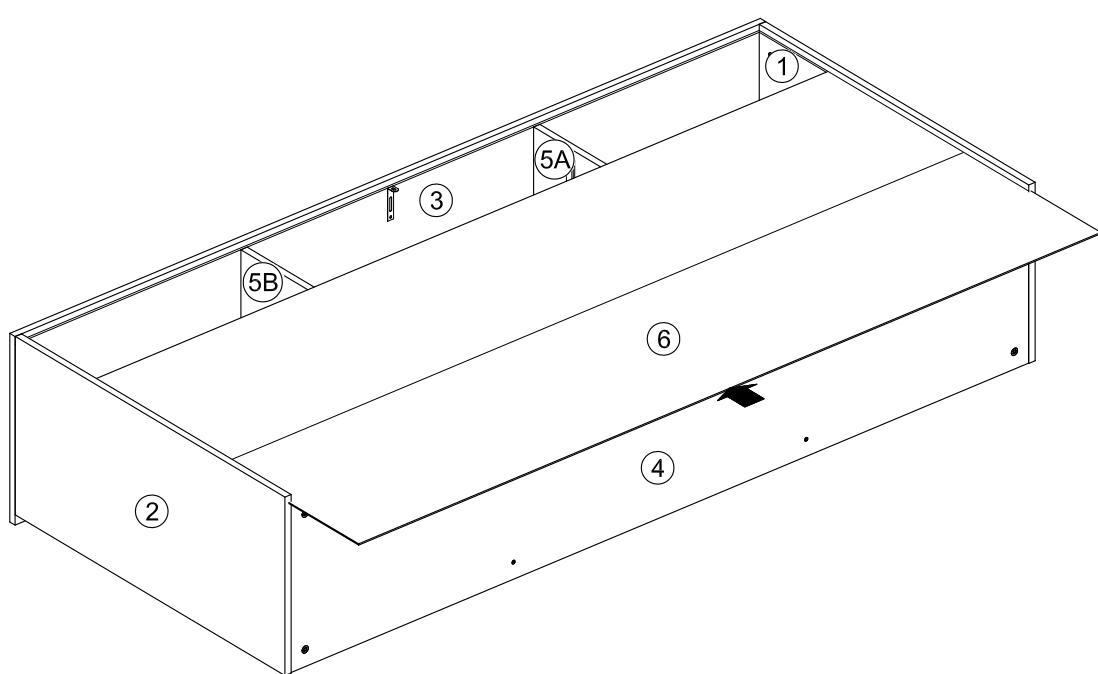


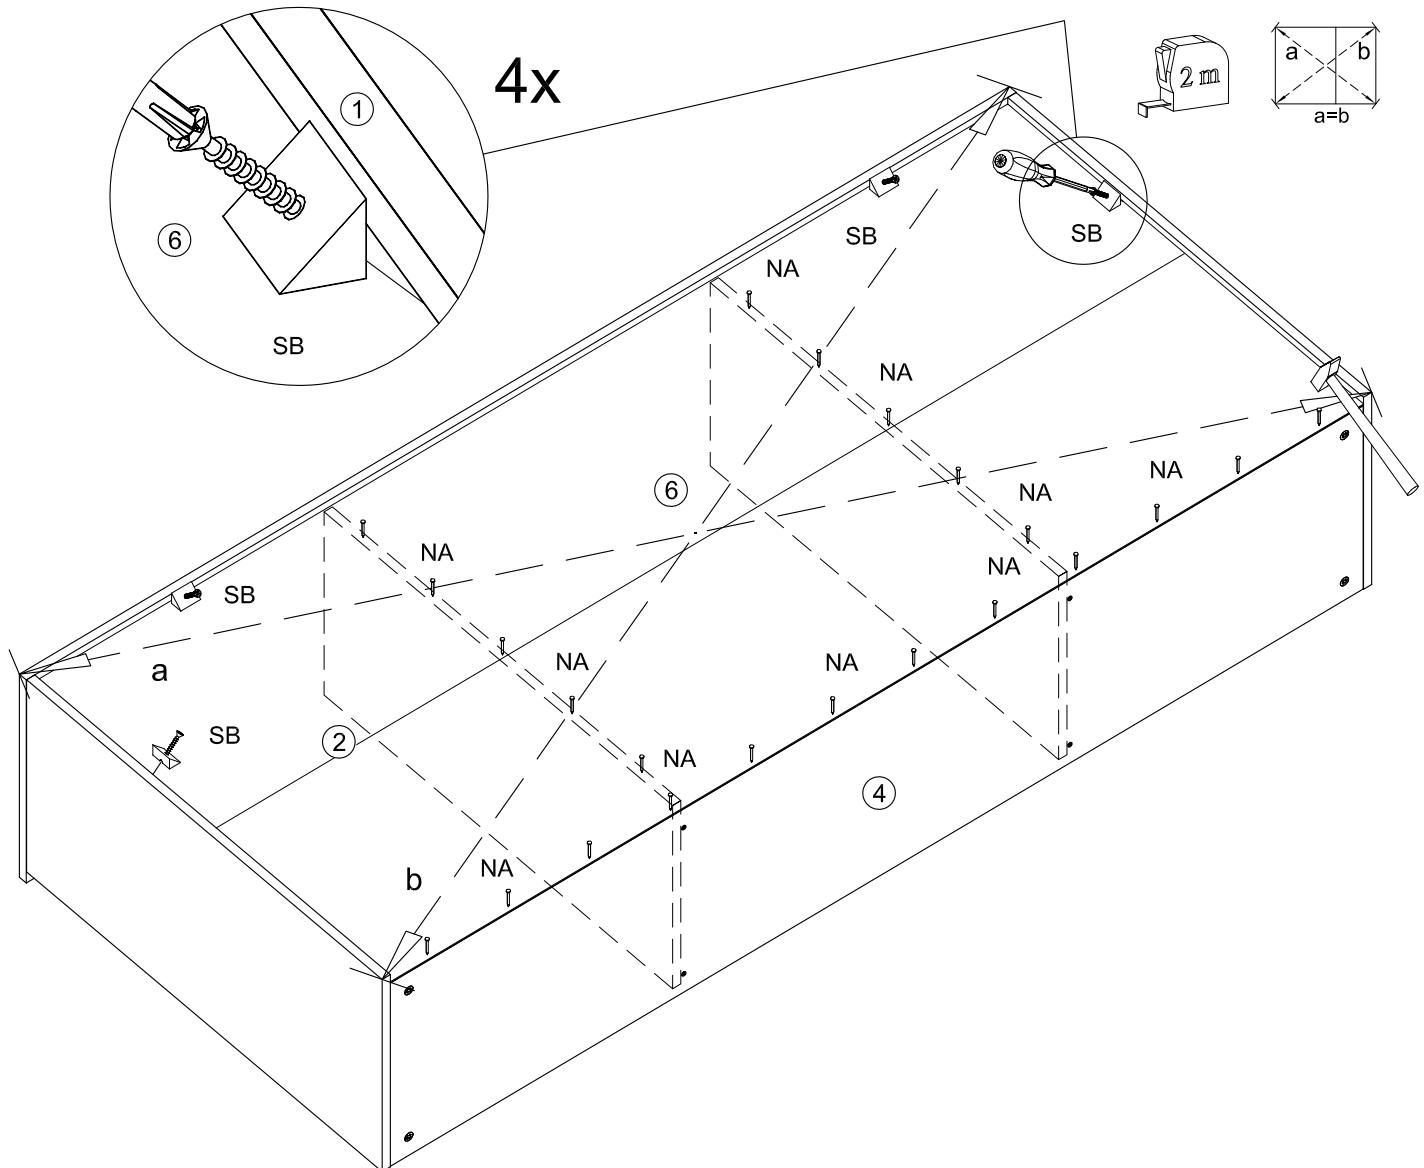
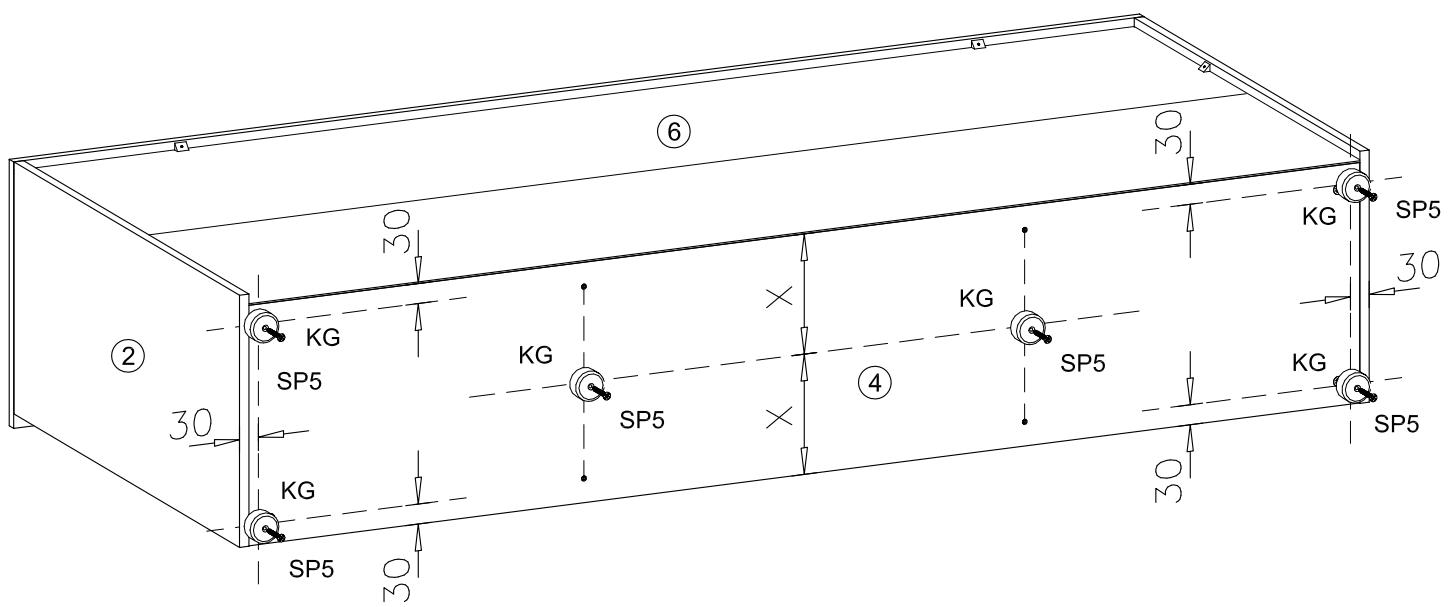
3

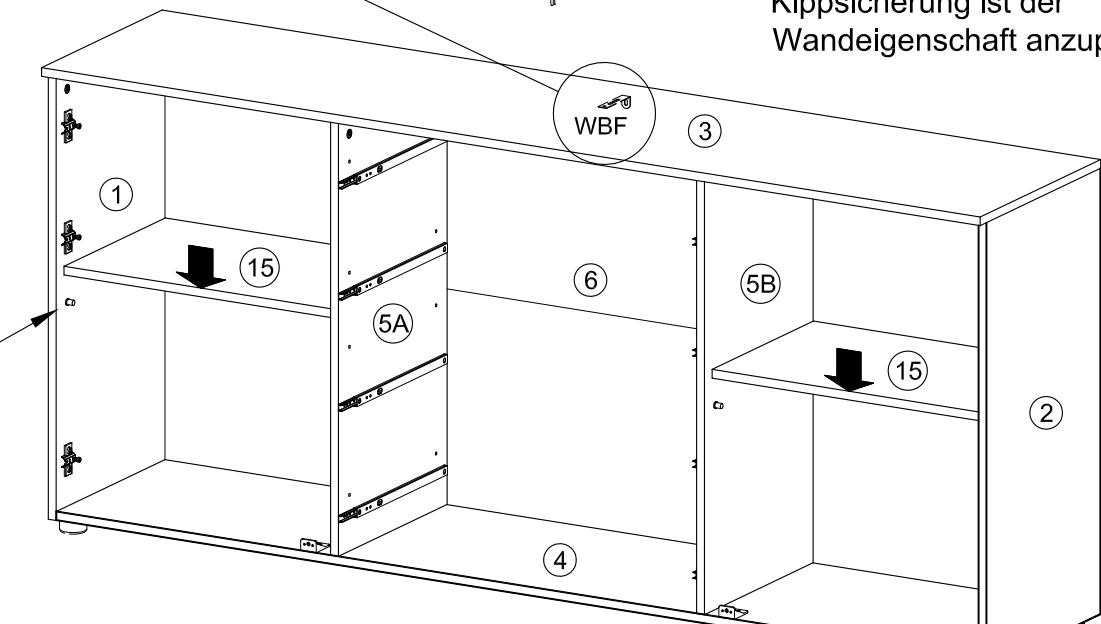
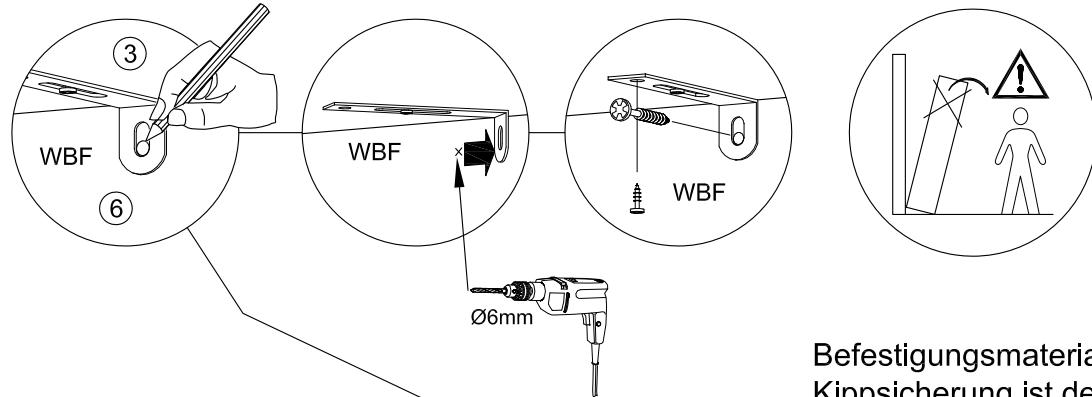
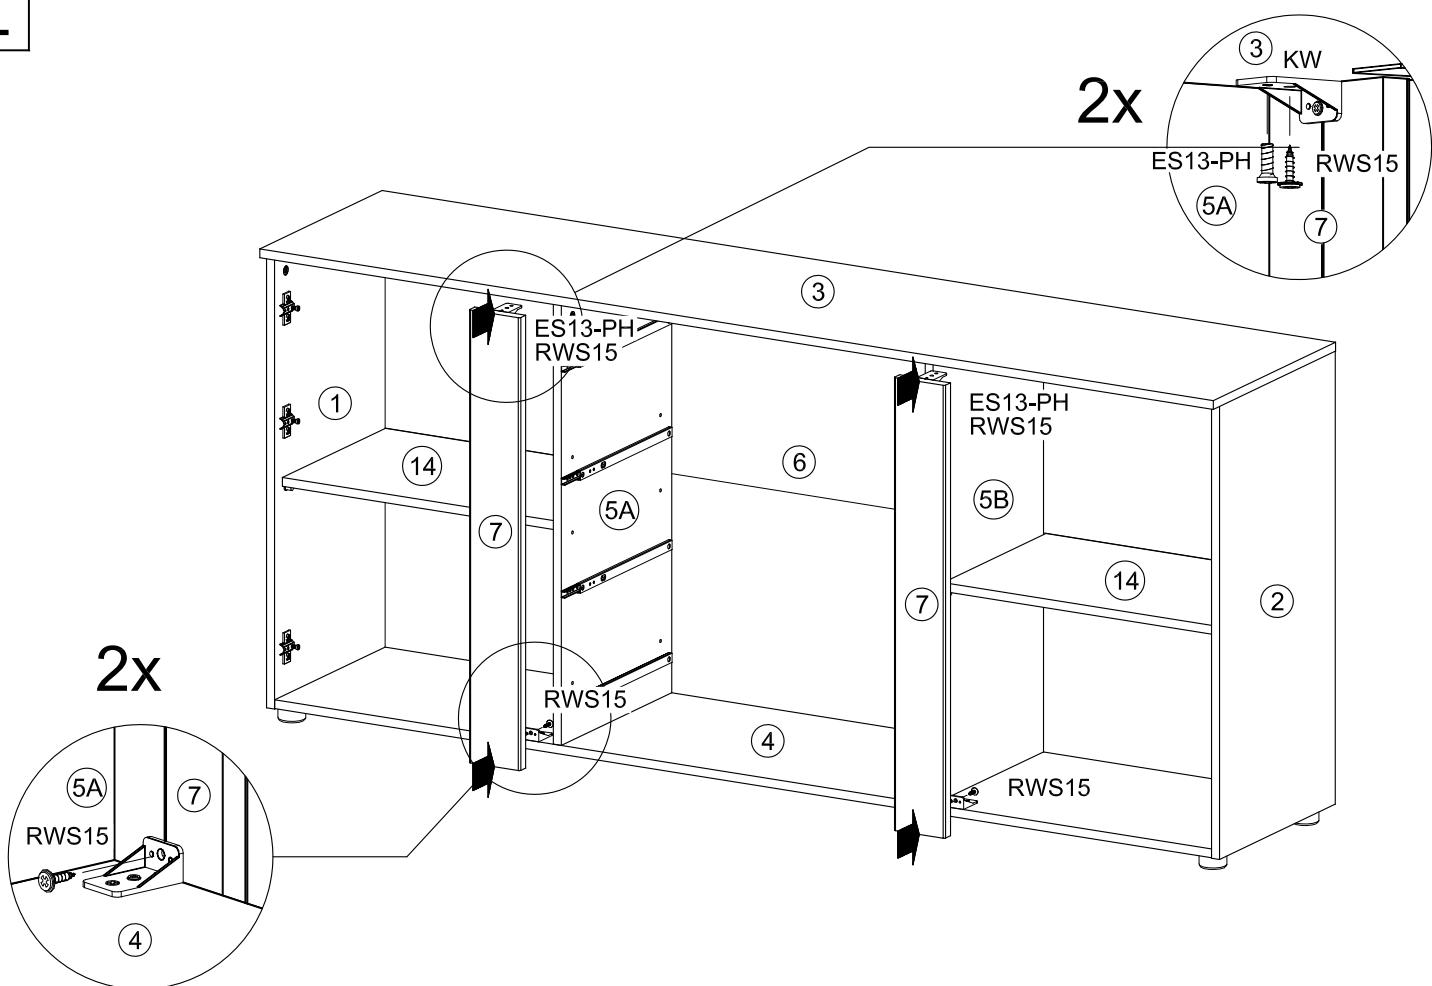


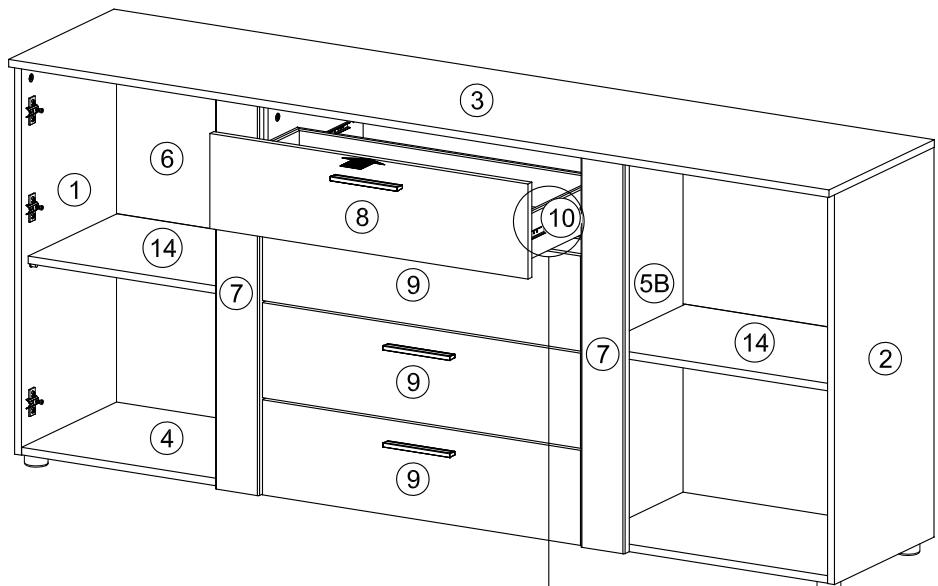
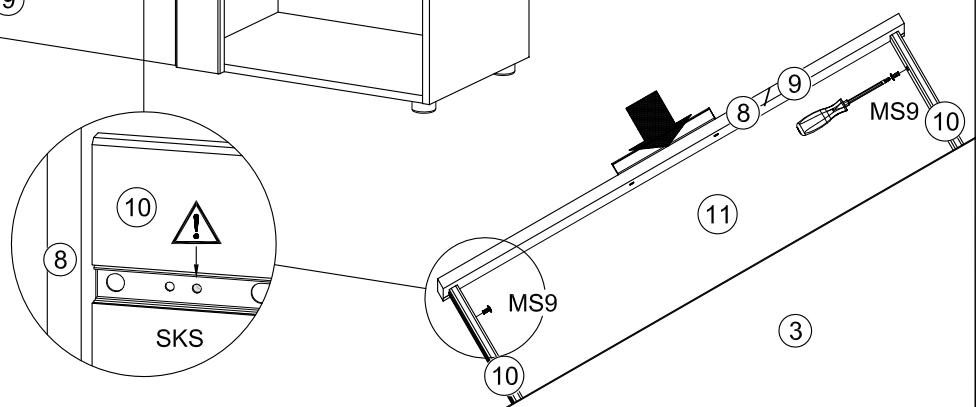
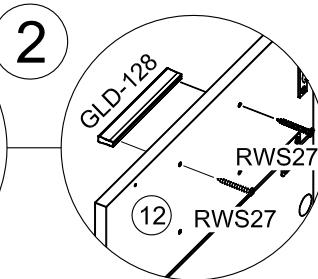
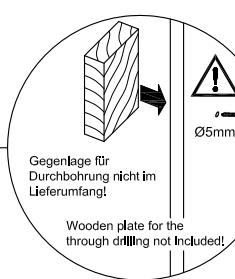
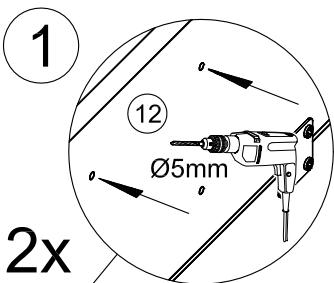
20 Minuten  
trocknen lassen

**E**

**F****G****H**

**I****J**

**K****L**

**M****4x****N****2x**