
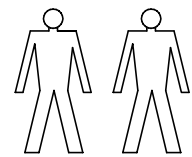
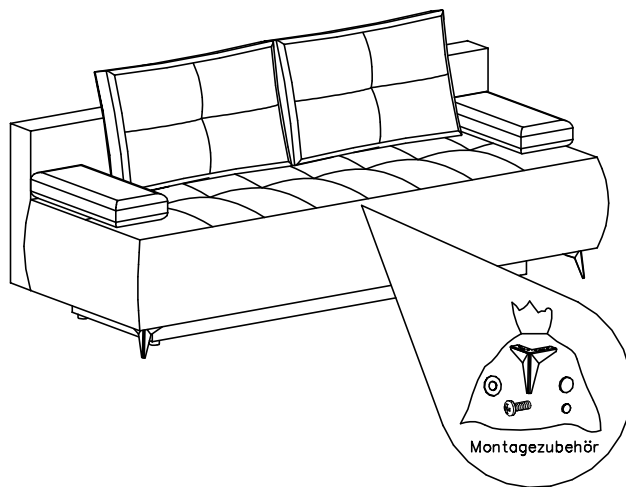




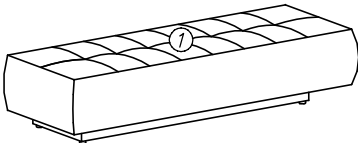


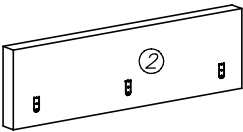
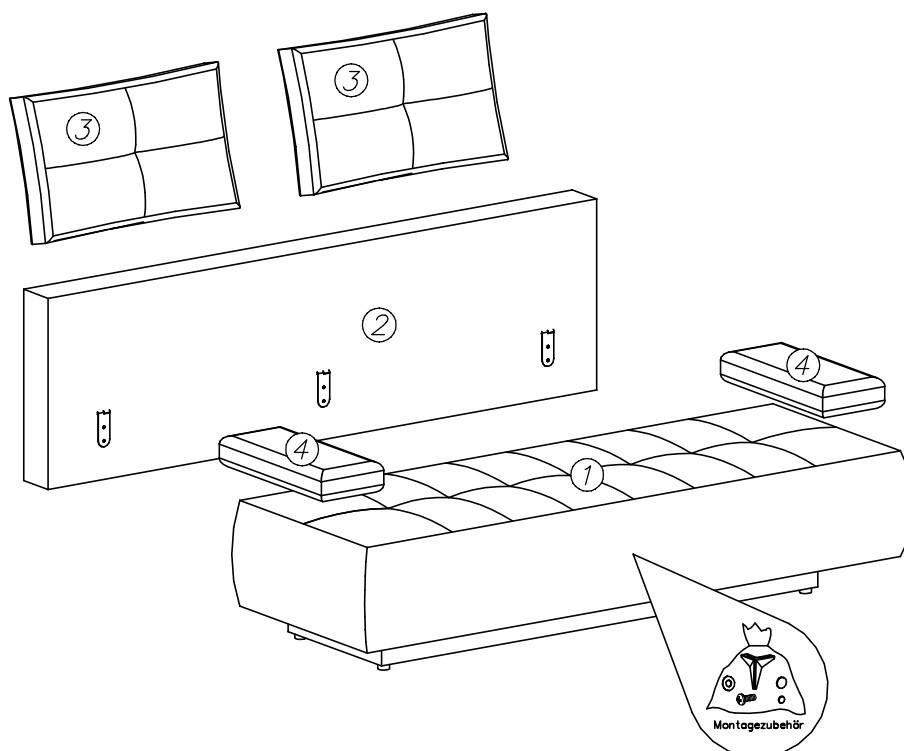


Montageanleitung - Modell OAKLAND






| | | | | |
|---|---|--|--|--|
| A  2x | B  50mm 4x | C  ø17mm 4x | D  ø20mm 4x | E  ø13mm 2x |
|---|---|--|--|--|

| | | |
|---|--|--|
| Colli 1    | Colli 2  | |
|---|--|--|



1

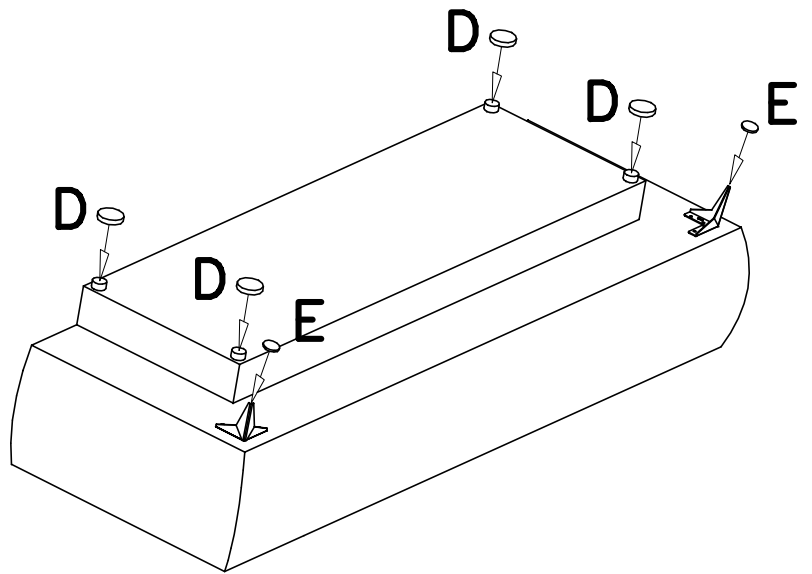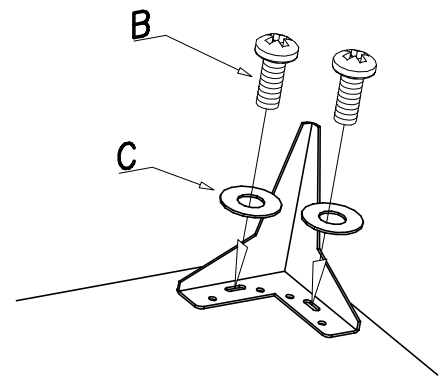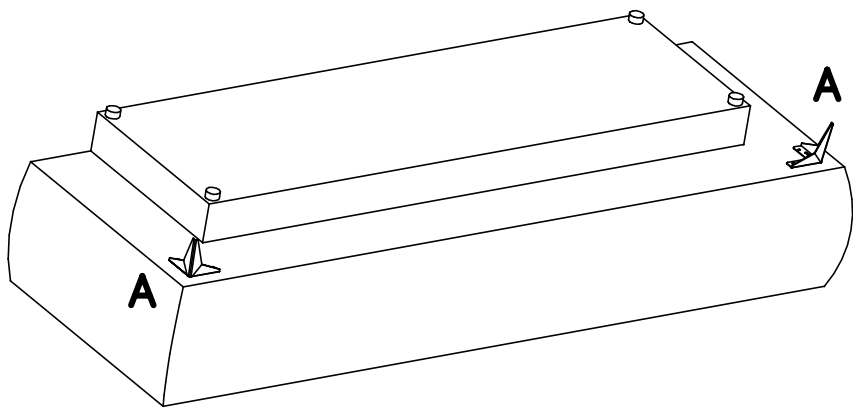

2

