

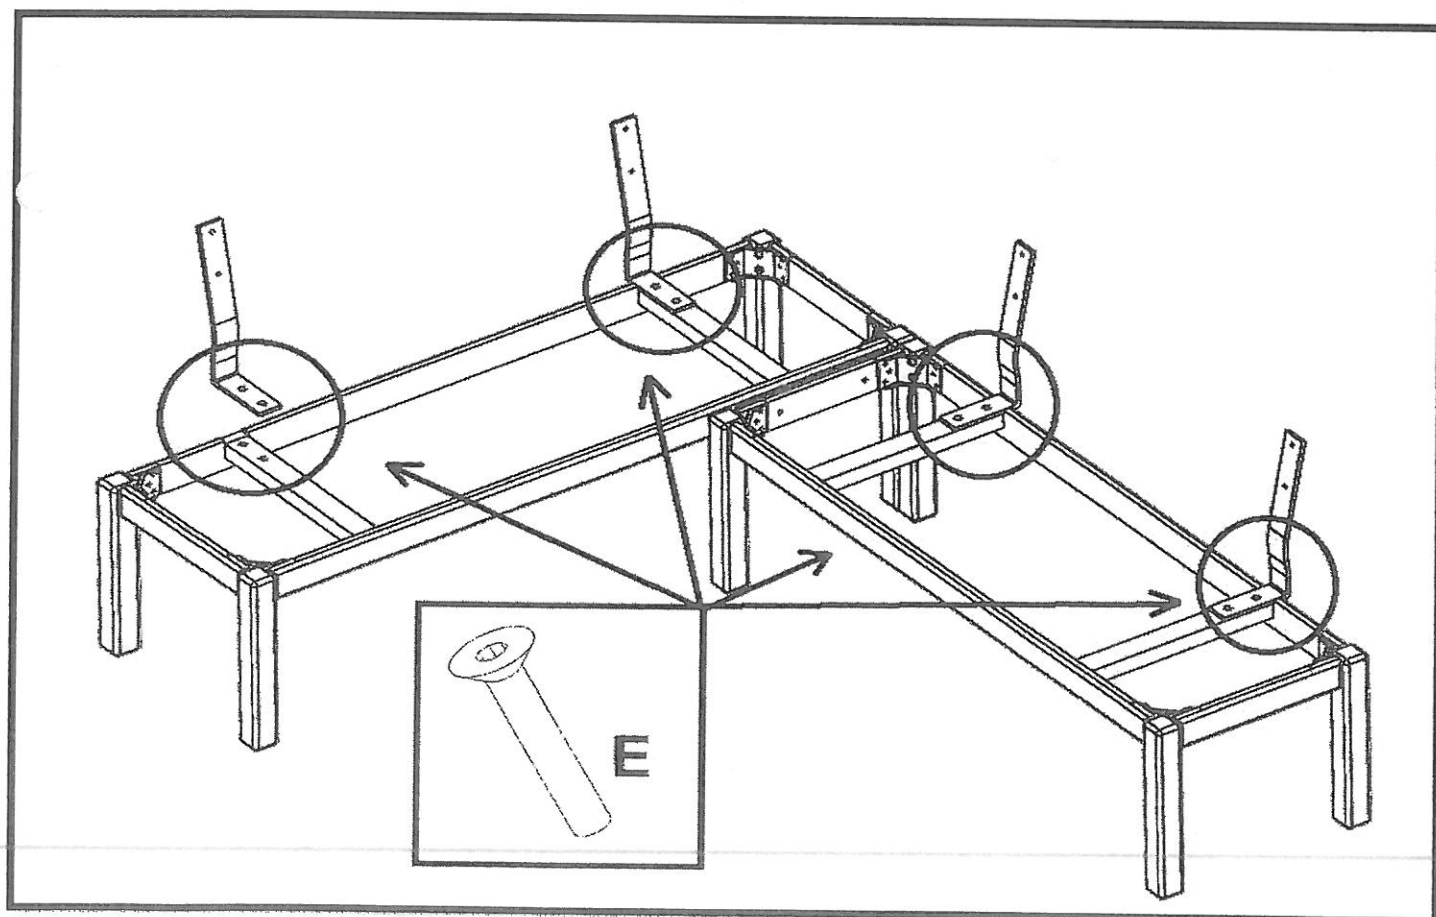
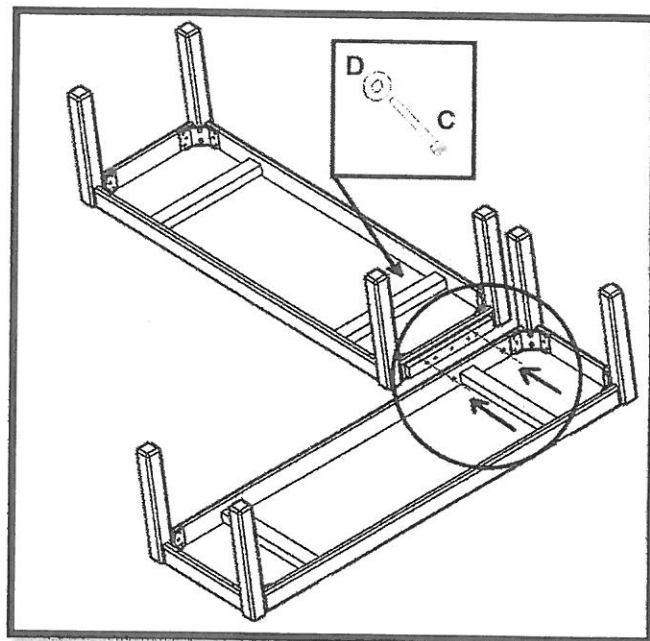
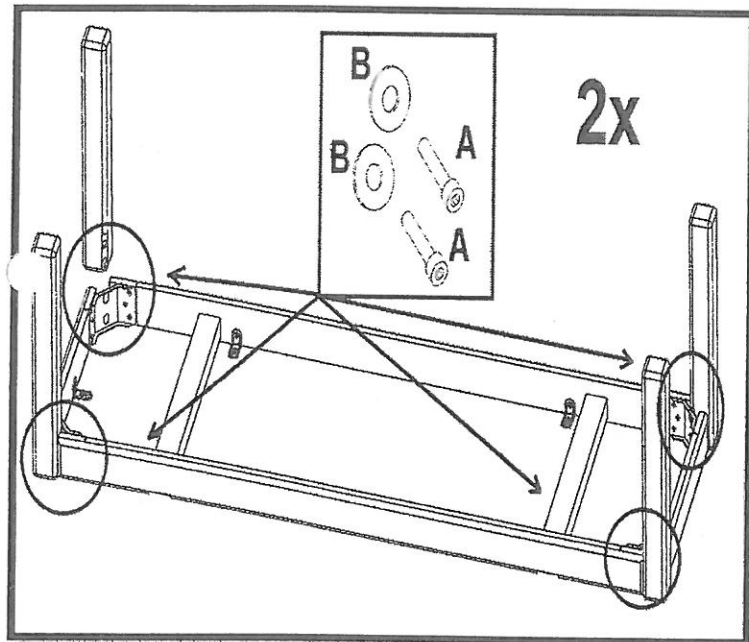
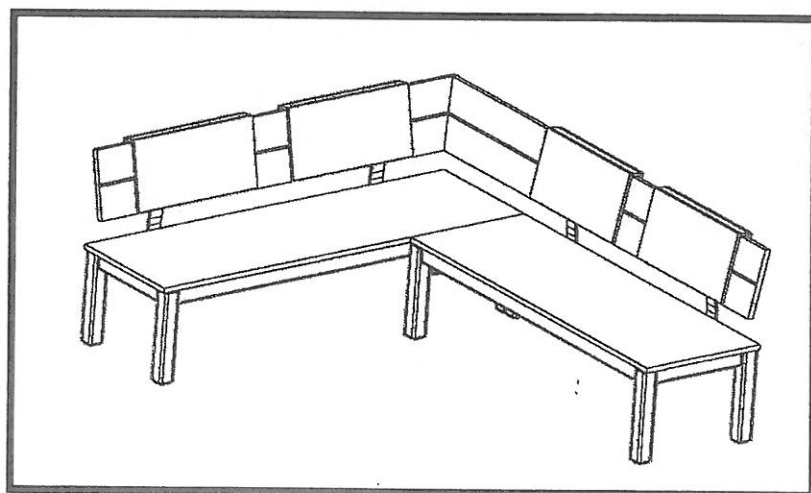




ECKBANK PEDRO 150/190 - montageanleitung

Ax16 	Bx16 	Cx2 	Dx2 	Ex16 	Fx2 (4,5x40) 	Gx12 (4x20) 	H1x1 (6 mm) H2x1 (5 mm) 
---	---	--	--	---	---	--	---

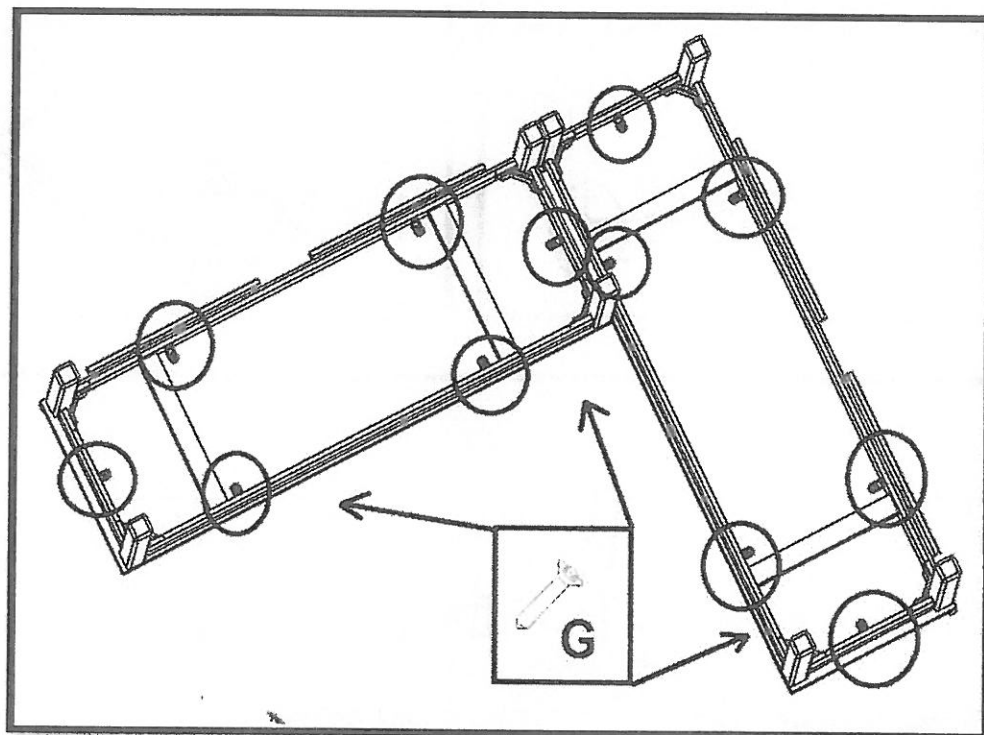

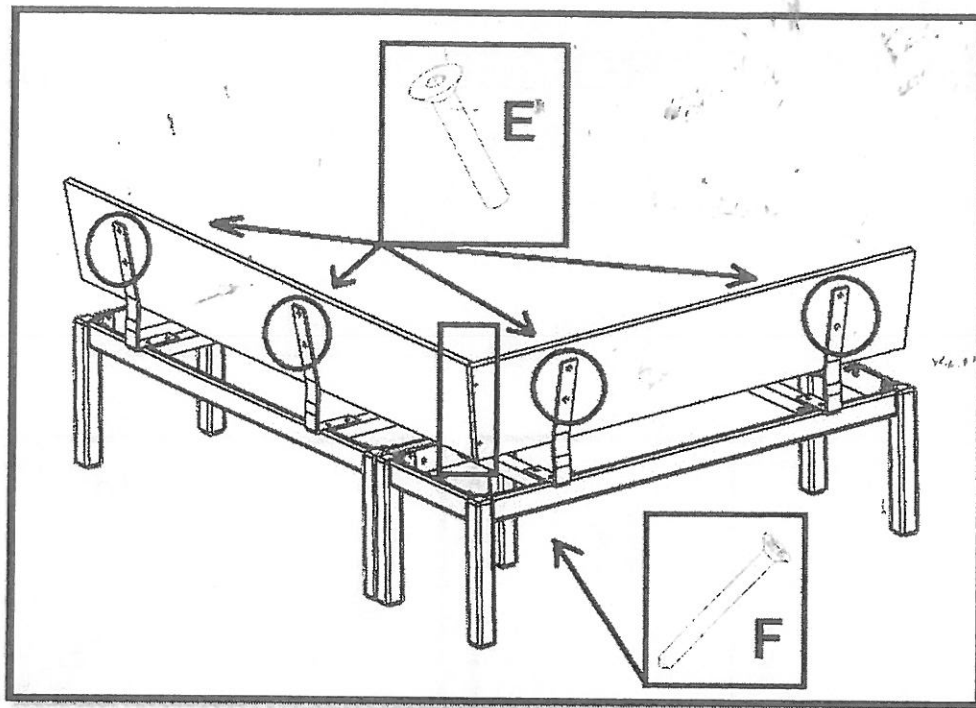


20.	21.	22.
23.	23.	
25.		

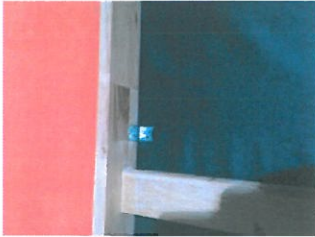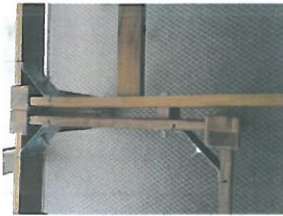

EB


PEDRO

Tisd. Pedro

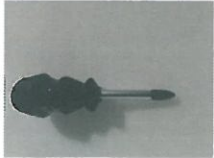 60 min			No 13 
---	---	---	--

1.		2.		3.		4.	
M8	D x 2	M6 x 15	Ex 16	M3 x 10	F x 12	M3 x 40	G x 2

5.		M8 x 60	A x 4
6.		M8 X 100	B x 1
7.		M8 X 18	C x 6

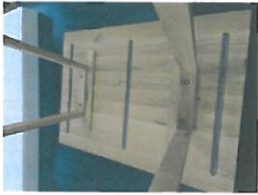8. 	9. 	10. 
11. 	12. 	13. 
14. 	15. 	16. 
17. 	18. 	19. 