

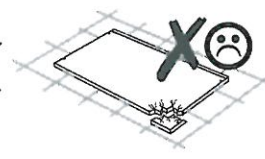
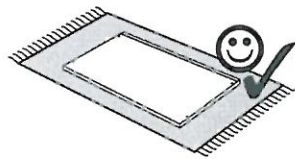
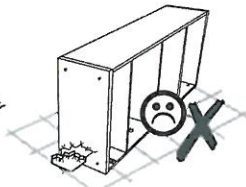
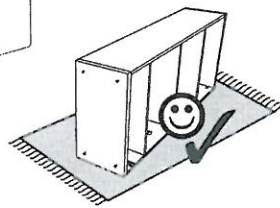
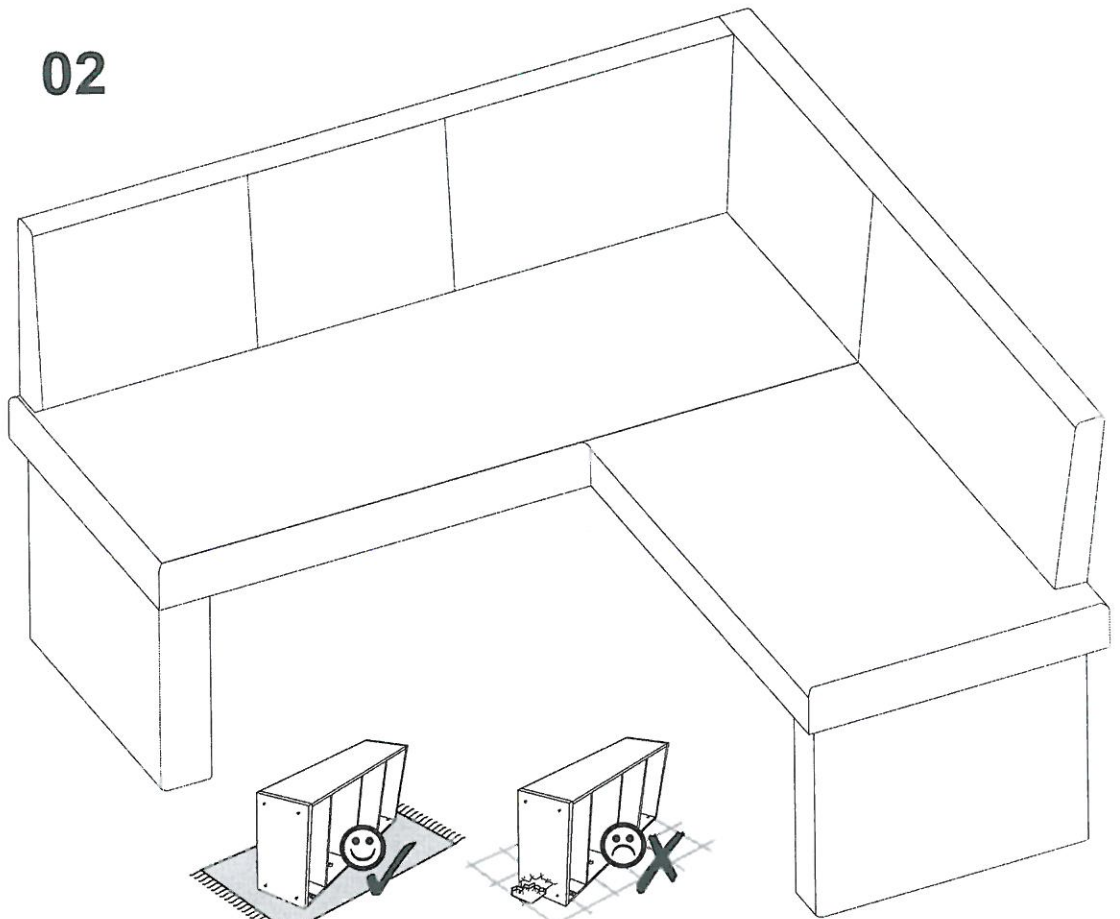



ECKBANK ANA 130x130

02


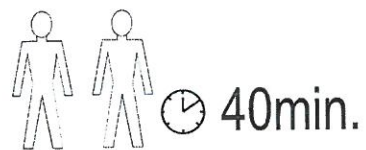


- | | |
|-------------------------|------------------------------|
| (D) Montageanleitung | (SK) Montážny návod |
| (CZ) Montážni návod | (SLO) Navodila za namestitev |
| (HU) Szerelési útmutató | (HR) Uputstva za montažu |

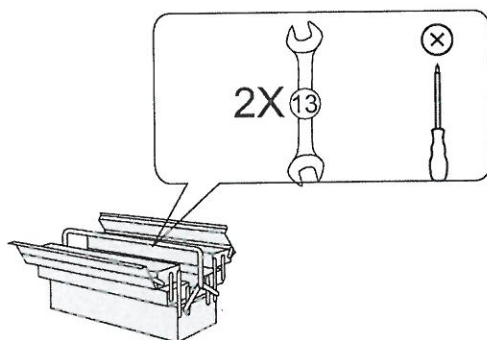


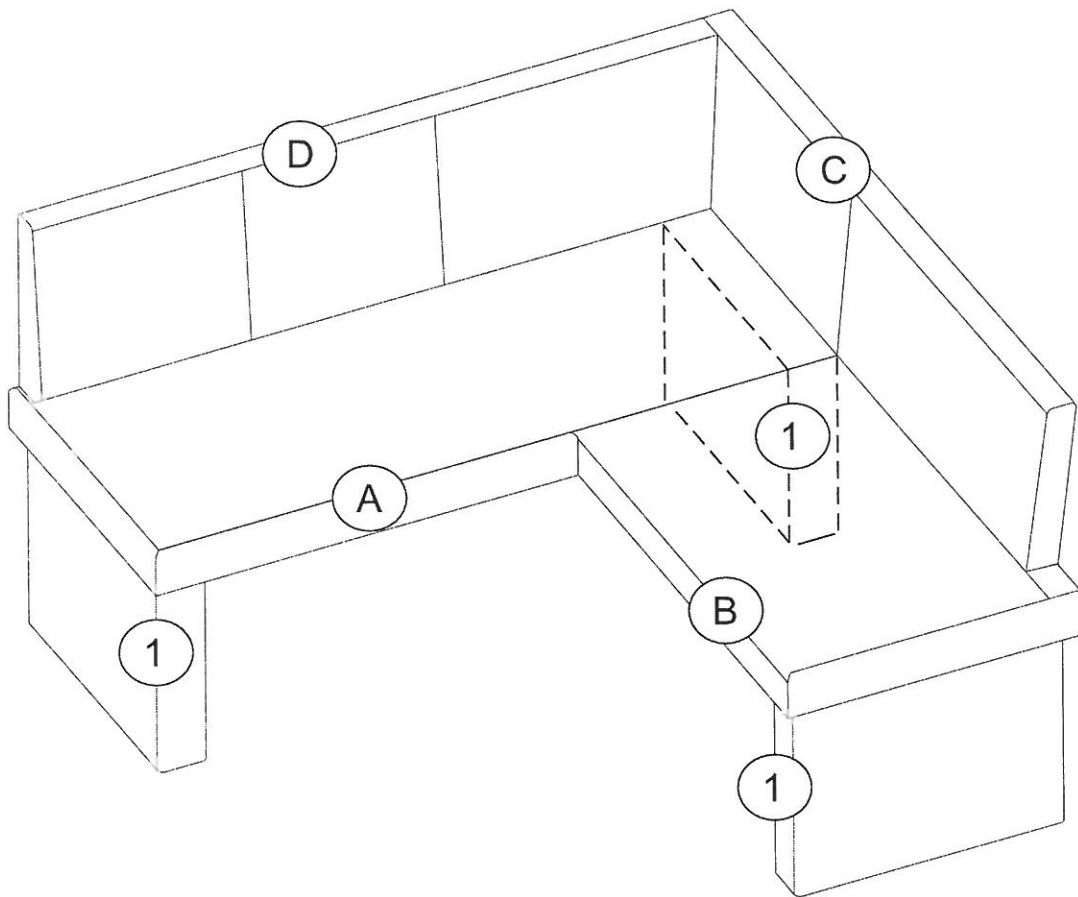

C1	A	1380	x	584
C1	B	1100	x	584
C1	1	530	x	440
C2	D	1310	x	380
C1	C	1680	x	380

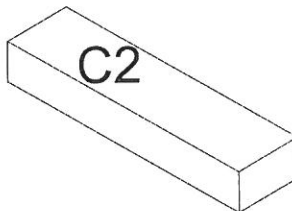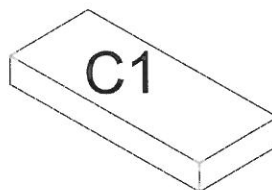


T_13 M8x35 12x	M_14 19x	f7 M8 2x	N4 M8x45 5x	N9 M6x70 2x	N10 12X14 2x	Tv1 M8x60 2x
----------------------	-------------	----------------	-------------------	-------------------	--------------------	--------------------




1

Tv1 M8x60 2x	M_14 2x
	f7 M8 2x


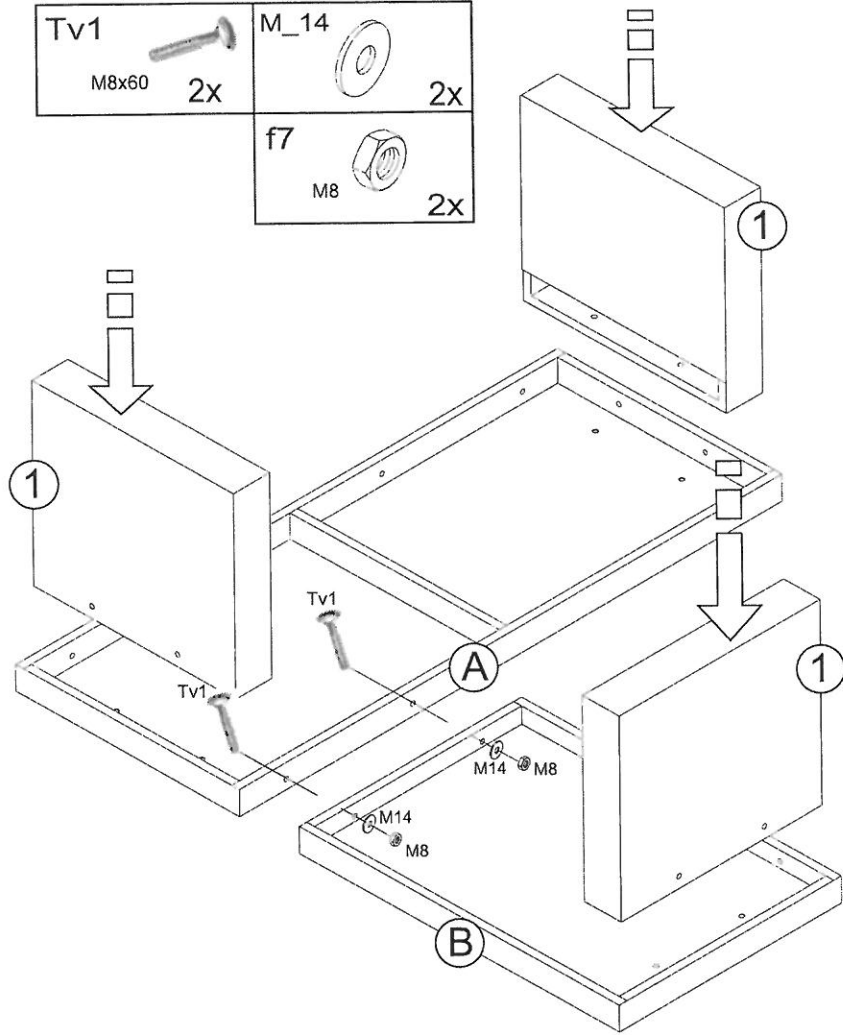




2

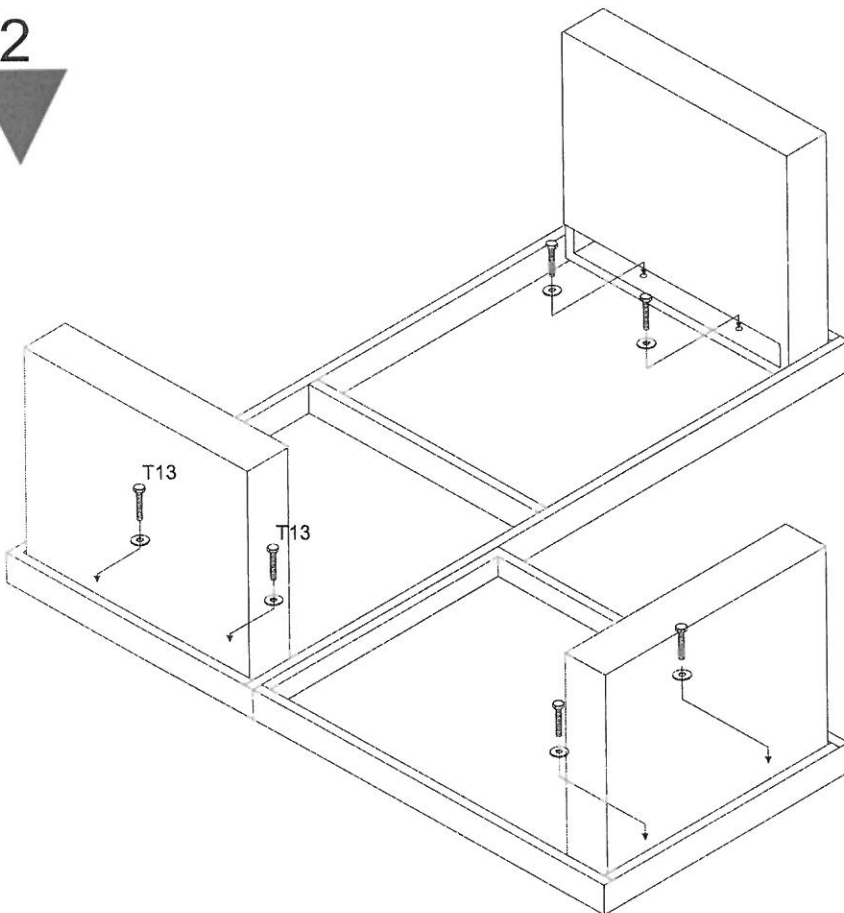
T_13 M8x35 6x	M_14 6x
---------------------	------------

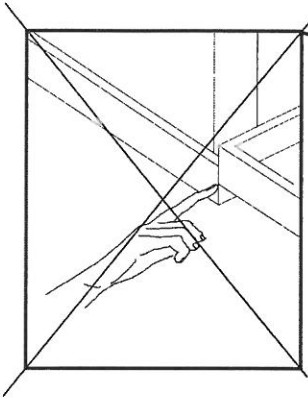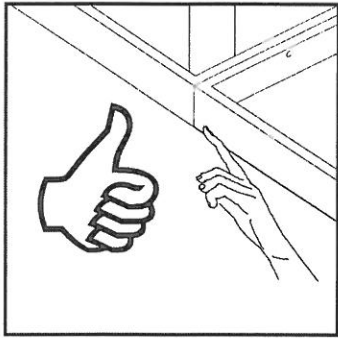



3



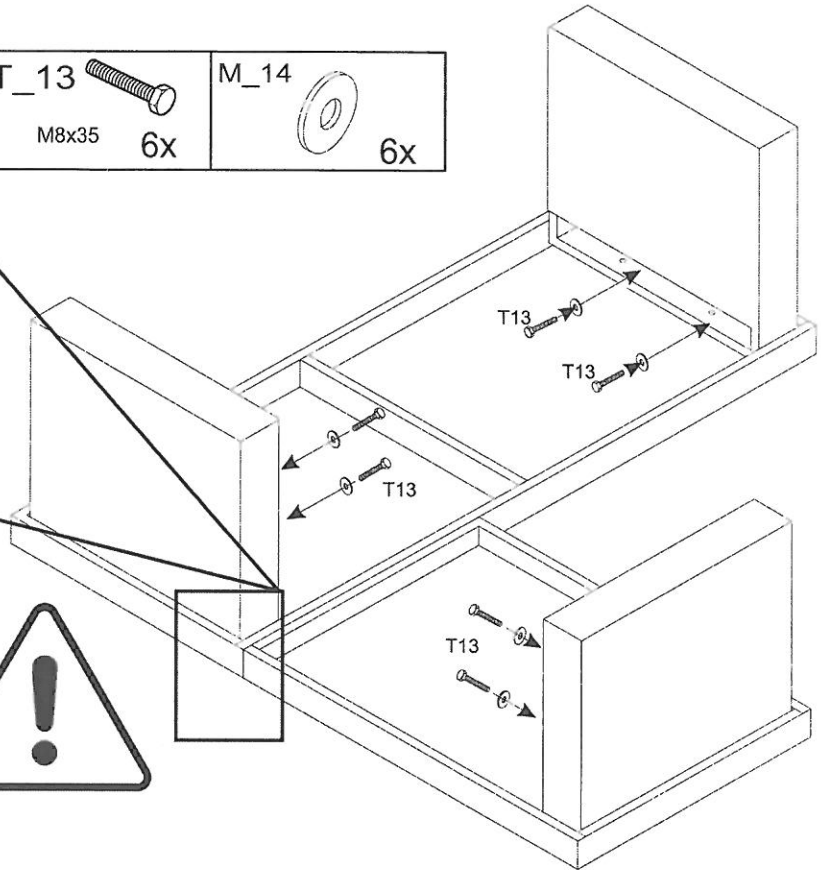

T_13		M_14	
M8x35	6X		6X

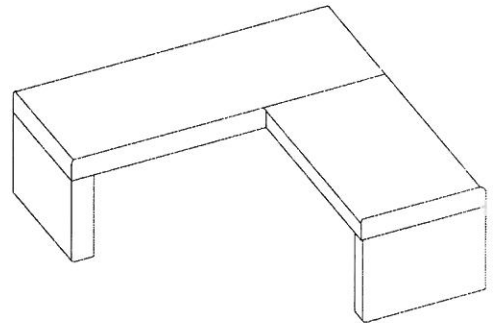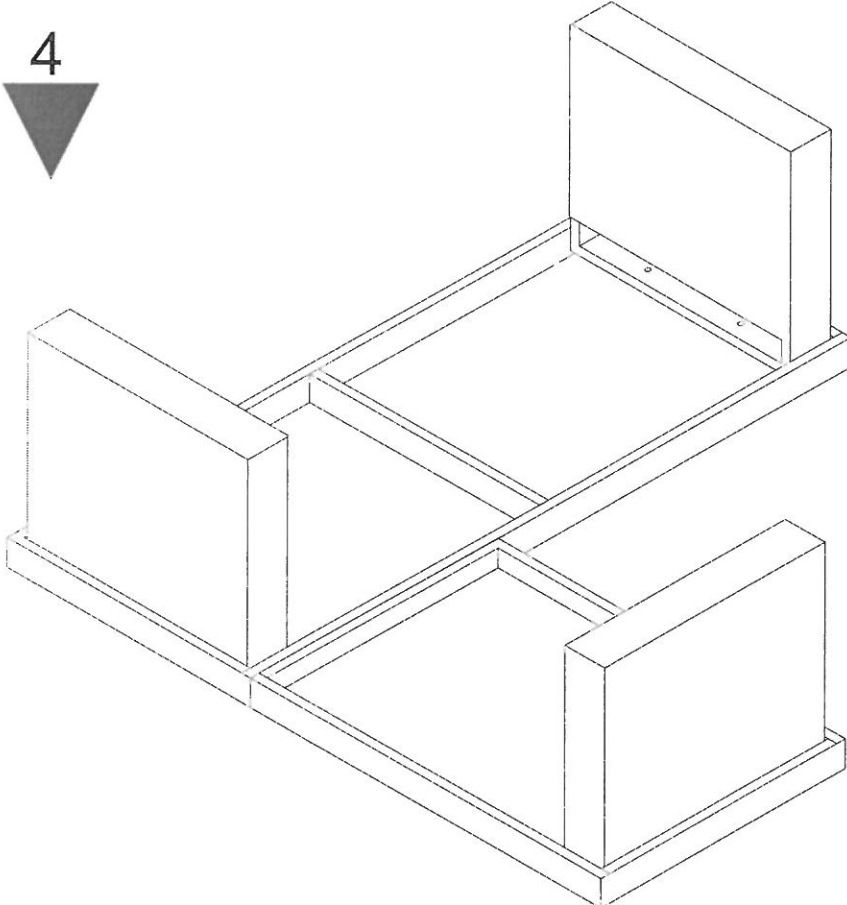


4






5

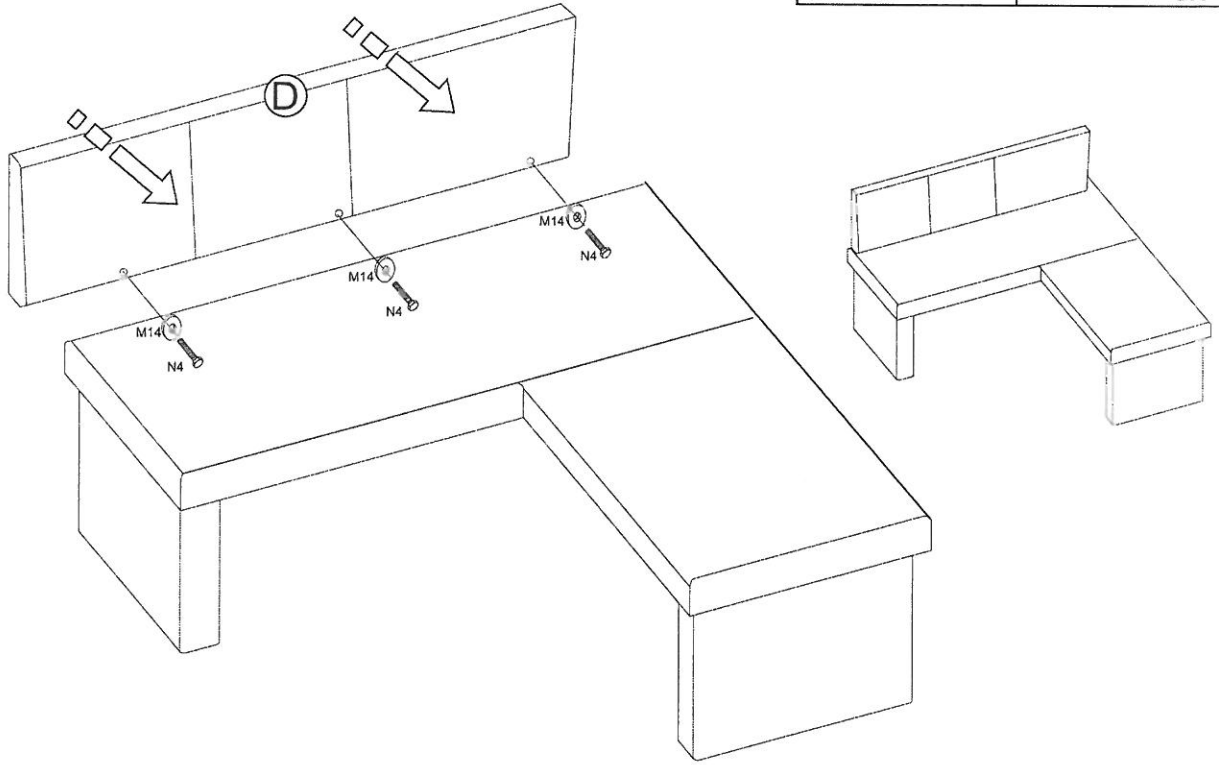N4		M_14	
M8x45	3X		3X



6


N4		M_14	
M8x40	2X		2X

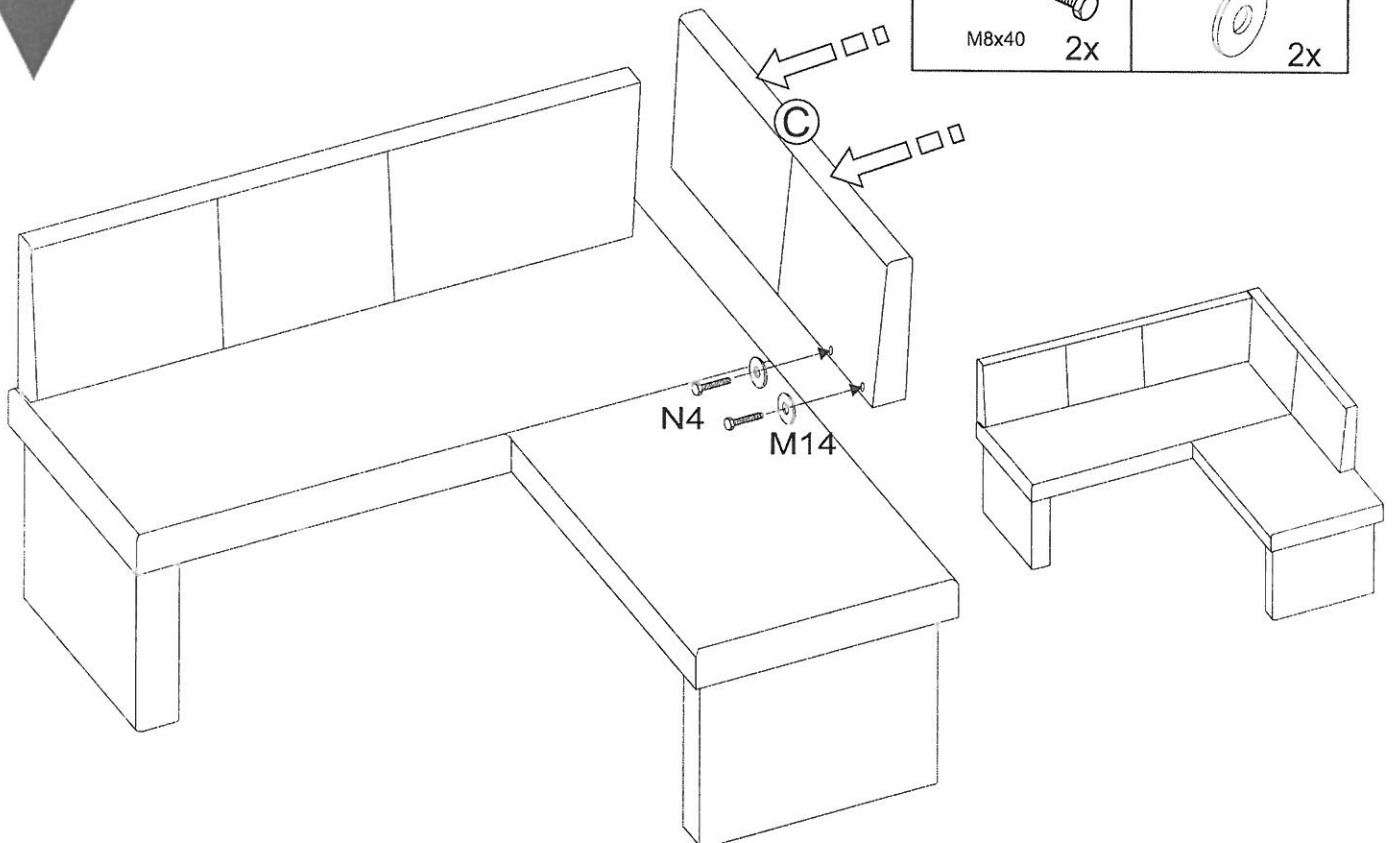

7




N9 M6x70 2x	N10 2x
-------------------	-----------

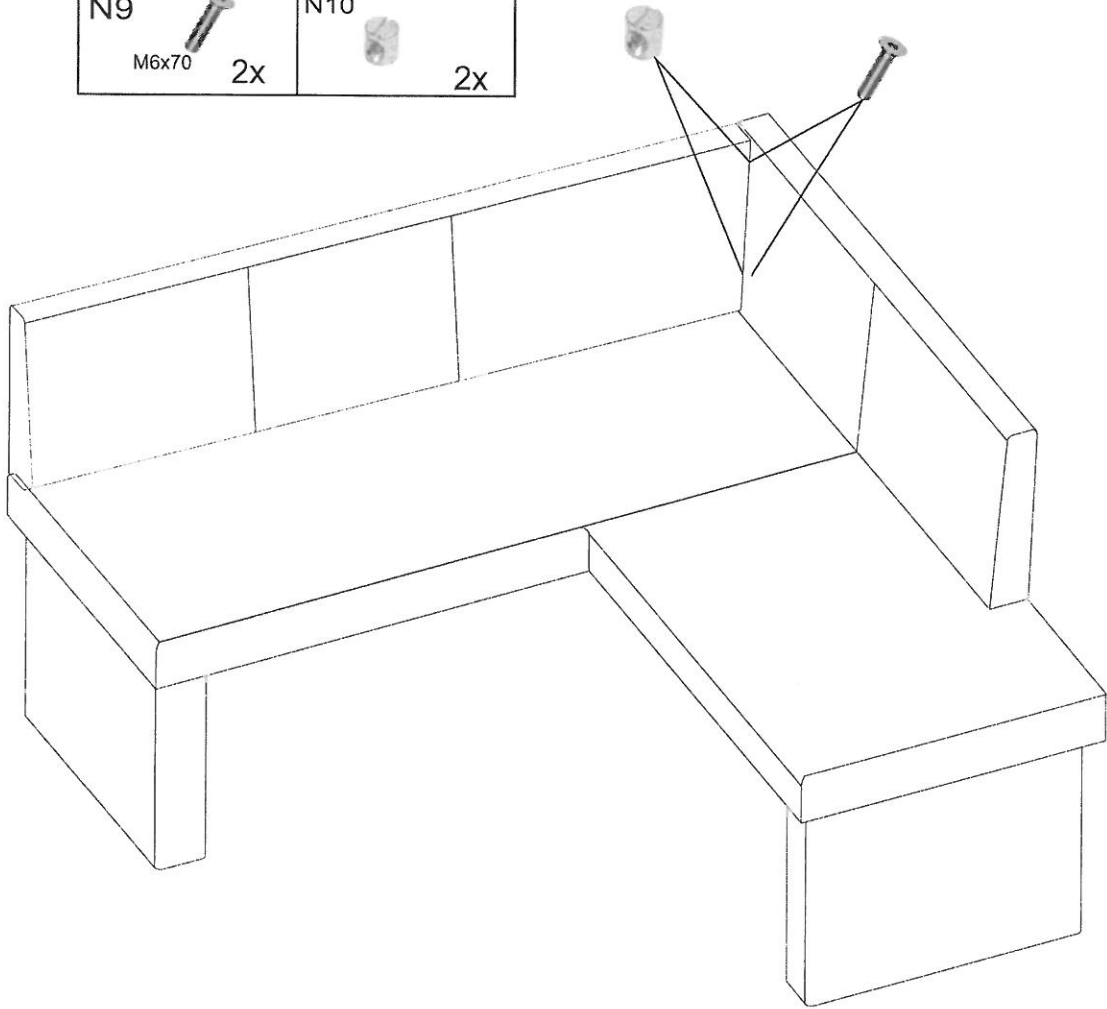

1



2

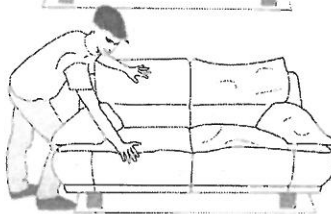

3

