



Carolina MA 160/180x200



- | | |
|---|---|
| (D) Montageanleitung | (GB) Assembly instructions |
| (NL) Handleiding voor de montage | (PL) Instrukcja montazu |
| (TR) Montaj talimati | (RU) Инструкция по монтажу |
| (RO) Instructiunile de instalare | (I) Istruzioni per l'installazione |
| (F) Instructions d'installation | (SK) Pokyny k inštalácii |
| (CZ) Pokyny k instalaci | (H) Telepítési utasítások |

11798322

Ausgabe:
20120104

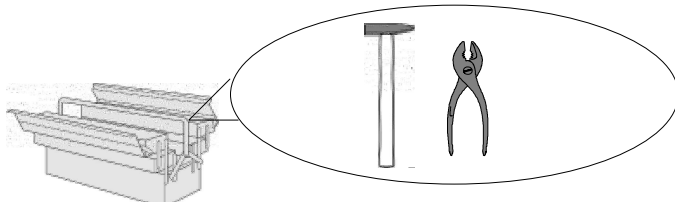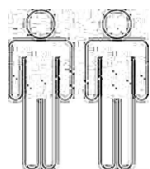

Service • Dienstverlening • Serwis • Servis • Сервисная служба

Name • Naam • Nazwa • İsim • Название

Carolina MA

Nr. • No. • Номер







11798322

Typ • Type • Тип • Тип


Polsterbett 160/180 x200



schwarz/weiß

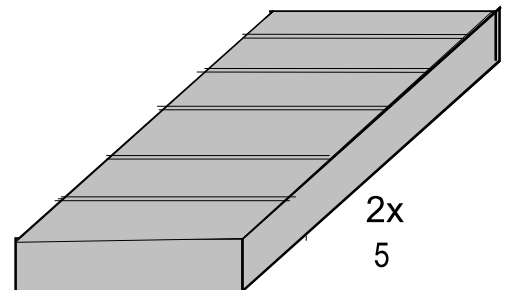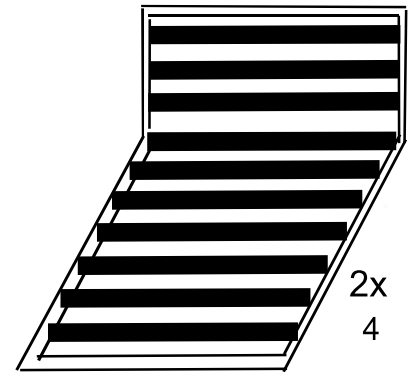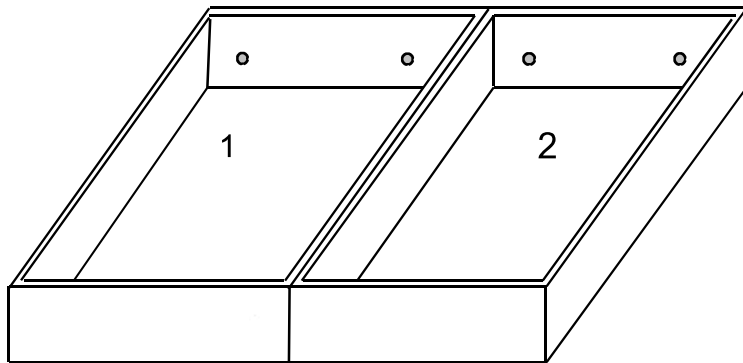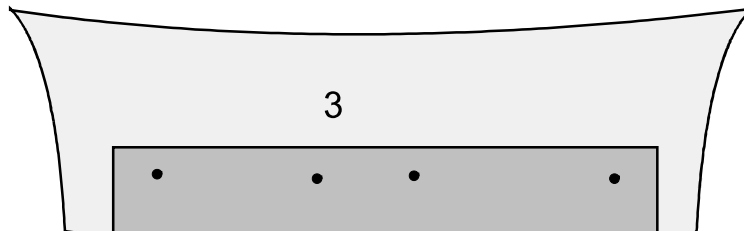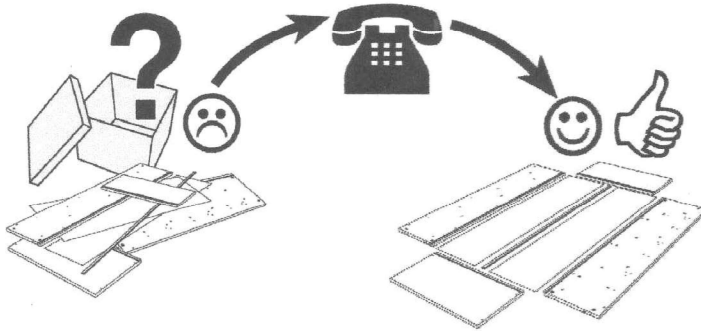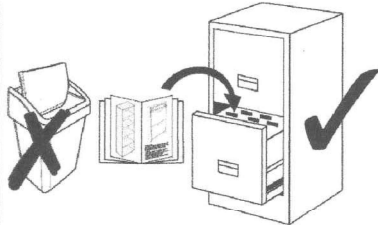

A	4X	B	4X	C	1X
M 8 X 60		M 8			

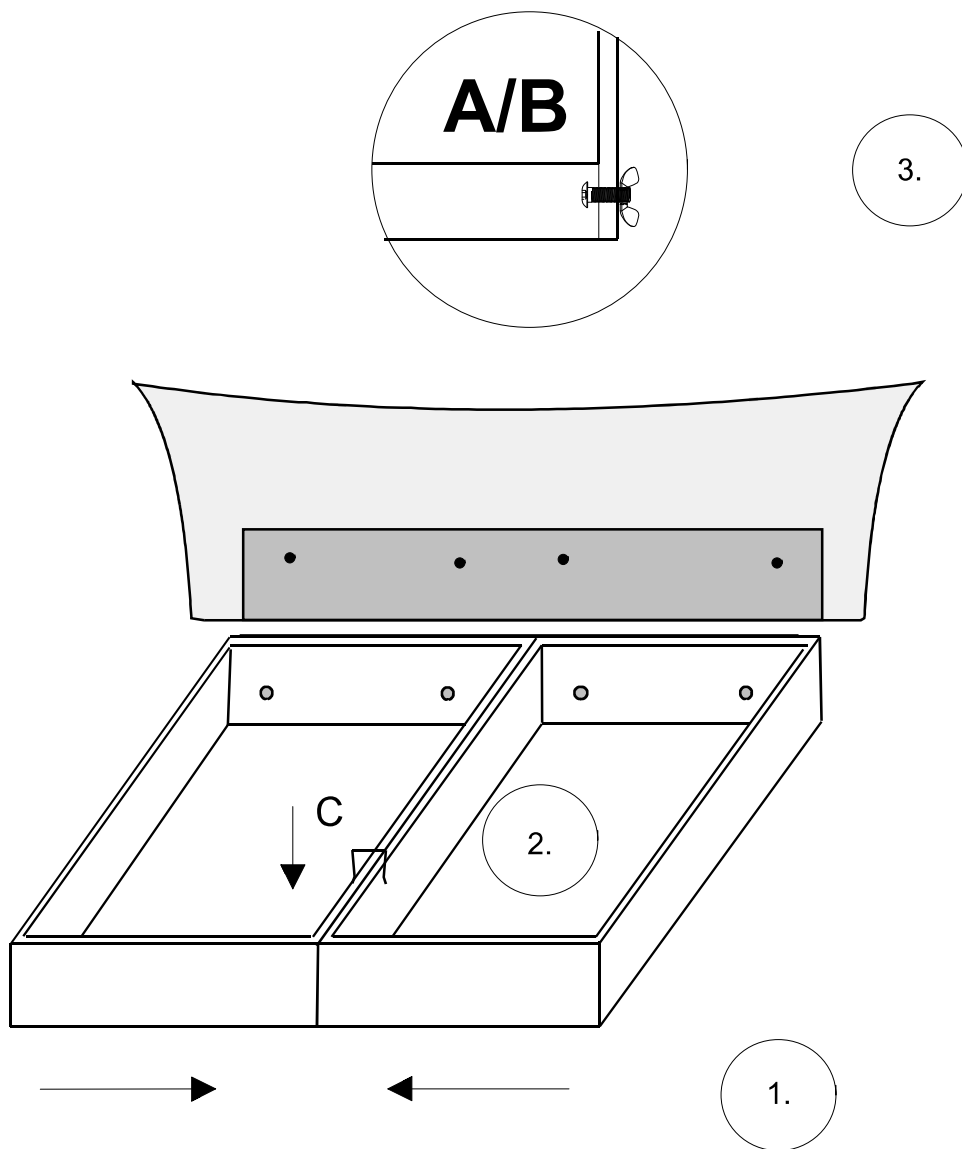

4.

D Rahmen in Normalstellung bringen und Matratze einlegen

GB Bed frame in normal position and insert mattress

NL Bedframe in de normale stand en steek matras

PL SZAFY w normalnej pozycji i wstawic materac

TR Normal konumda ve eklemek Yatak çerçeve silte

RU Каркас кровати в нормальное положение и вставить матрас

RO Rame de pat în pozitie normala si se introduce saltea

I Struttura letto in posizione normale e inserire materasso

F Cadre de lit en position normale et insérez matelas

SL Rám postele v normálnej polohe a vložte matrace

CZ Rám postele v normální poloze a vložte matrace

H Ágykeret normál helyzetben és helyezze matrac