

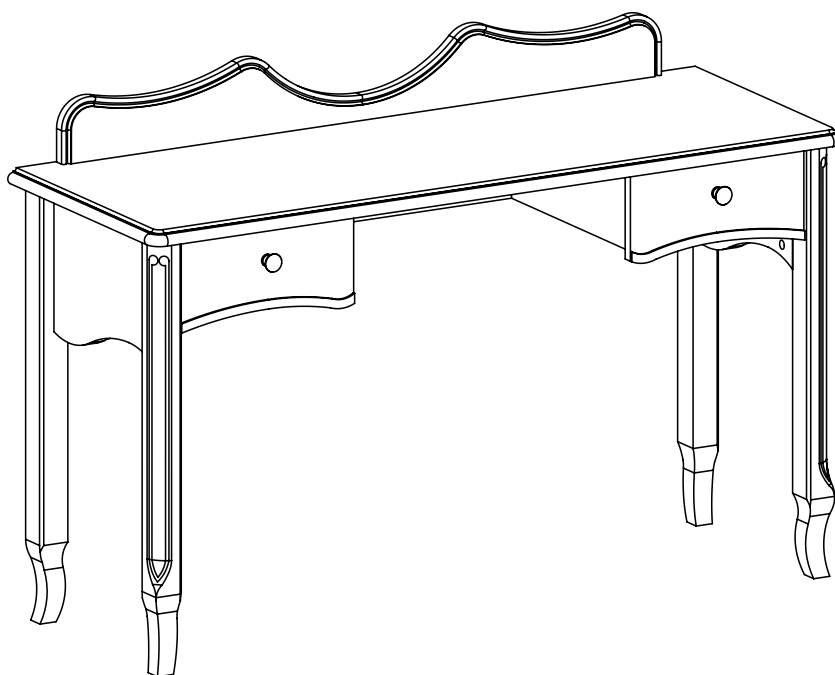
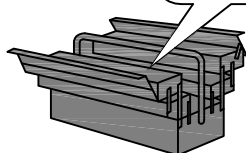


Art. Nr 1948 7443

LKZ 41569

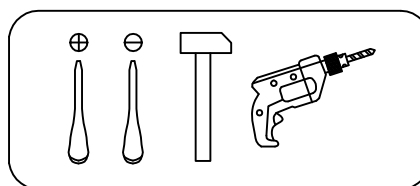

- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montazu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instruktiuni de montaj |
| (TR) Montaj talimati | (RU) Инструкция по монтажу |

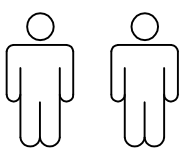


A 3674 7x44 x32	B 3676 15x12 x24	C 3680 15x10 x8	D 1762 8x35 x20	E 0234 7x50 x20
F 0564 7x38 x4	G 0111 x1	H 2708 x4	I 3968 L=350 x2	J 0449 3,5x13 x24
K 2286 x2	L 2855 M4x22 x2	M 3748 x8	N 2915 x12	O 0953 3,5x16 x16
P 0524 8x40 x2	Q 0455 4x40 x2	R 3226 x2	S 3678 x4	T 3980 DELAVITA x1
















Service - Dienstverlening - Serwis - Servis - Сервисная служба	
Name - Naam - Nazwa - Isim - Название	
Nr. - No. - Номер	
Тур - Type - Тип	




N	Size/MaB (mm)	Qty	✓	N	Size/MaB (mm)	Qty	✓
1	322x242x26	1		11	372x291x16	2	
2	322x242x26	1		12	1300x470x25	1	
3	725x50x50	1		13	1168x134x16	1	
4	725x50x50	1		14	1120x130x22	1	
5	725x50x50	1		15	350x70x12	2	
6	725x50x50	1		16	350x70x12	2	
7	372x134x16	1		17	241x70x12	2	
8	372x134x16	1		18	251x350x3	2	
9	372x134x16	1		19	324x154x21	1	
10	372x134x16	1		20	324x154x21	1	

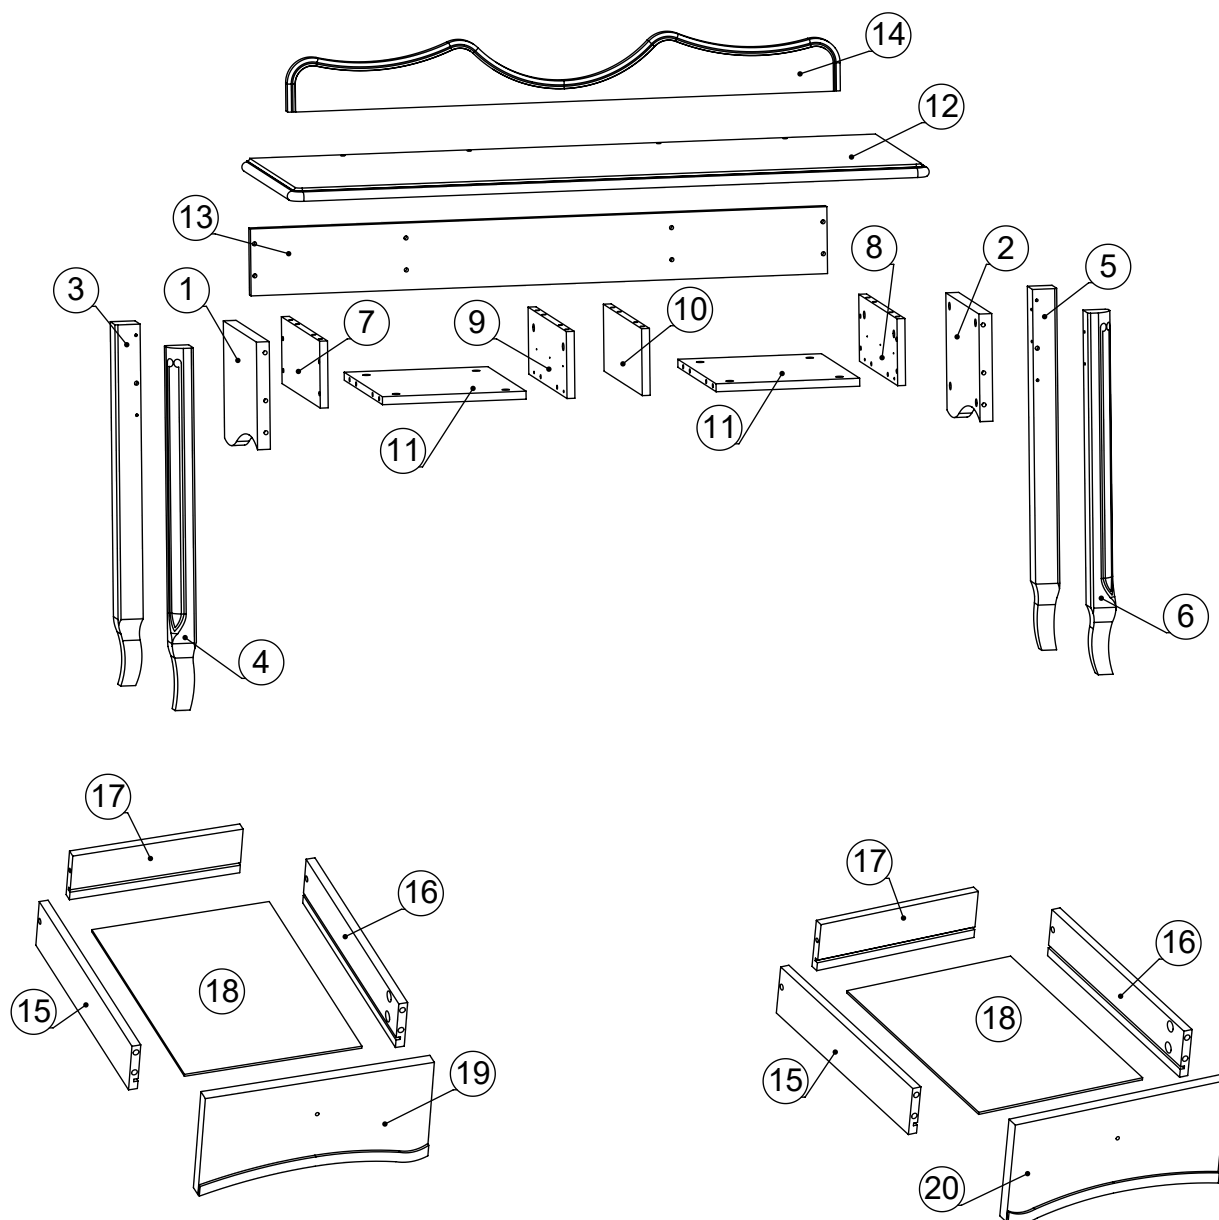

1

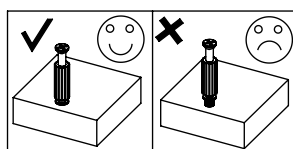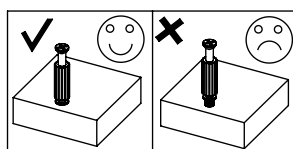
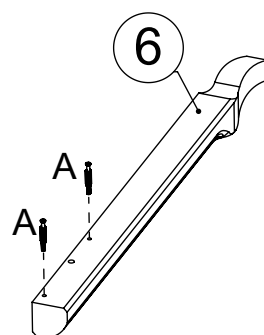
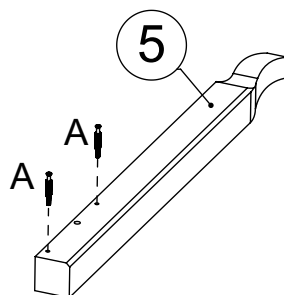
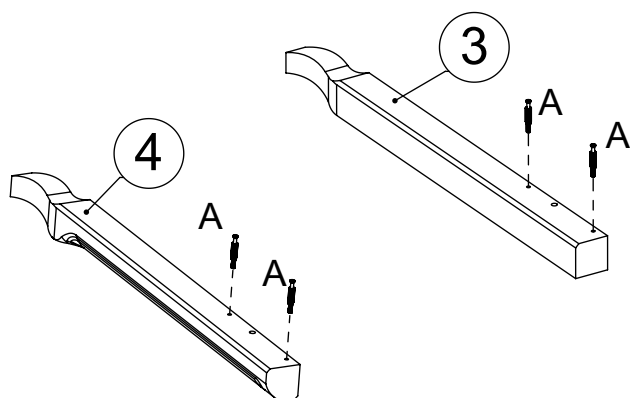
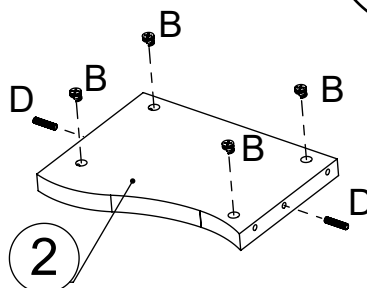
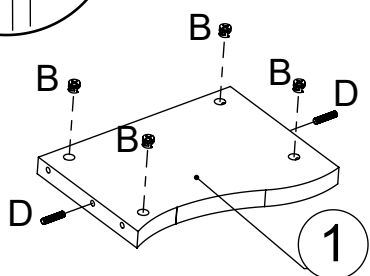
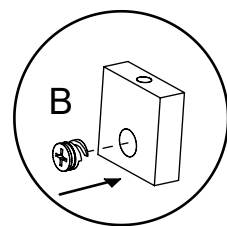
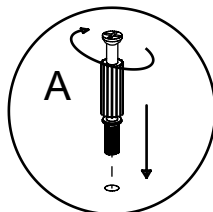
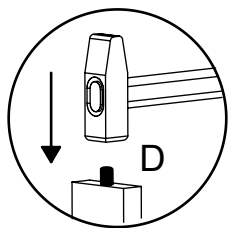
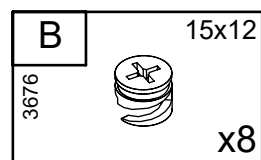
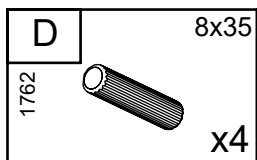
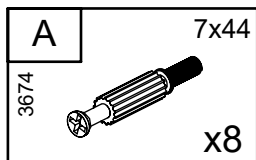


2

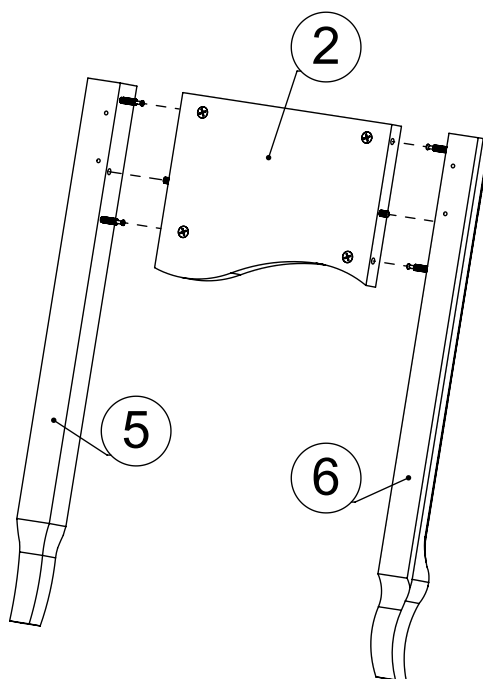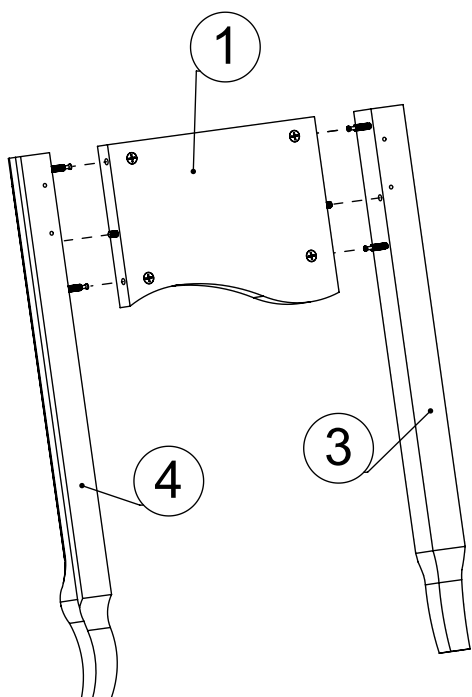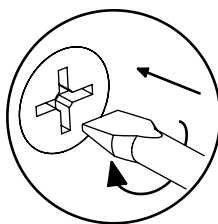







4

3

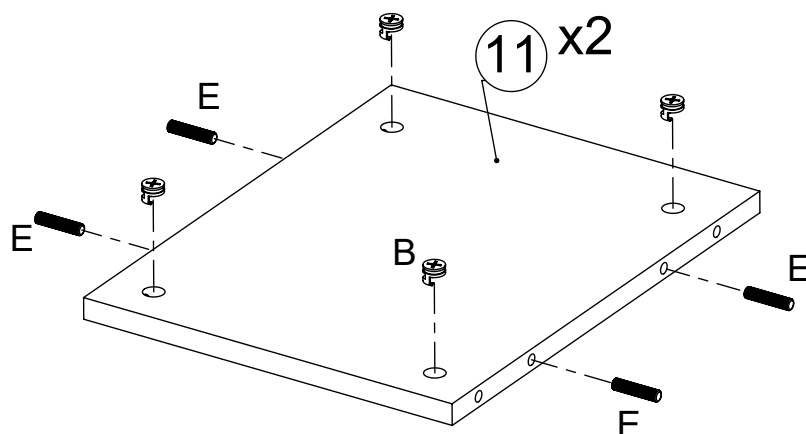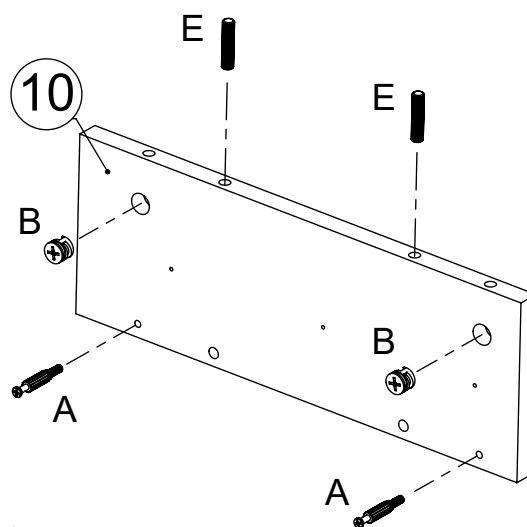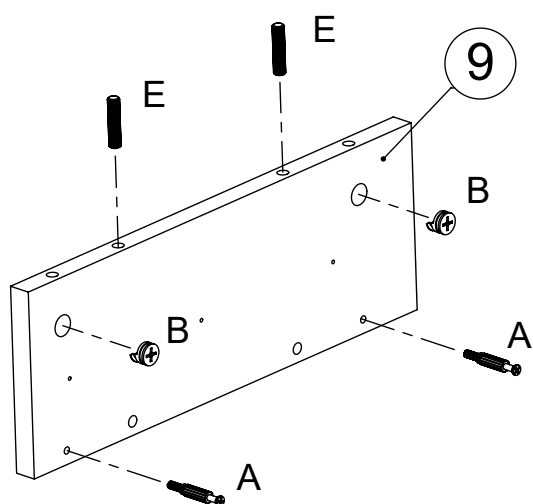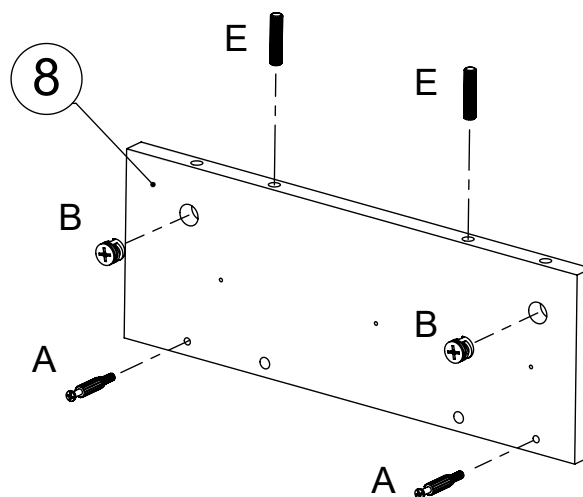
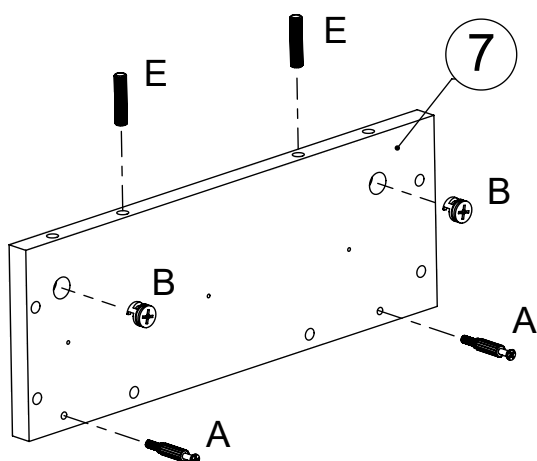
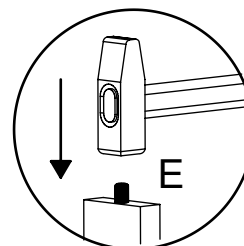
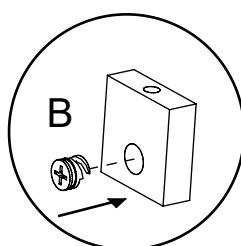
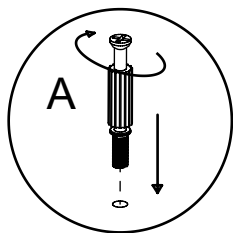
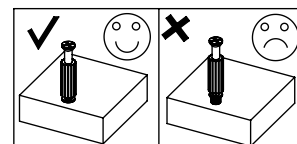
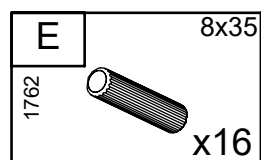
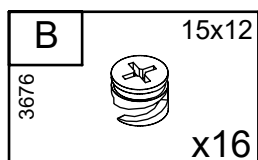
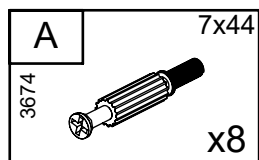


5

4

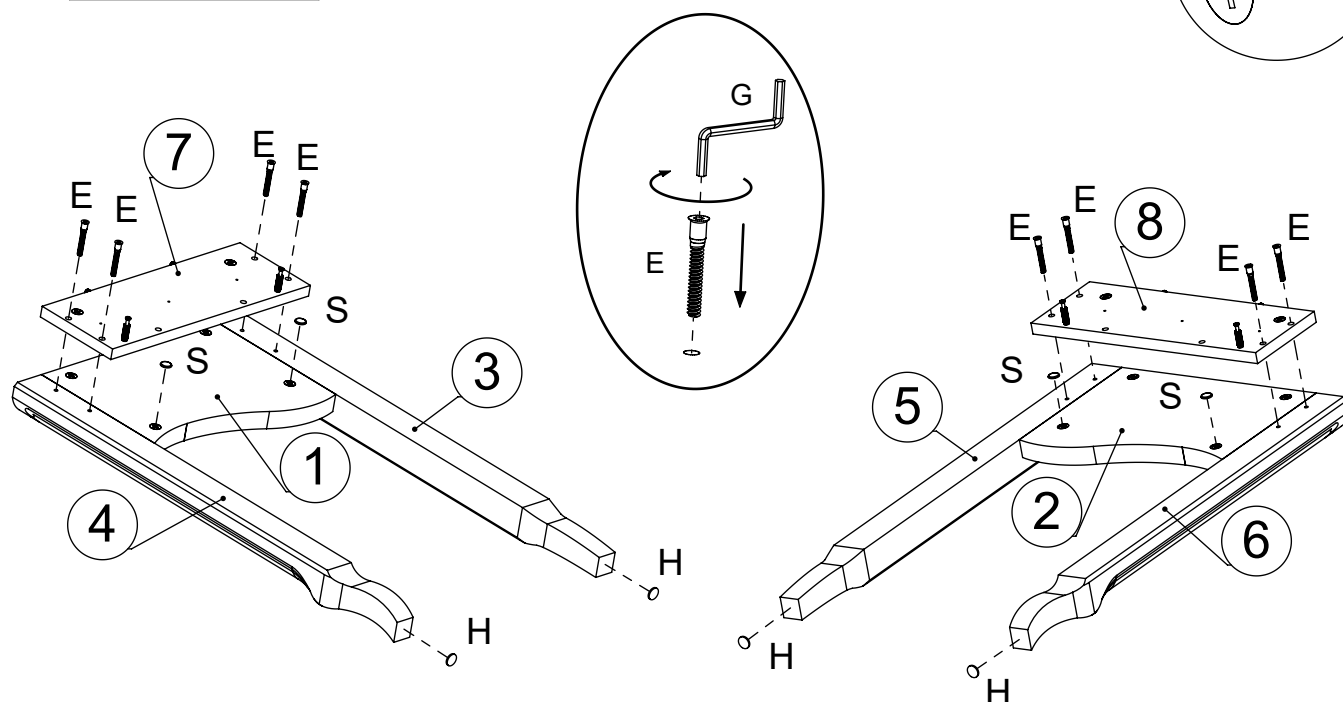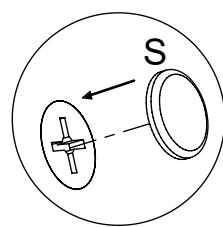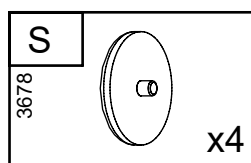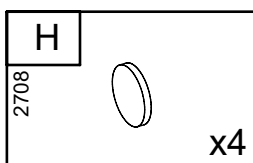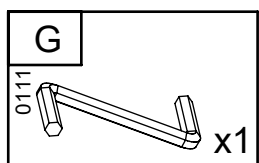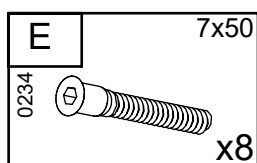


5

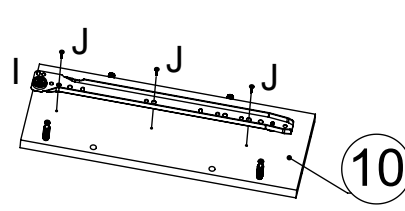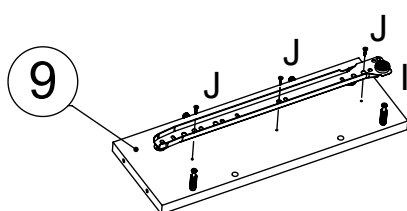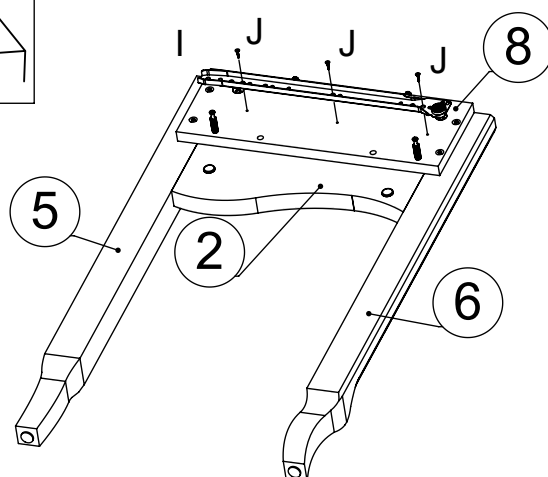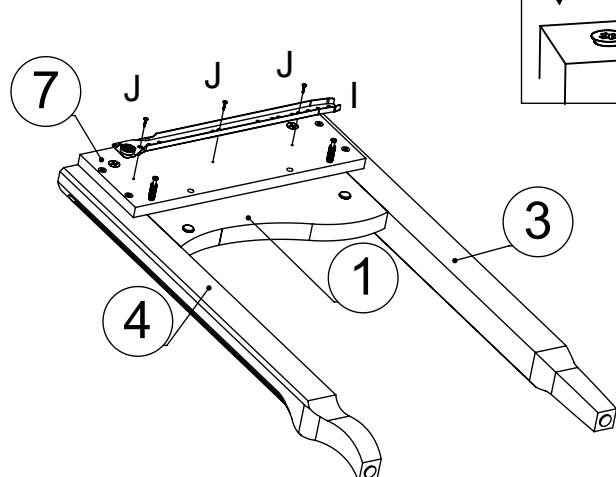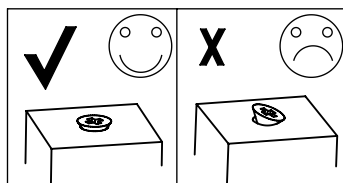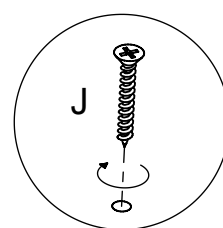
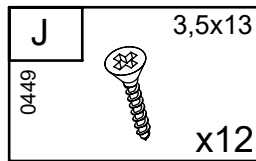
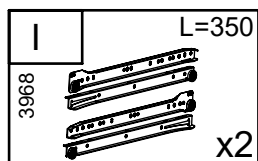
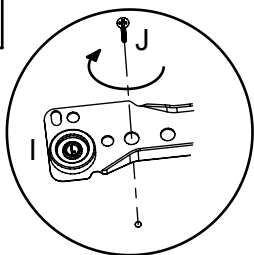


6

6


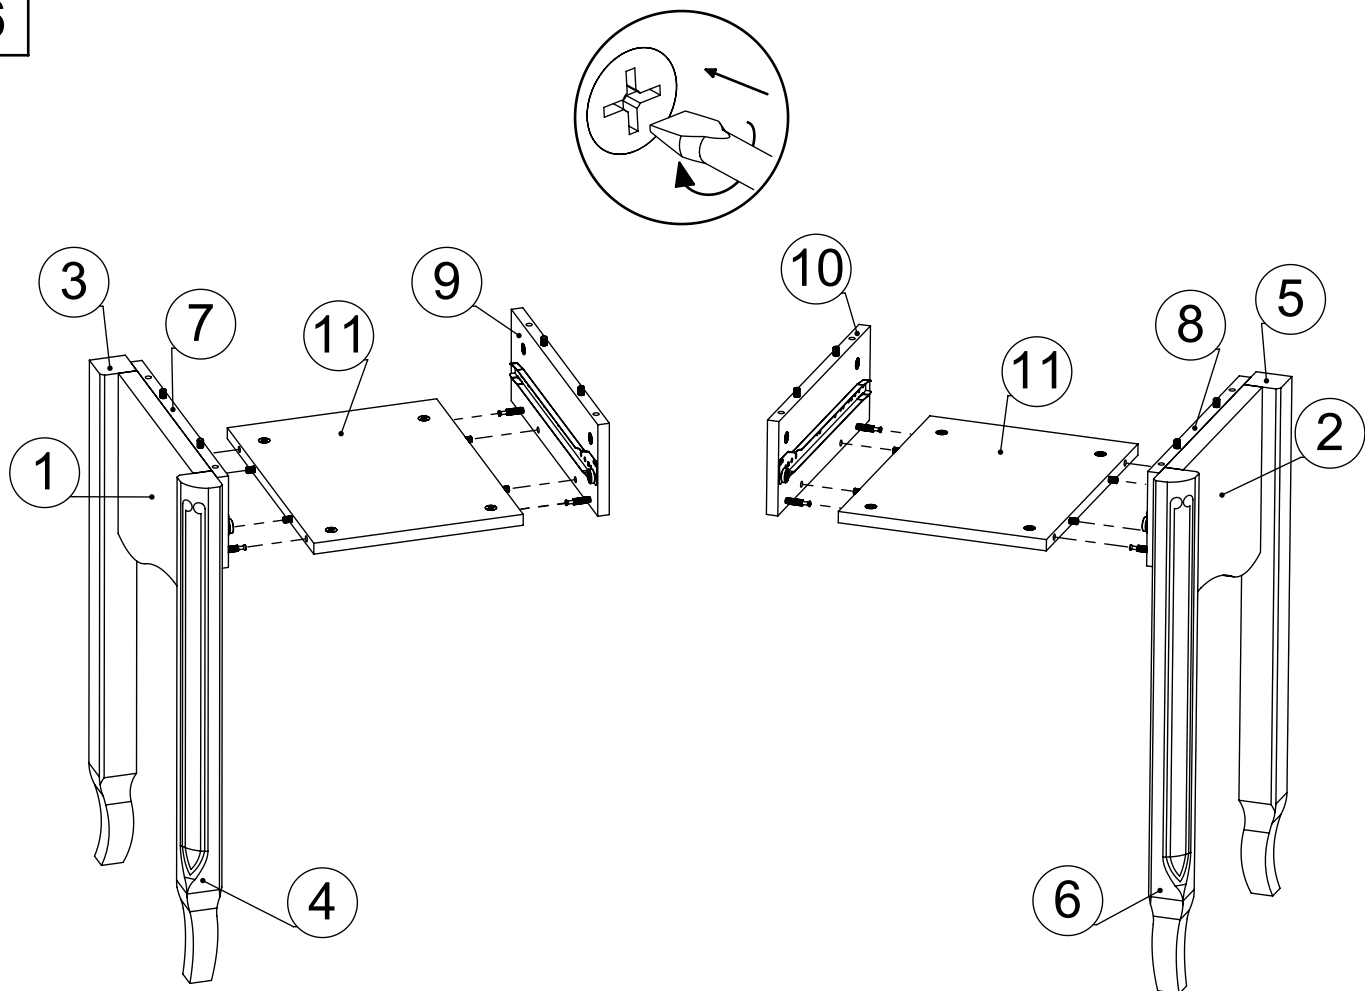


7

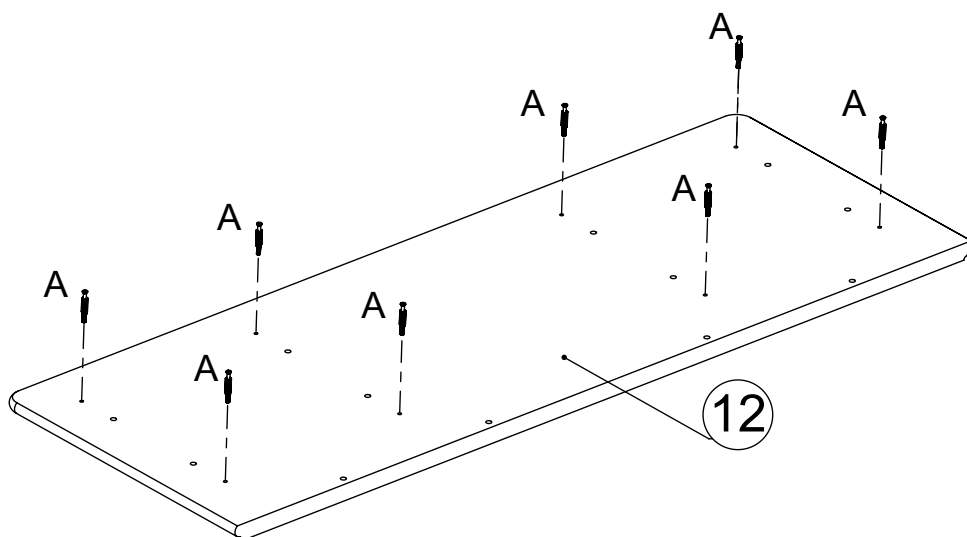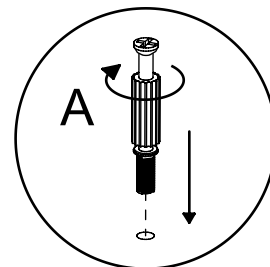
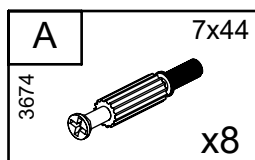
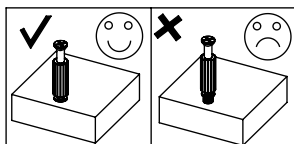


7

8



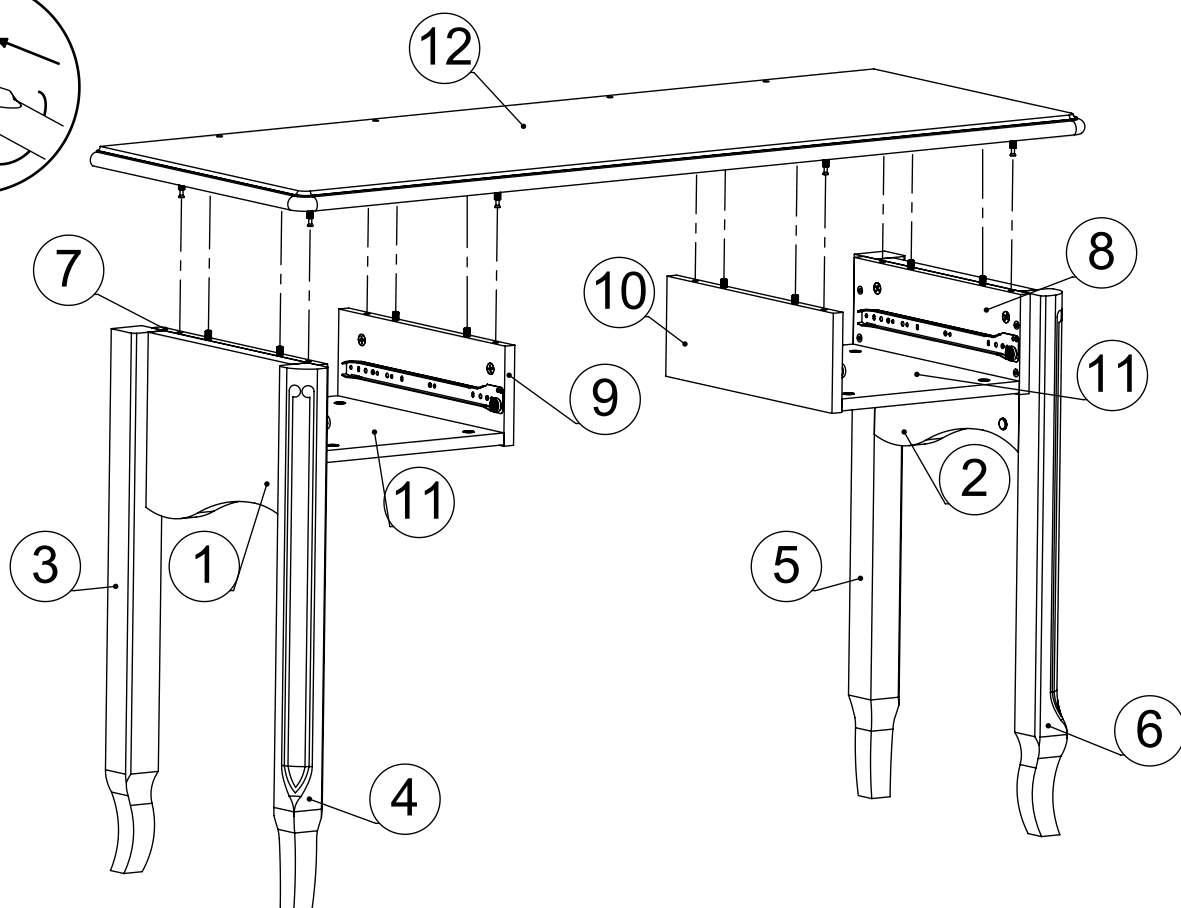
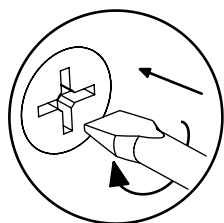


9









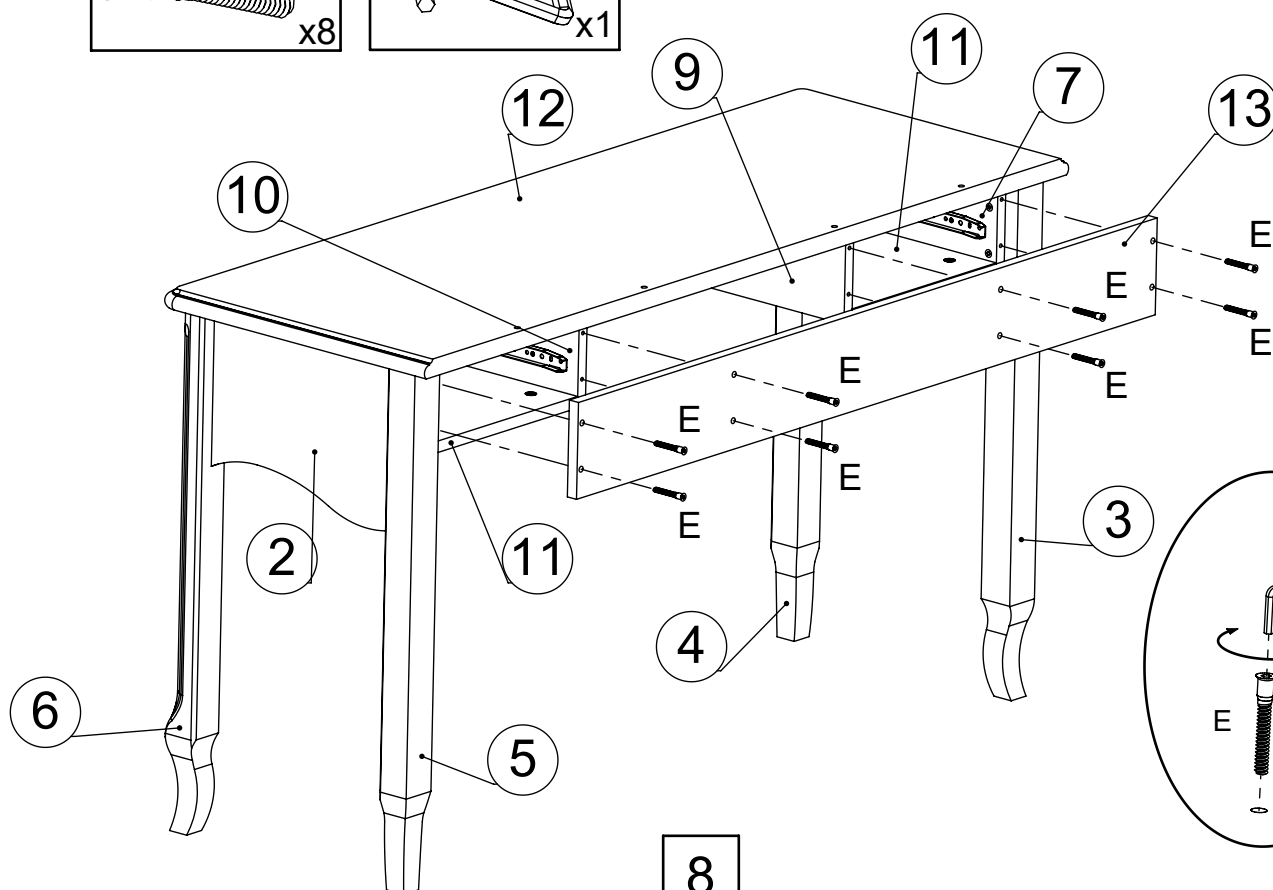
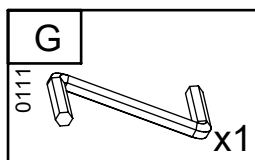
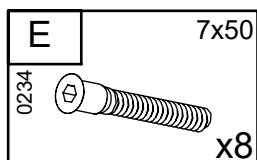


8

10


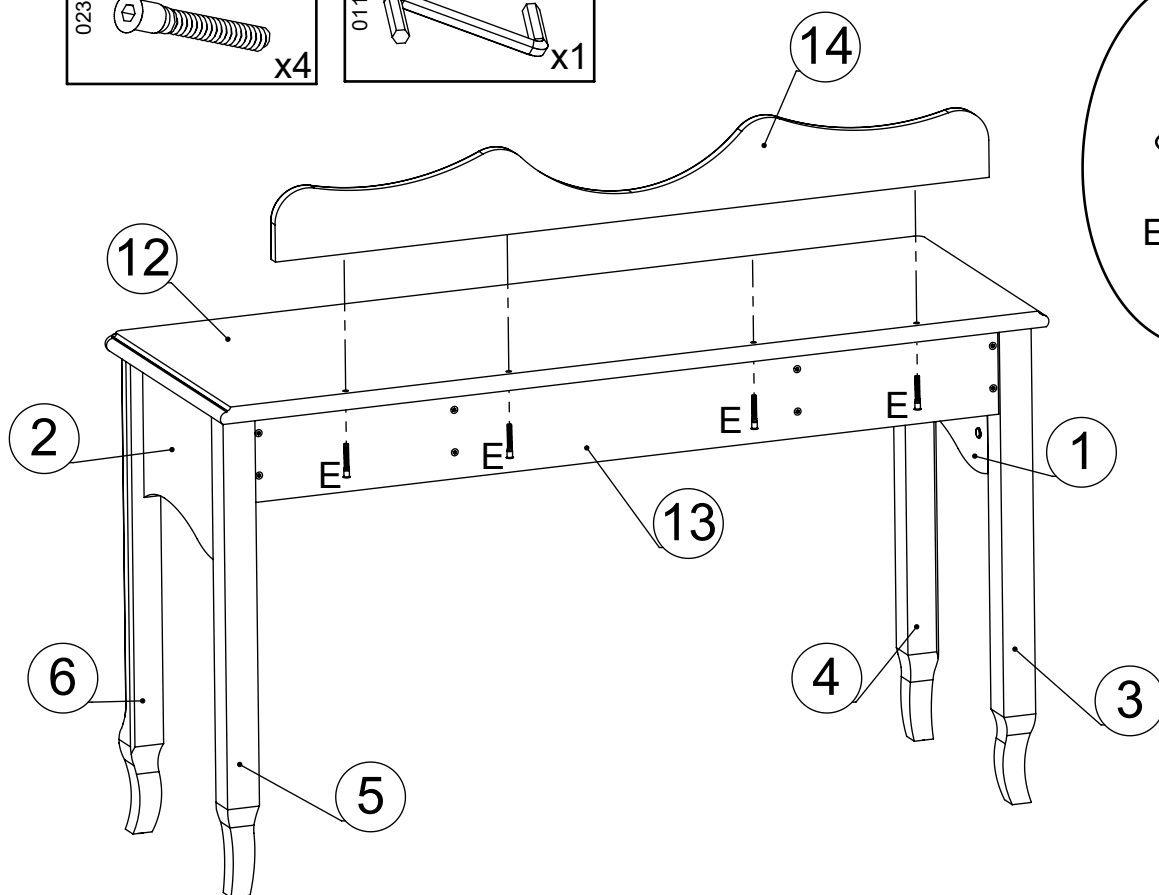
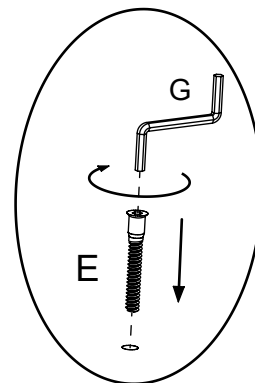
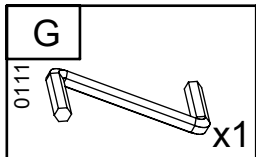
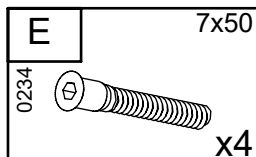


11

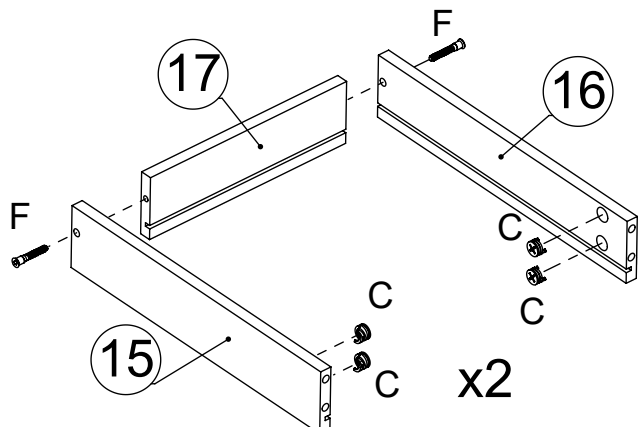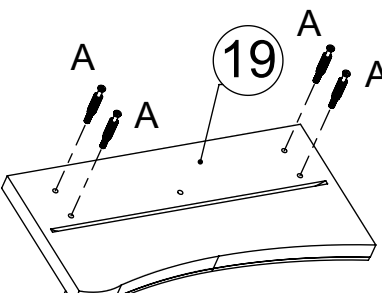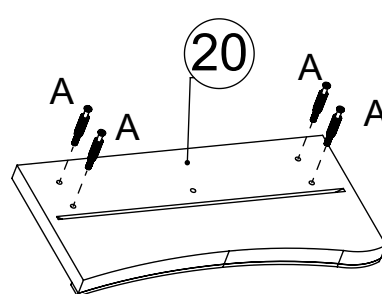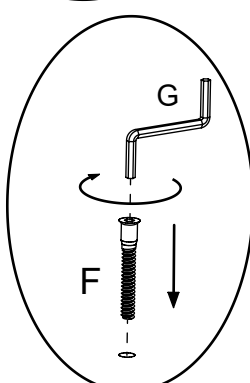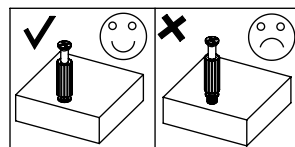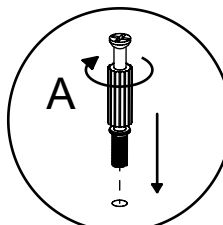
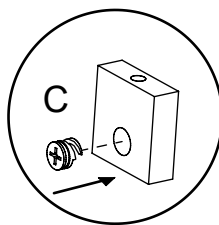
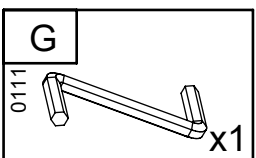
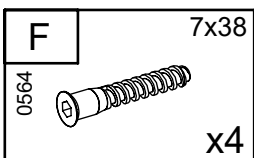
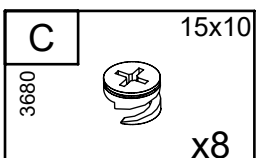
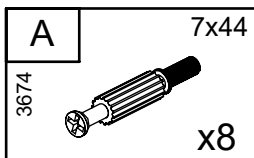


9

12



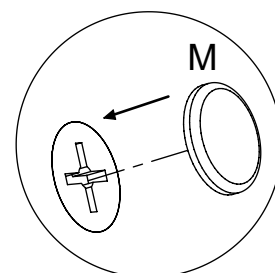
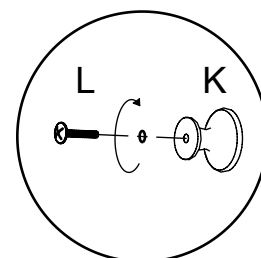
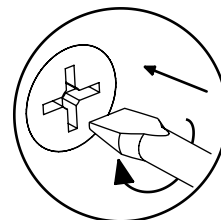
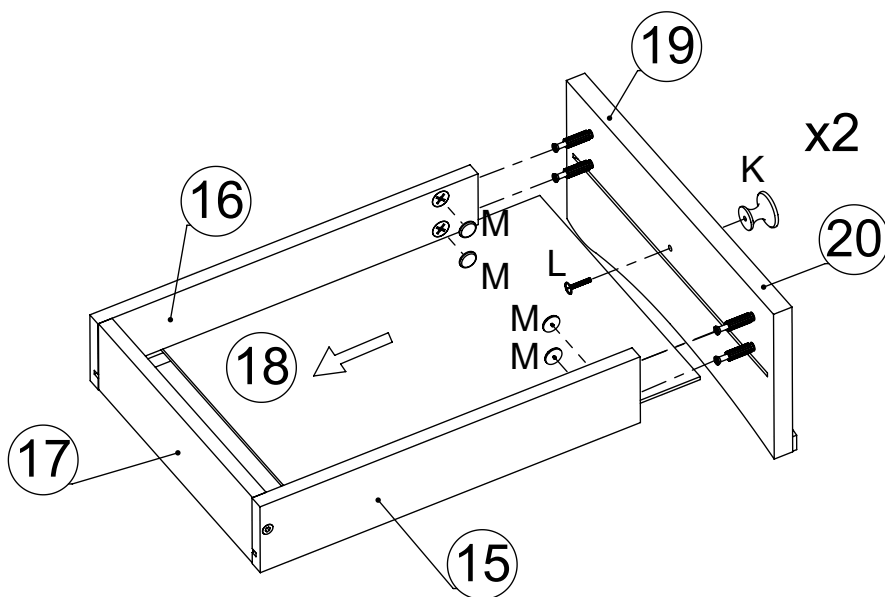
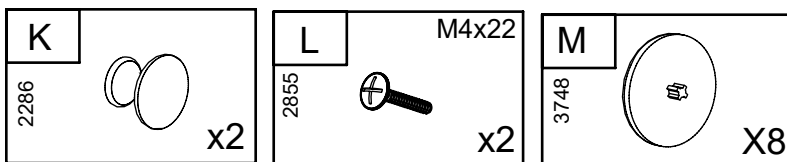


13

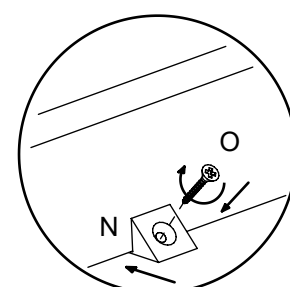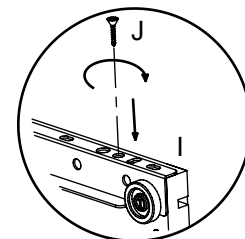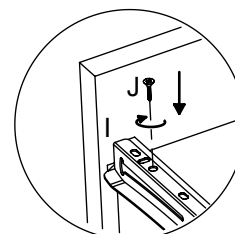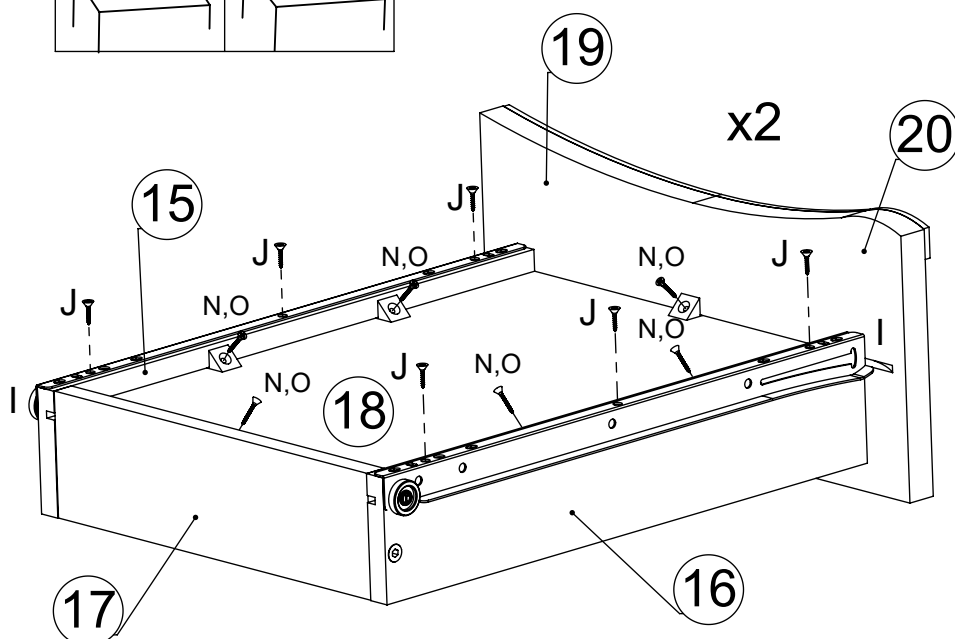
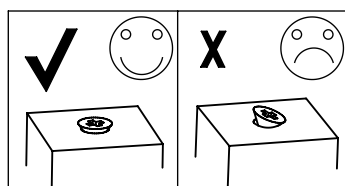
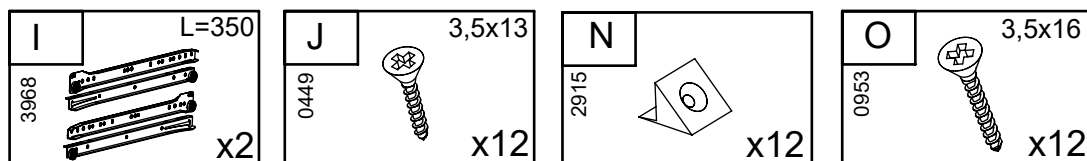


10


14

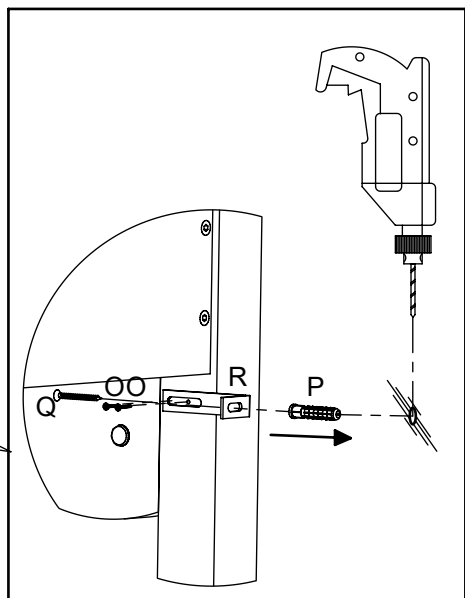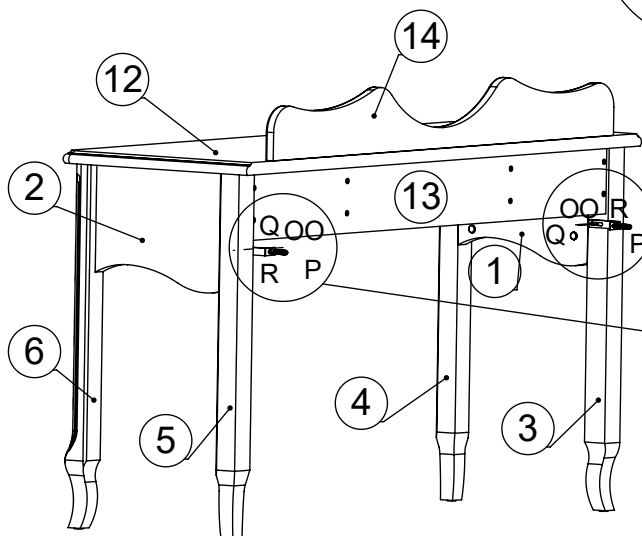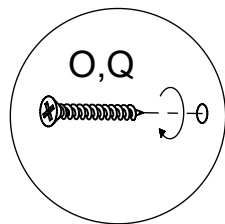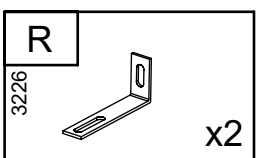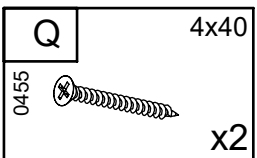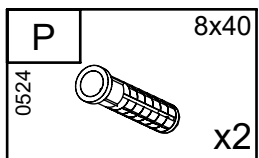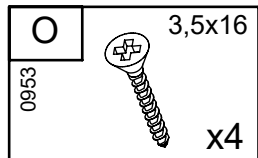


15

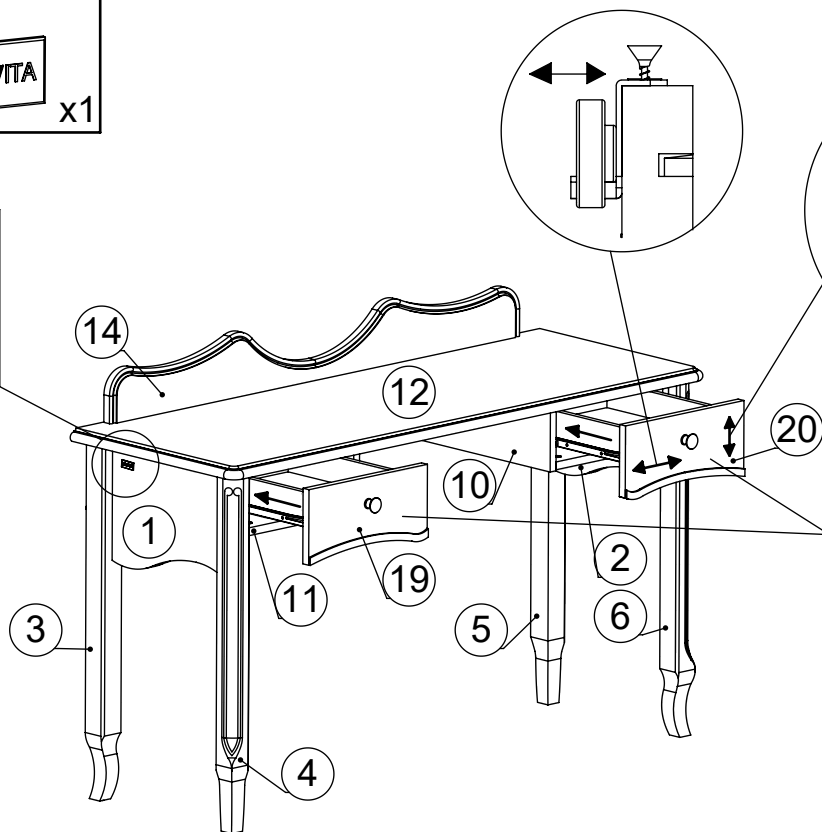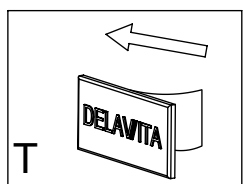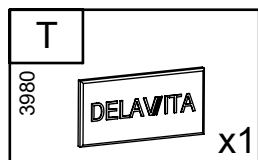

5kg

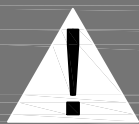

Achtung • Attention • Attenzione
Opgelet • Uwaga • Pozor • Figyelem
Atenție • Dikkat • Внимание

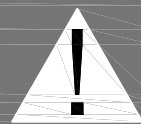

(D)	Wandbefestigung dient als Kippschutz — unbedingt anbringen! Bei einigen Wandtypen kann ein Spezialdübel erforderlich sein!
(GB)	The wall fastening serves to prevent tipping — be absolutely sure to mount it! For certain wall types, a special wall plug may be necessary!
(FR)	La fixation murale sert de protection contre le basculement — à installer impérativement ! Pour certains types de murs il faut des chevilles specials !
(IT)	Il fissaggio alla parete serve da protezione anti-ribaltamento — attaccarla assolutamente ! Per alcune strutture di parete può essere necessario un tassello speciale !
(NL)	Bevestiging aan de muur dient als kantelbescherming — zeker en vast bevestigen ! Bij enkele muurtypes is een speciale plug misschien vereist !
(PL)	Mocowanie do ściany jest jednocześnie zabezpieczeniem przed przewróceniem — koniecznie zamontować! Do niektórych rodzajów ścian koniecznie zastosować specjalne kołki mocujące.
(CZ)	Montáž na stěnu slouží jako ochrana proti převrhnuti — bezpodmienečně umístěte! Uněkterých typů stěn může být zapotřebi speciální hmoždinka !
(SK)	Upevnenie na stenu slúži ako ochrana proti prevráteniu — bezpodmienečne použite! Pre niektoré druhy stien môže byť potrebná špeciálna hmoždenka !
(HU)	A terméket a falhoz kel rögzíteni, különben az felborulhat! Egyes faltípusoknál speciális tiplit kell használni !
(RO)	Sistemul de fixare la perete servește ca protecție la răsturnare — de montat obligatoriu! Pentru unele tipuri de pereți este posibil să fie necesar un diblu special !
(TR)	Duvardaki sabitleme, devrilmeye karşı bir emniyet tedbiridir ve mutlaka monte edilmelidir! Bazı duvar tiplerinde bunun için özel bir düble gerekli olabilir !
(RU)	Обязательно установите крепление к стене во избежание опрокидывания ! Для некоторых типов стен может потребоваться специальный дюбель !