

MEDIA

OFFICE


LIVING









**MAJA**  
**MÖBEL**

---


# 4019

---

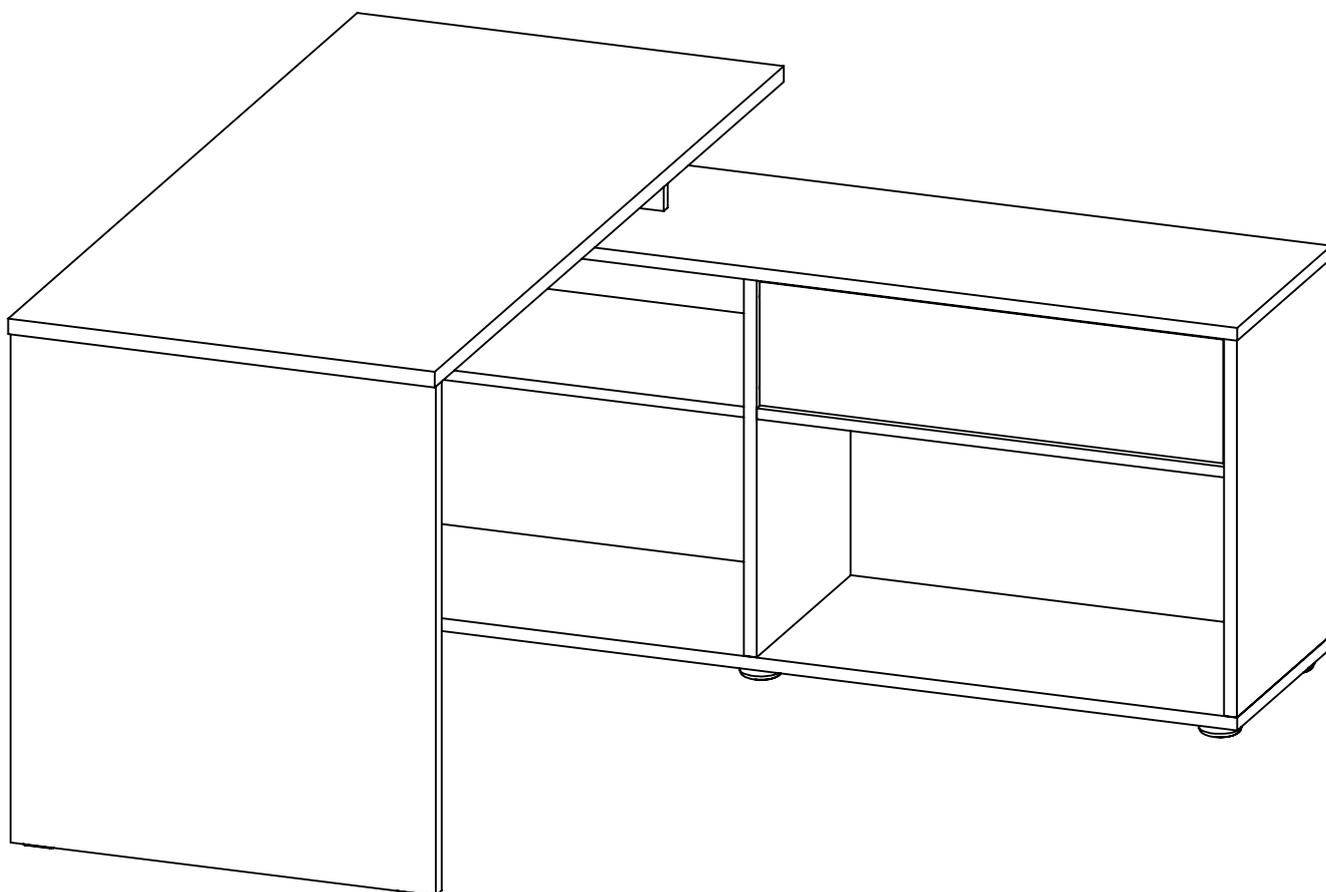

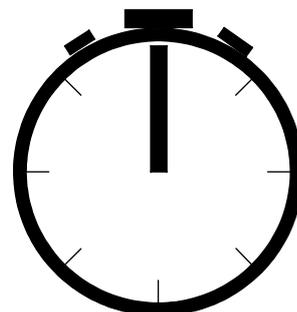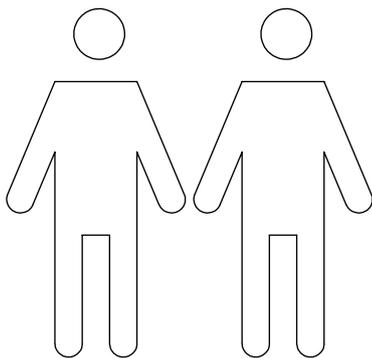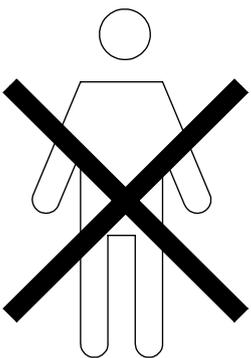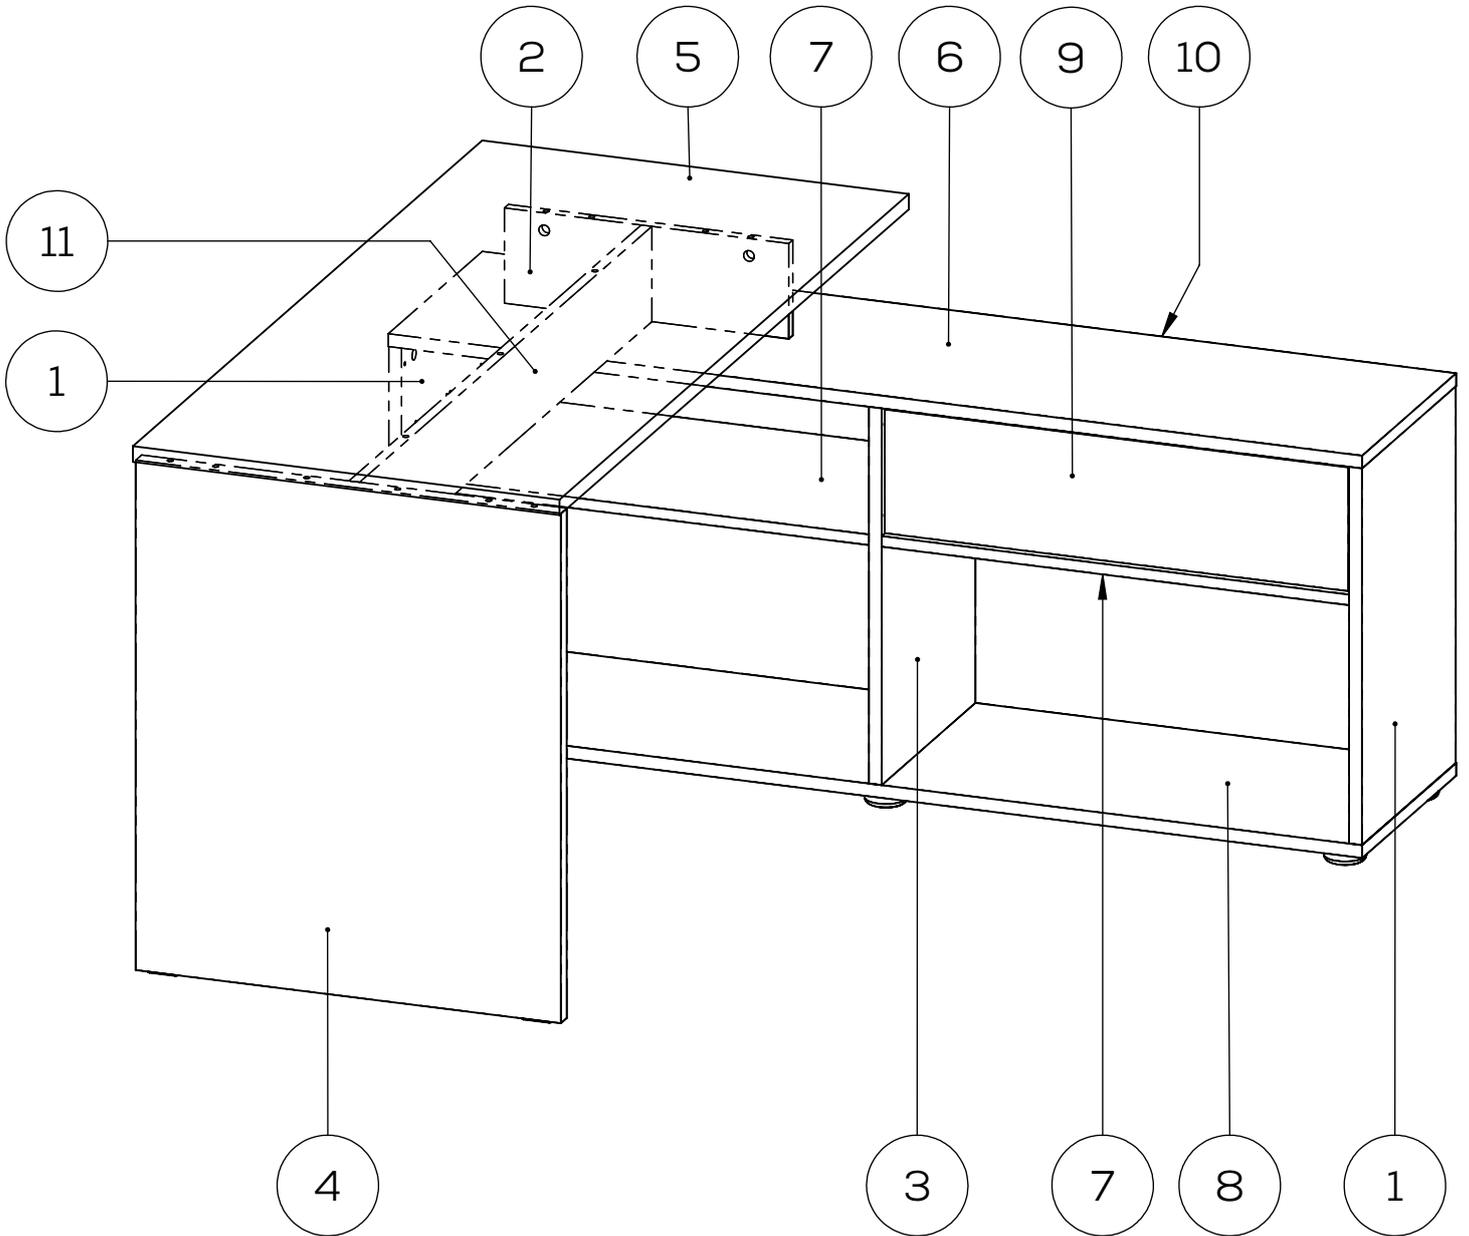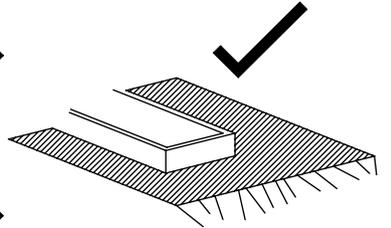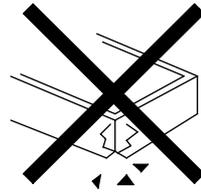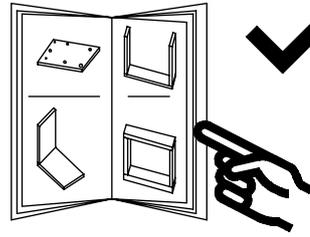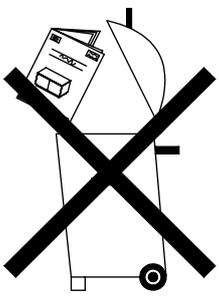















60 min











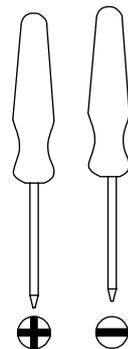




26.06.2019

1



maja-moebel.de

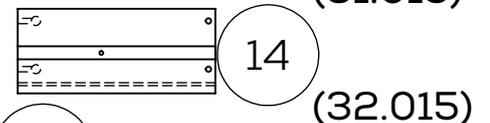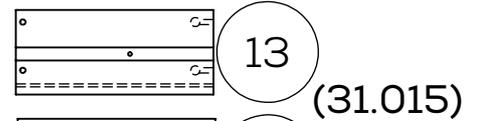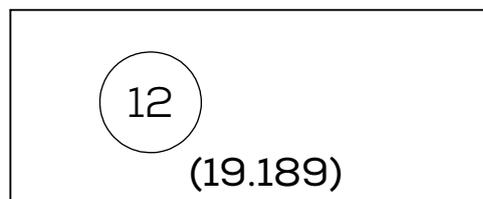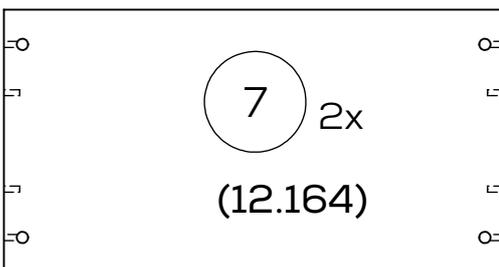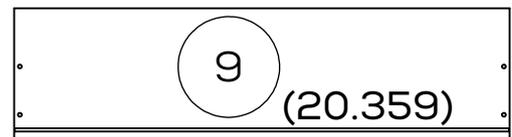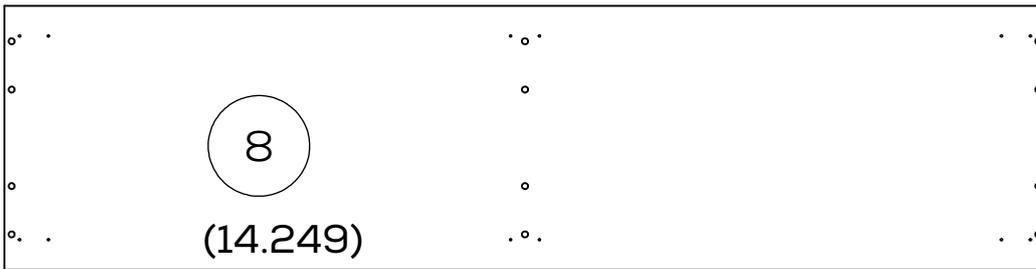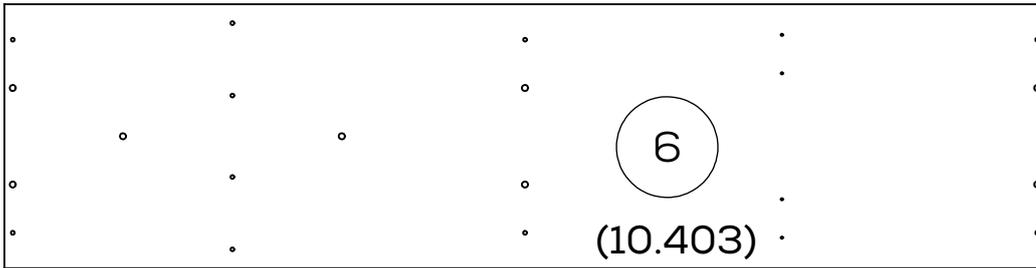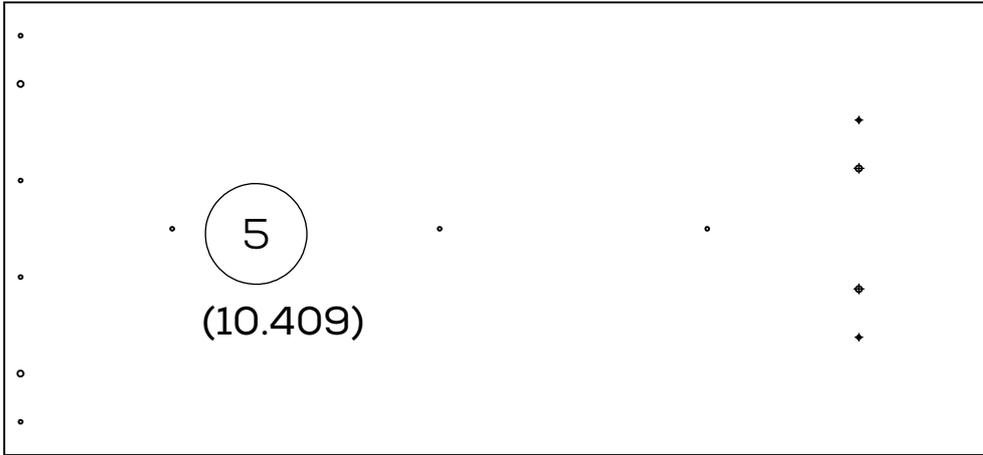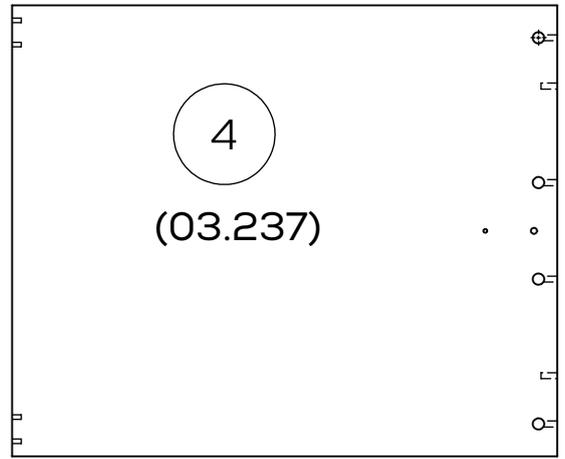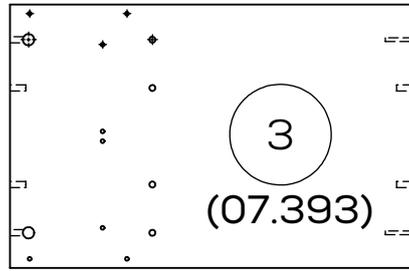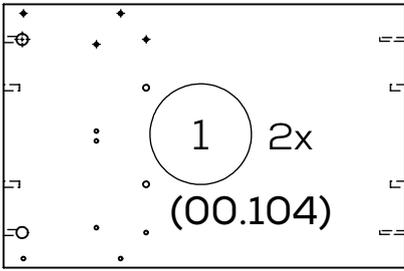

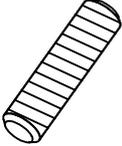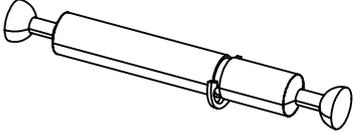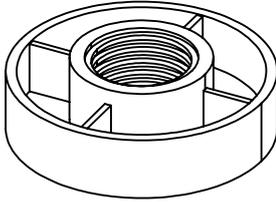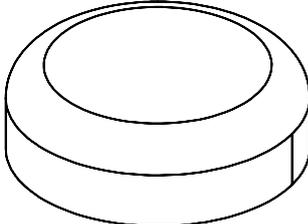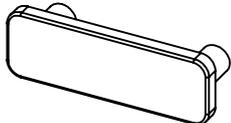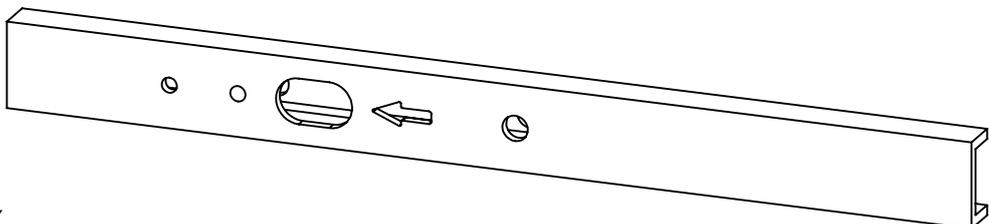
<p><b>A</b> (E701000)</p>  <p>30x</p>	<p><b>B</b> (E701153)</p>  <p>29x</p>	<p><b>C</b> (E701231)</p>  <p>27x</p>	<p><b>D</b> (E701010)</p>  <p>4x</p>
<p><b>E</b> (E700060)</p>  <p>4x Ø 4,0 x 40mm</p>	<p><b>F</b> (E701149)</p>  <p>2x</p>	<p><b>G</b> (E700000)</p>  <p>10x Ø 4,0 x 15mm</p>	<p><b>H</b> (E700570)</p>  <p>2x M4,0 x 9mm</p>
<p><b>J</b> (E700020)</p>  <p>2x Ø 3,0 x 12mm</p>	<p><b>K</b> (E701400)</p>  <p>8x</p>	<p><b>L</b> (E701292)</p>  <p>2x</p>	
<p><b>M</b> (E704475-1)</p>  <p>5x</p>		<p><b>N</b> (E704475-2)</p>  <p>5x</p>	
<p><b>O</b> (E709801)</p>  <p>1x</p>	<p><b>P</b> (E704303)</p>  <p>2x</p>	<p><b>Q</b> (E706332)</p>  <p>1x</p>	<p><b>R</b> (E706333)</p>  <p>1x</p>
<p><b>S</b> (E703334)</p>  <p>1x</p>	<p><b>T</b> (E703017)</p>  <p>2x</p>		

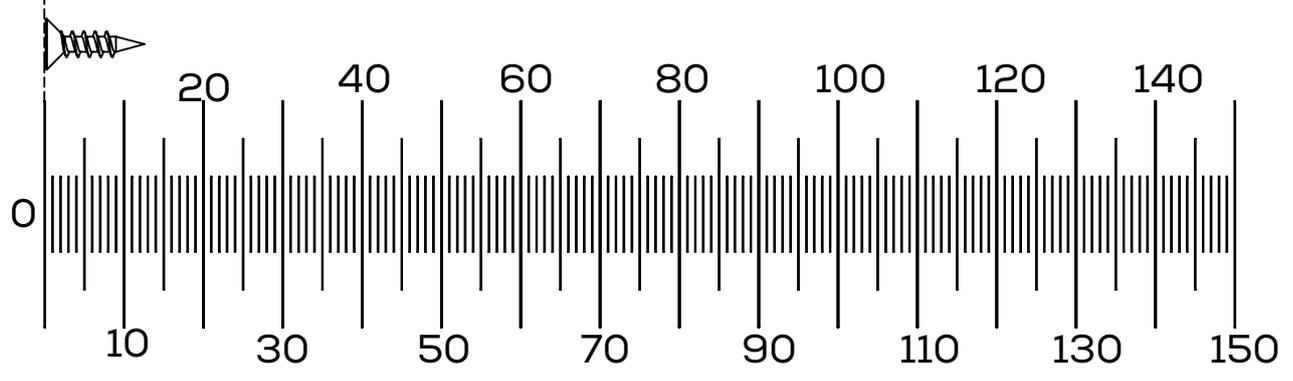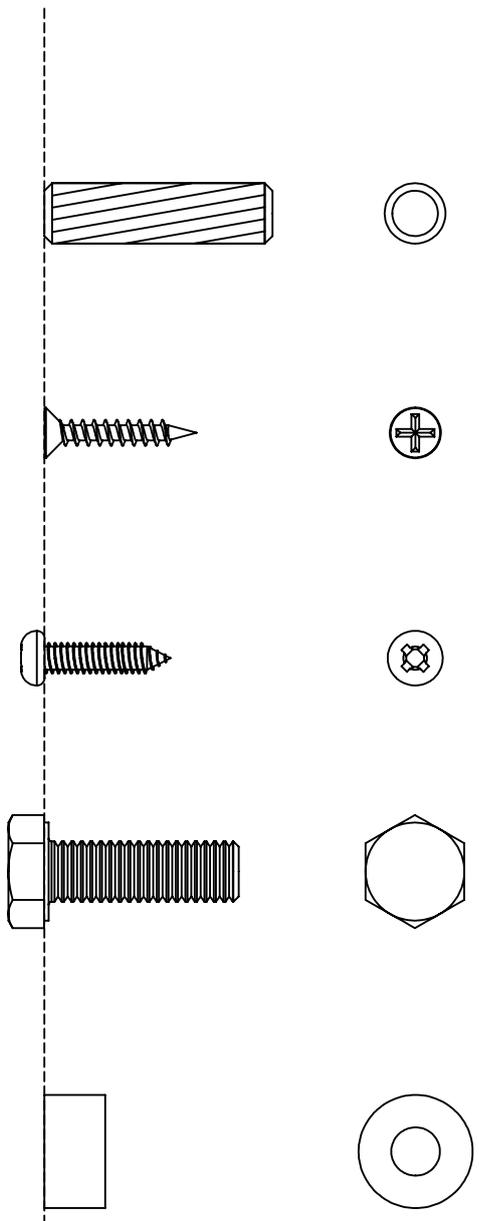



1

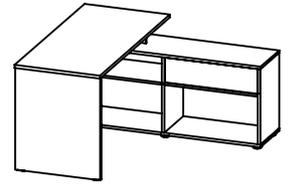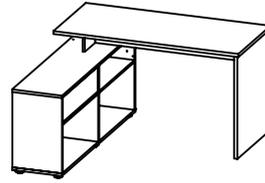

⇒ Step 21

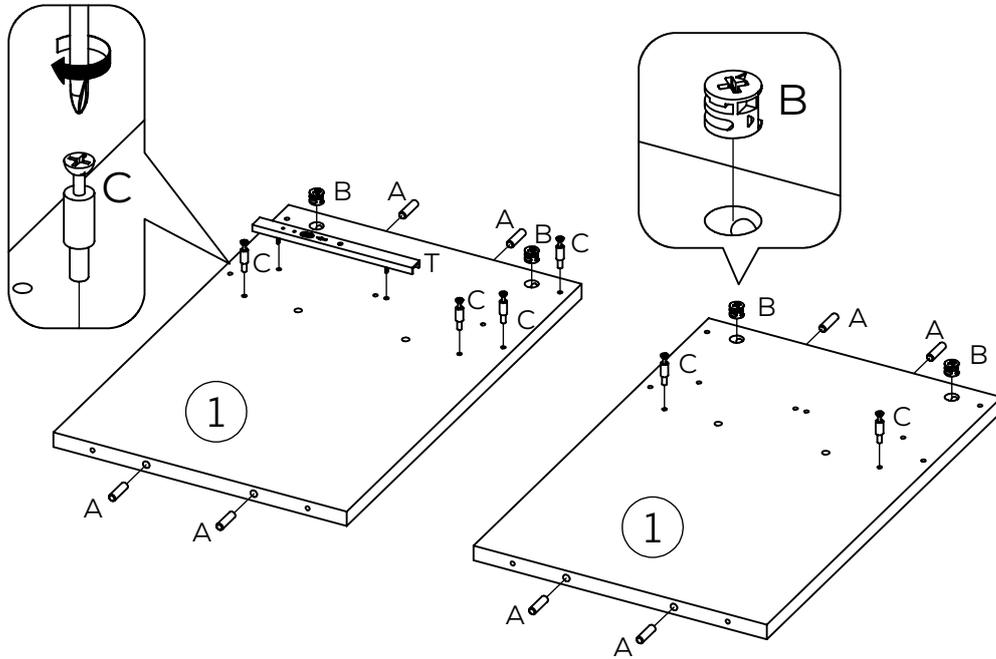



2

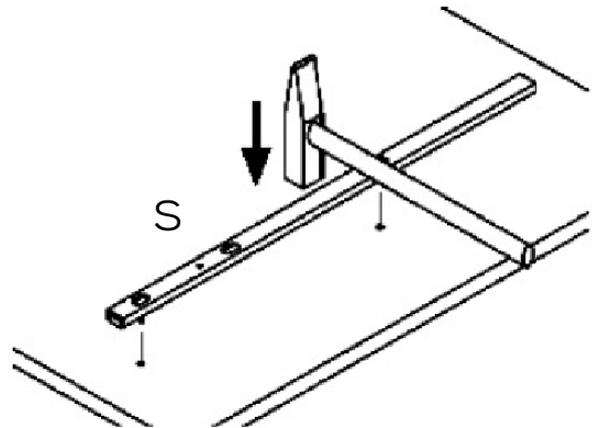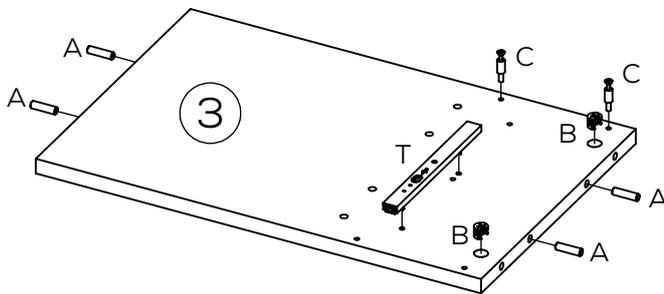

**ACHTUNG !!!**

Falsch


Richtig

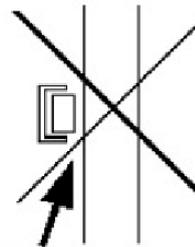

Schienen auf der Fläche aufliegend montieren.  
 Runners have to be flush mounted.  
 Montage affleuré pour les rails.


3







2x

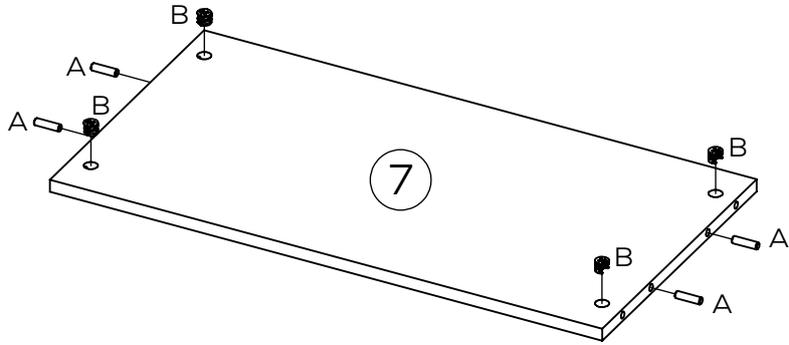


---

4

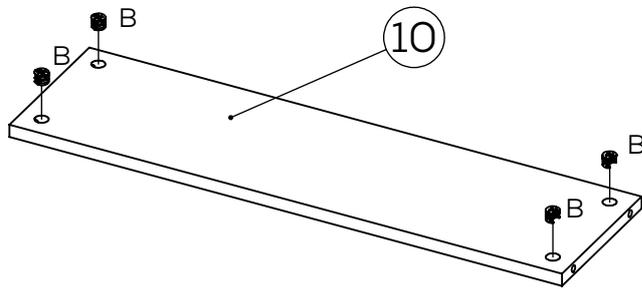


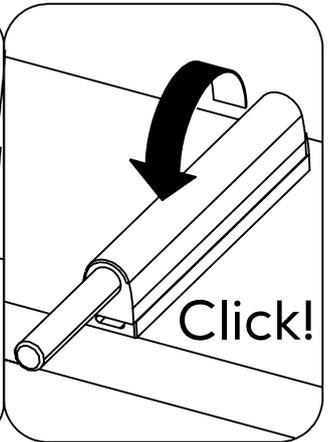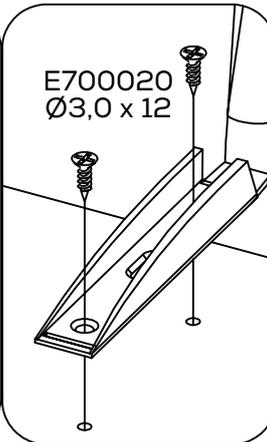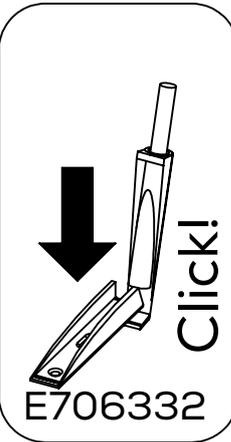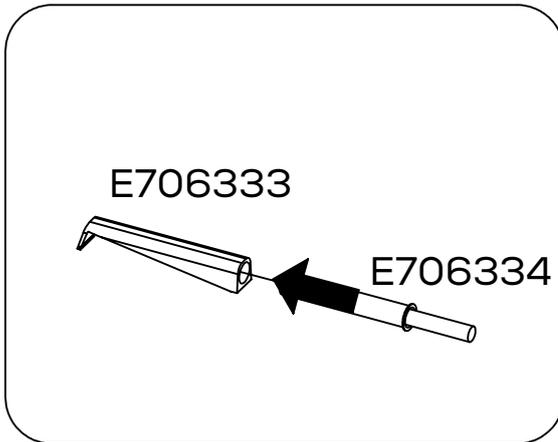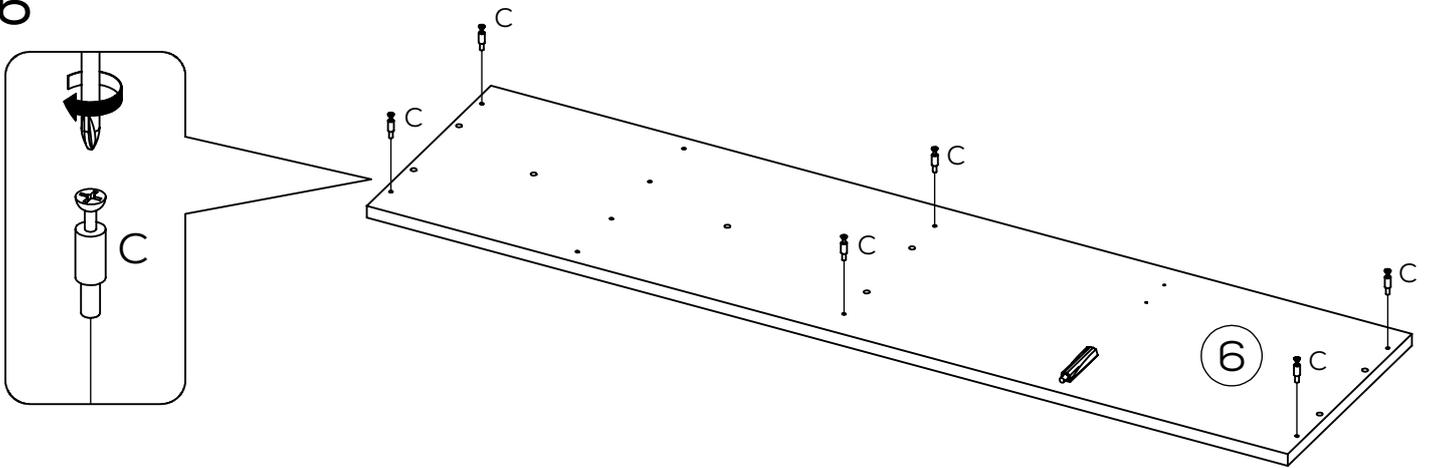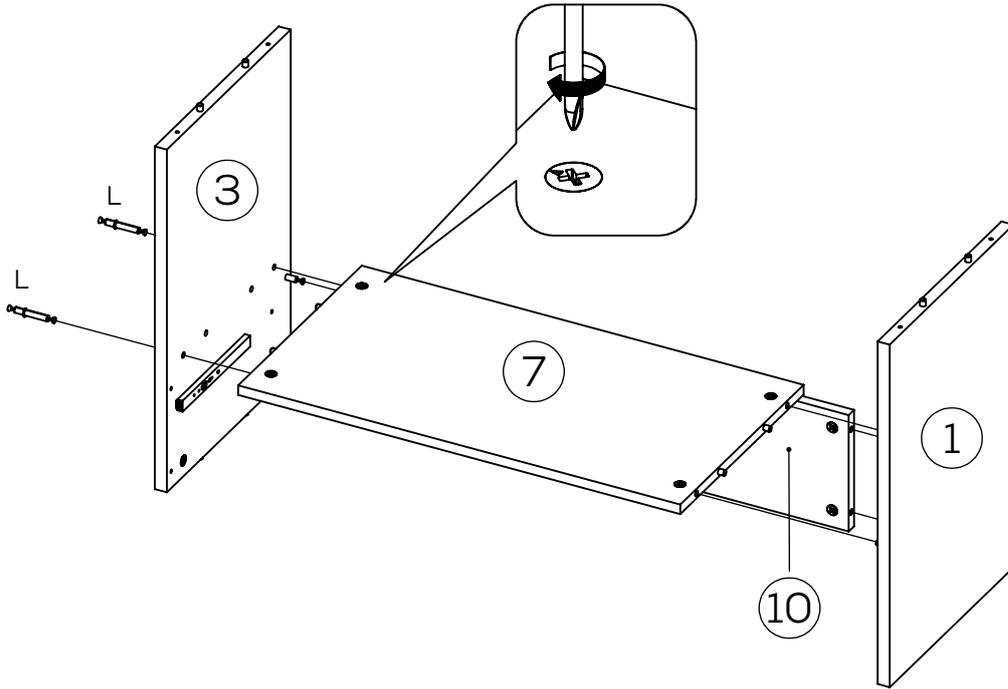


7

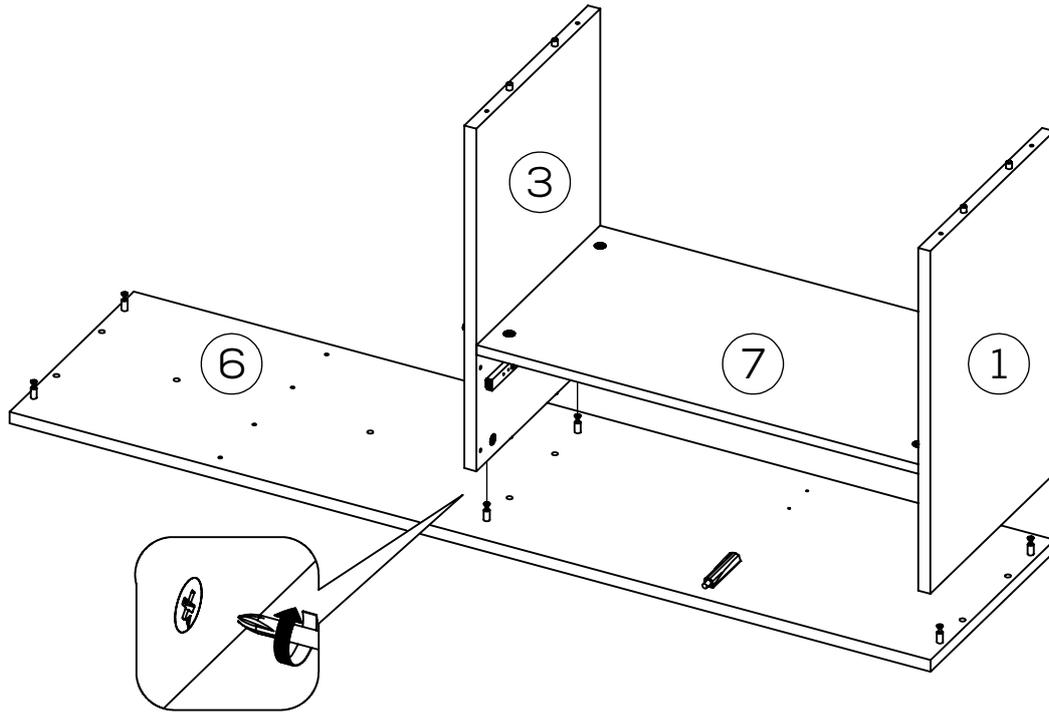


8

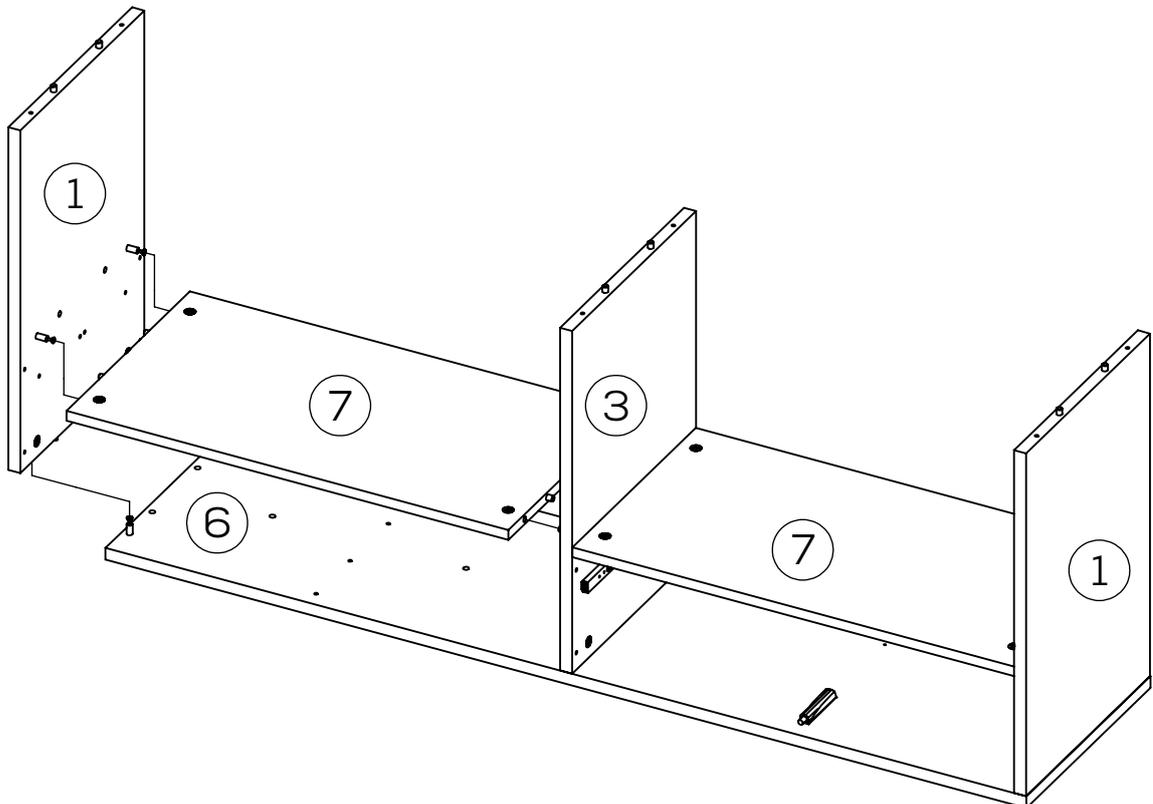


9

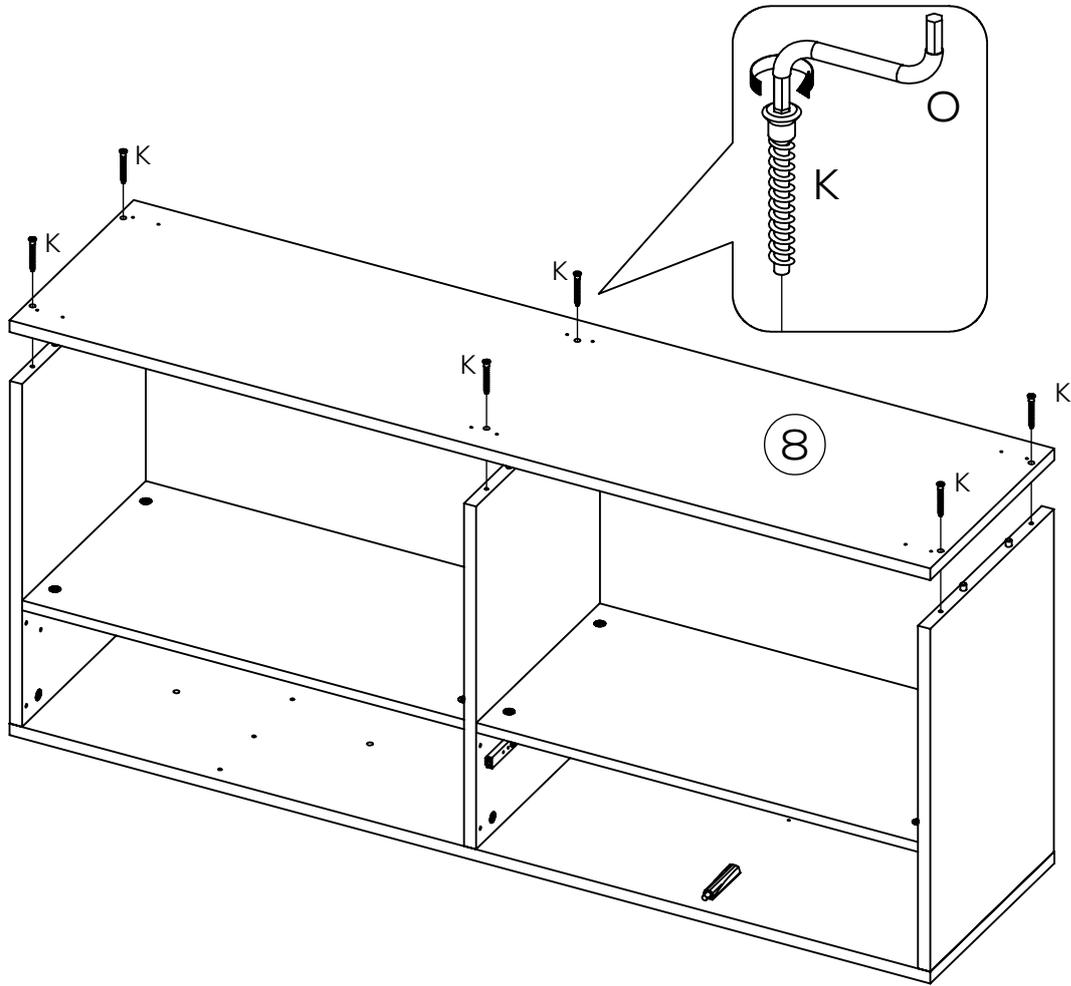


10

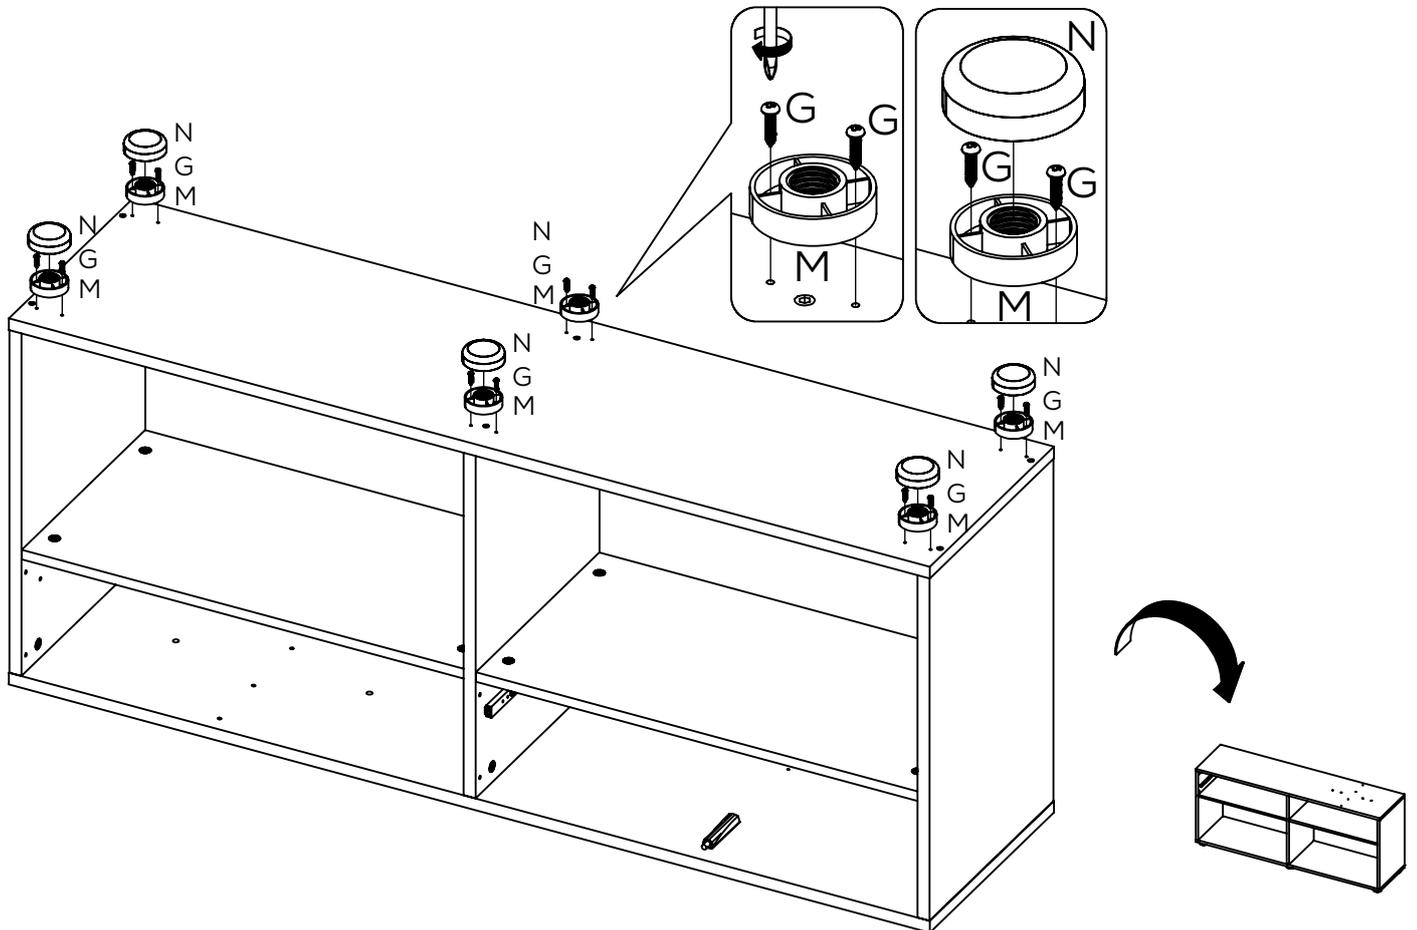


11

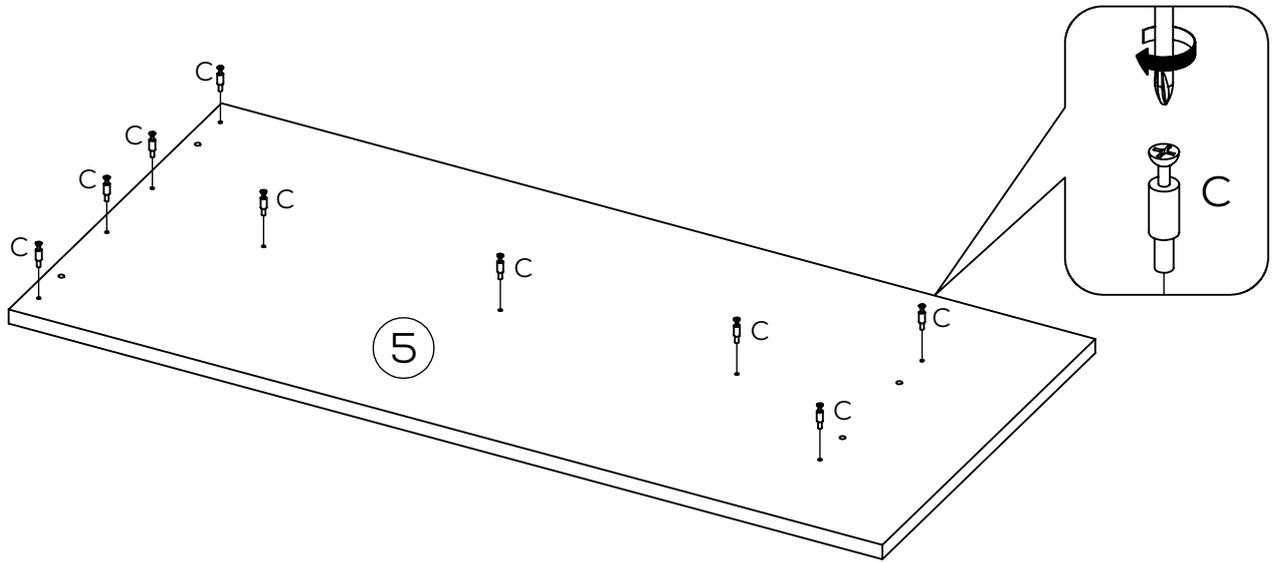


12

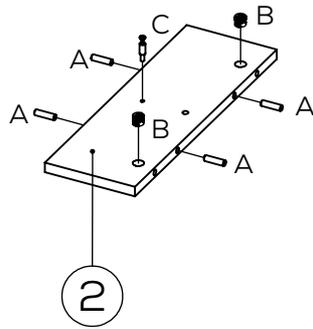


13

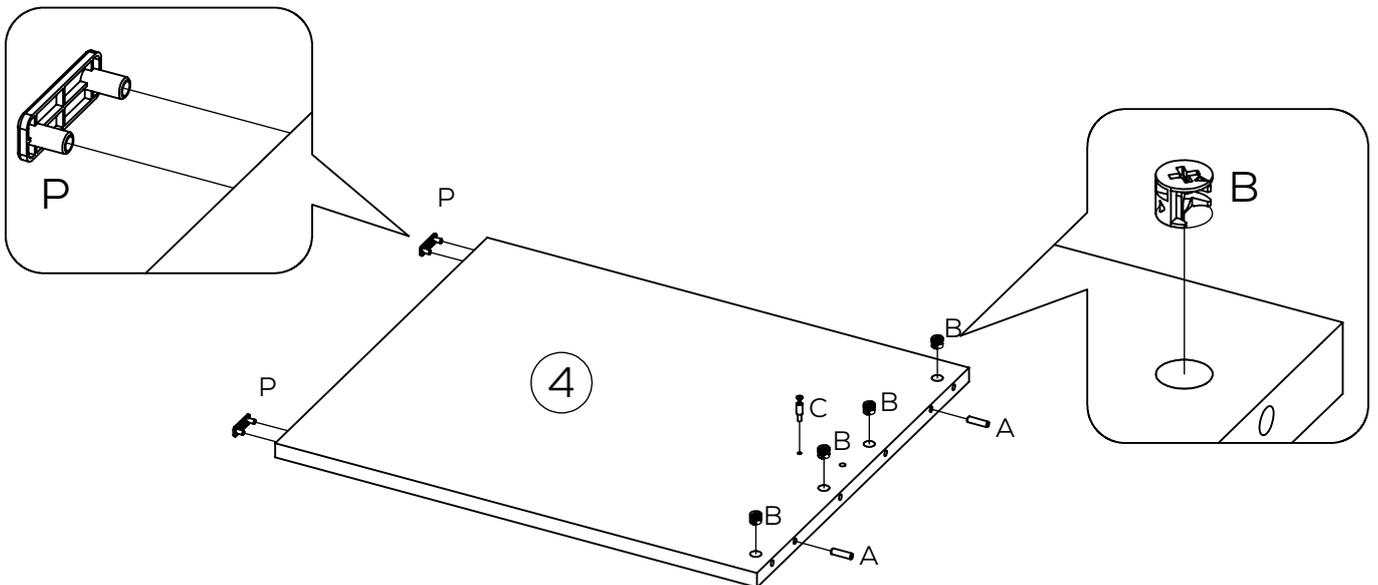


14

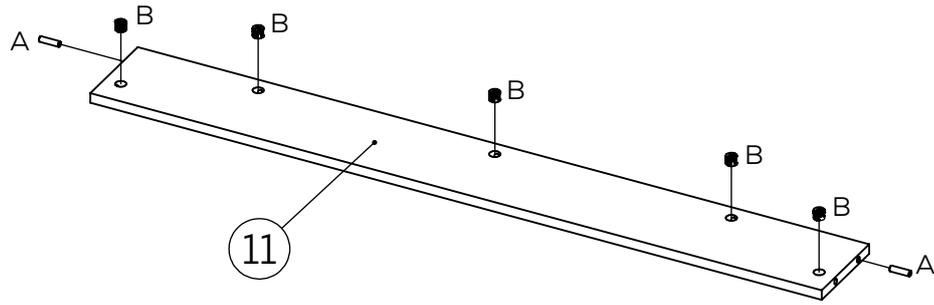


15


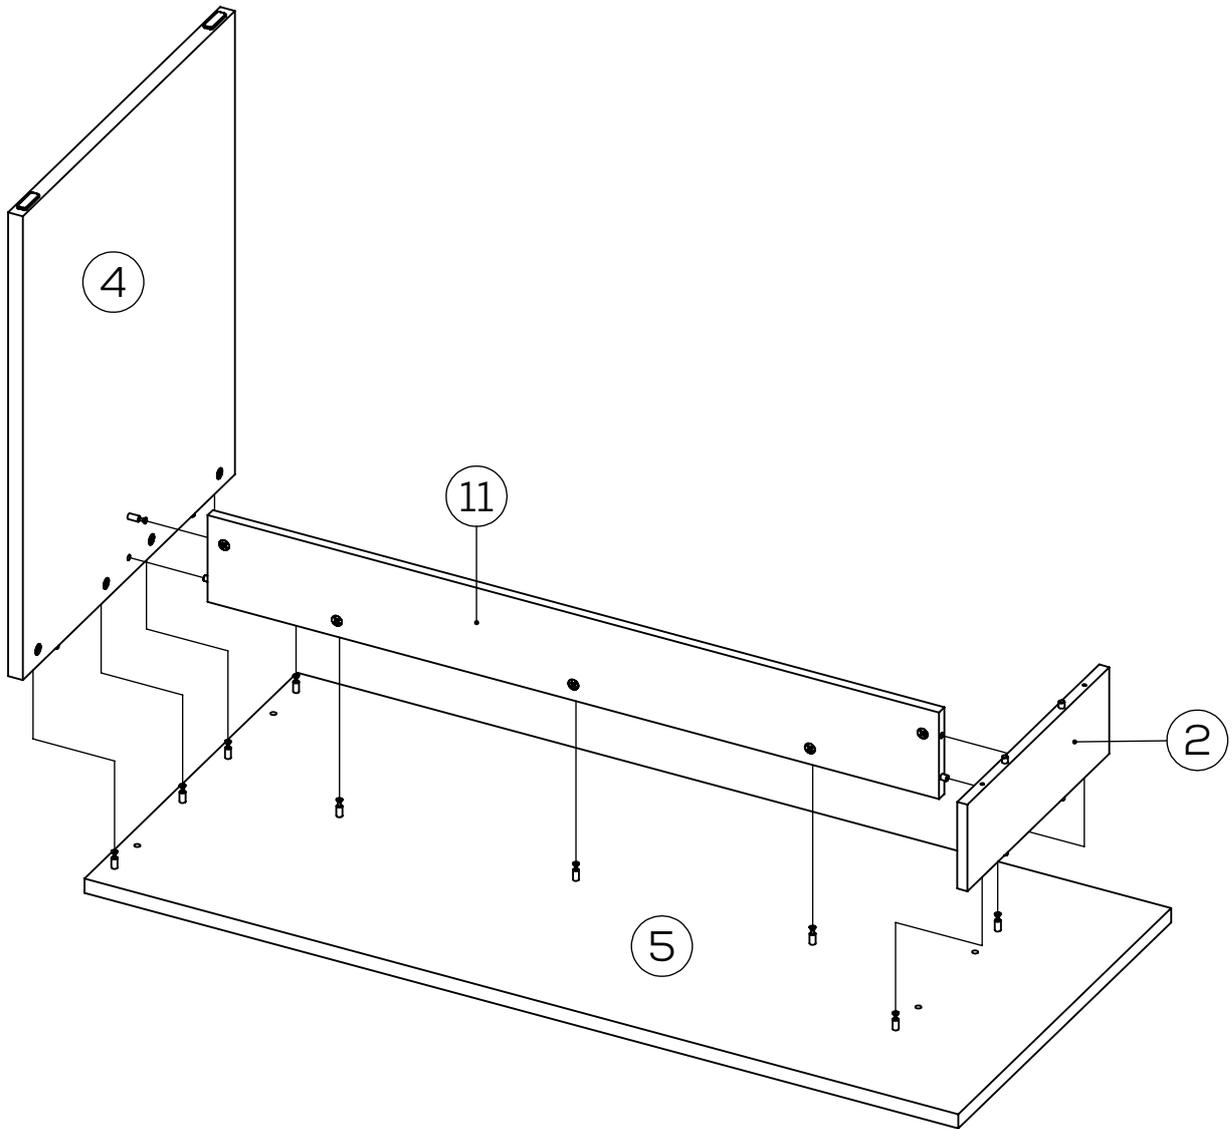



16




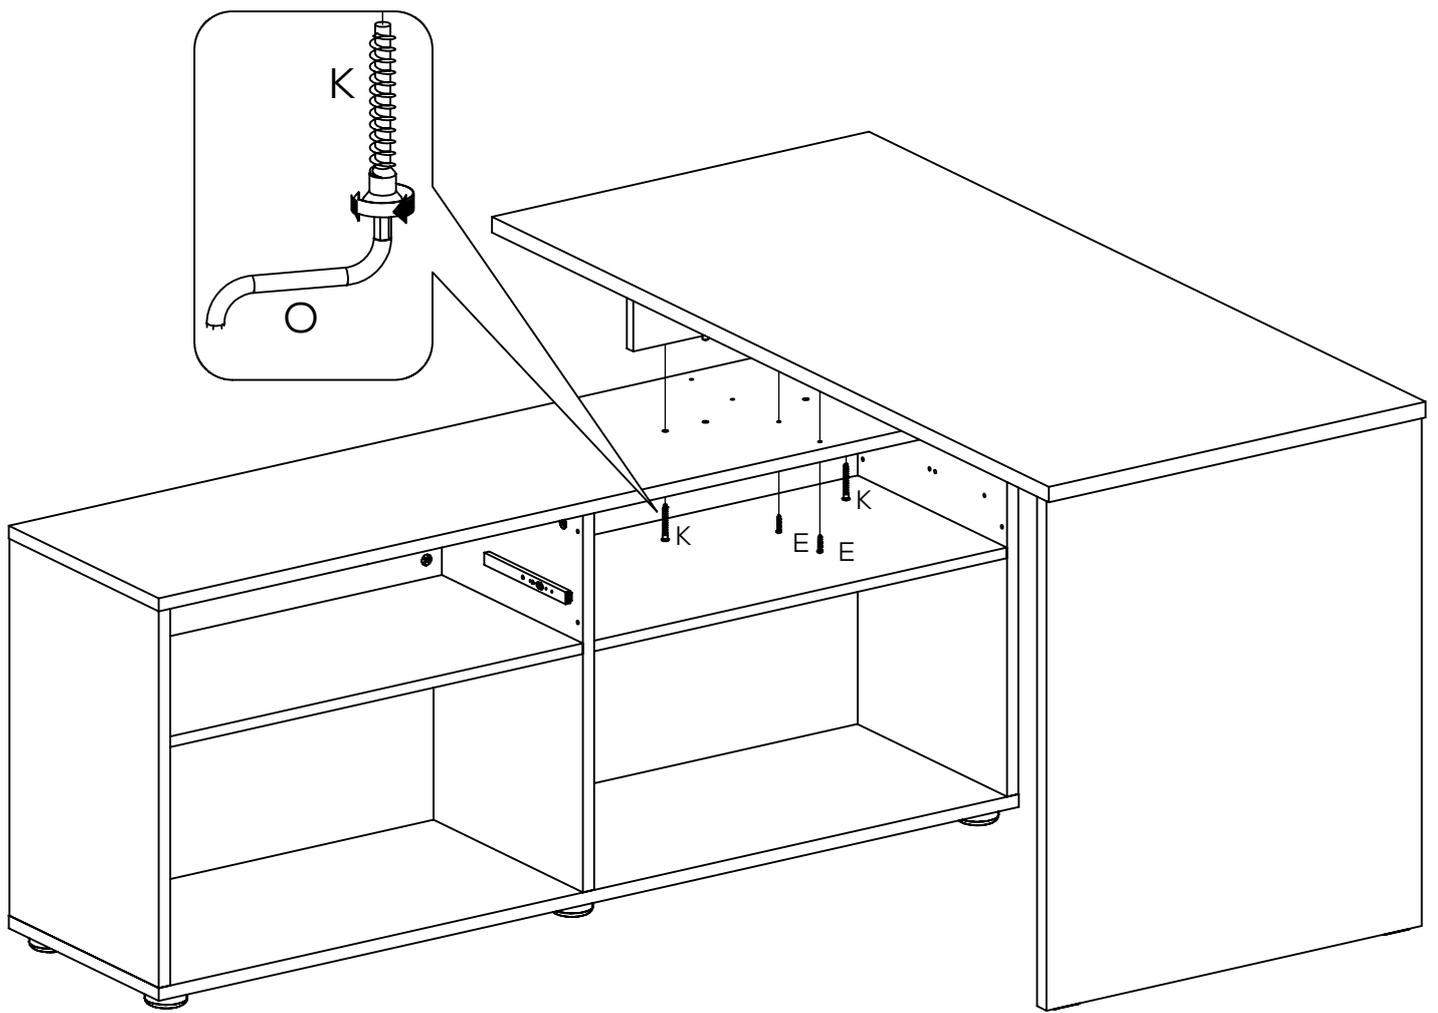


17

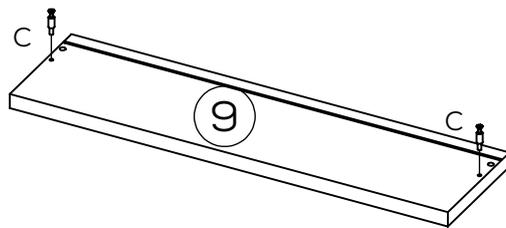

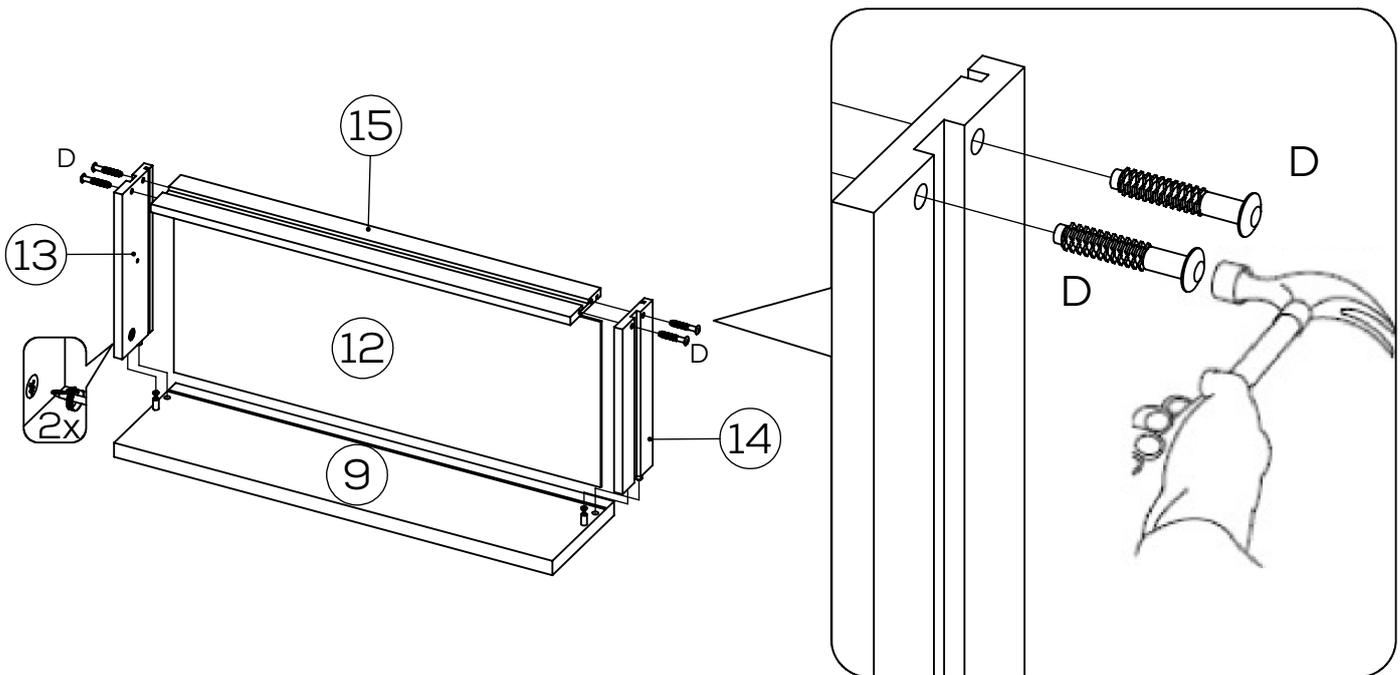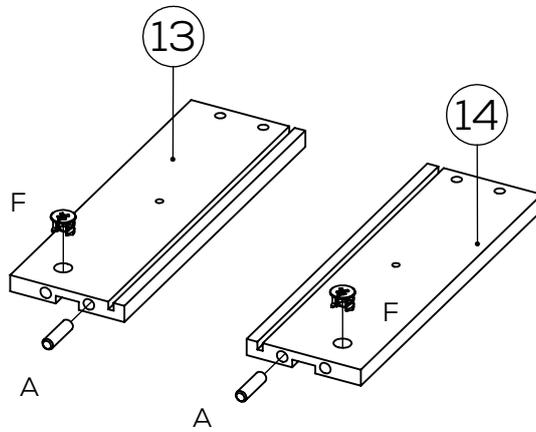

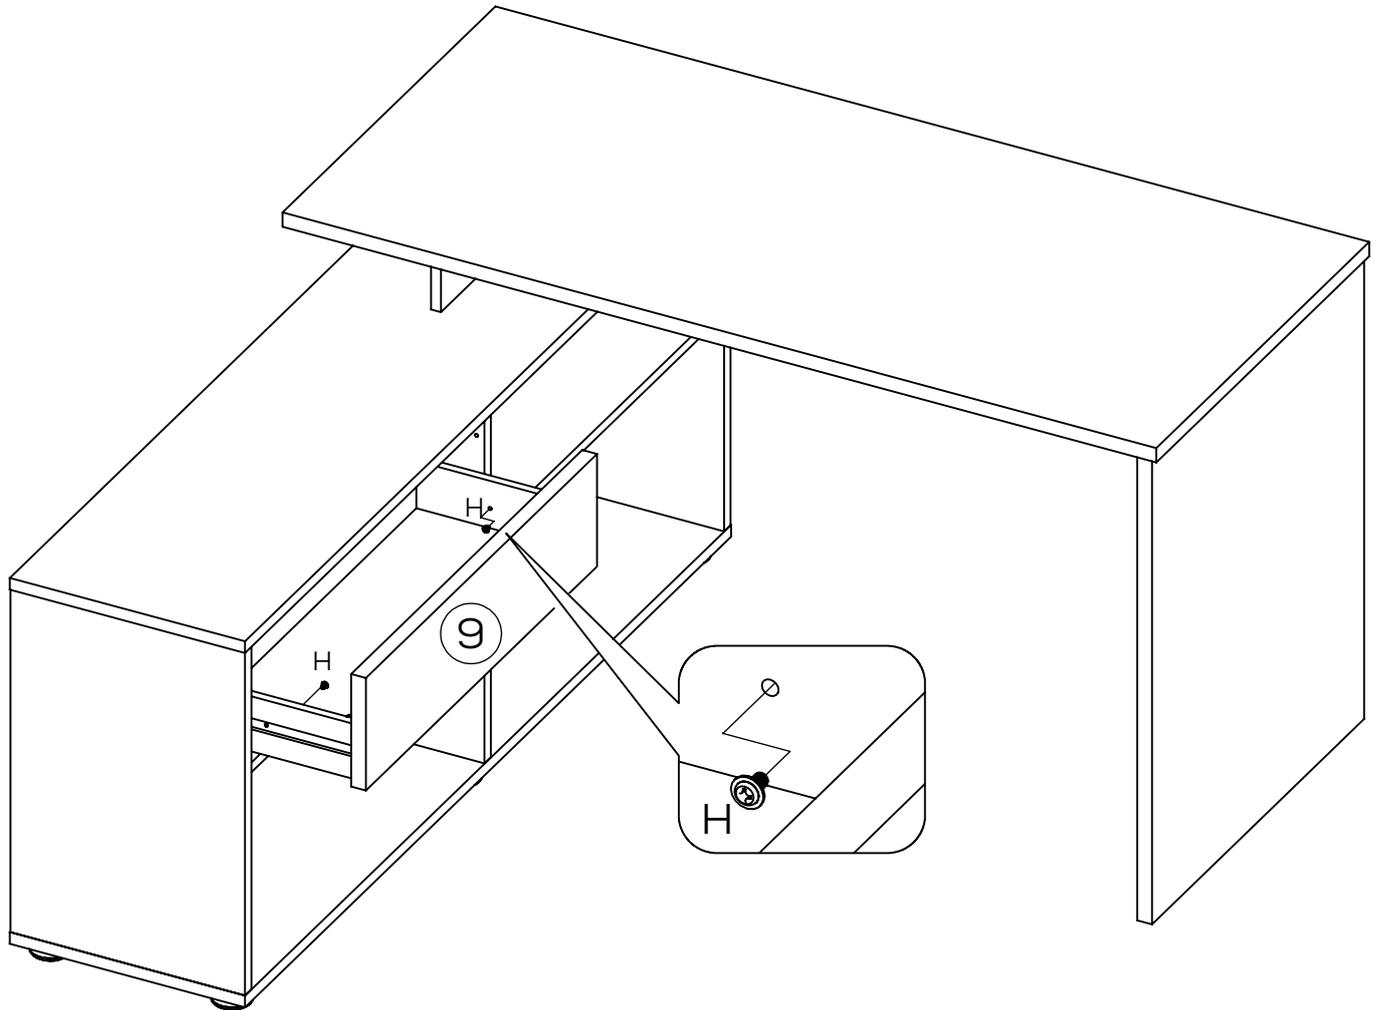


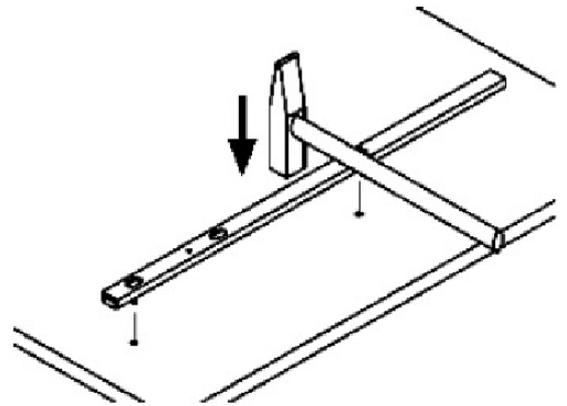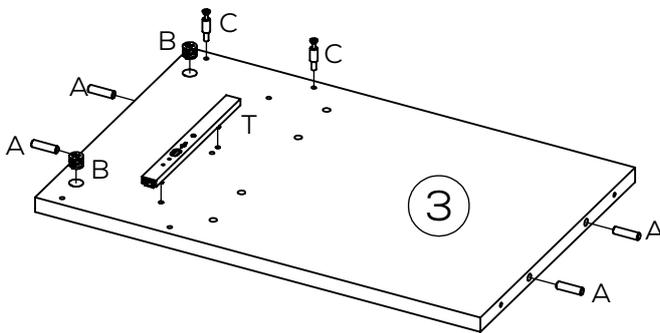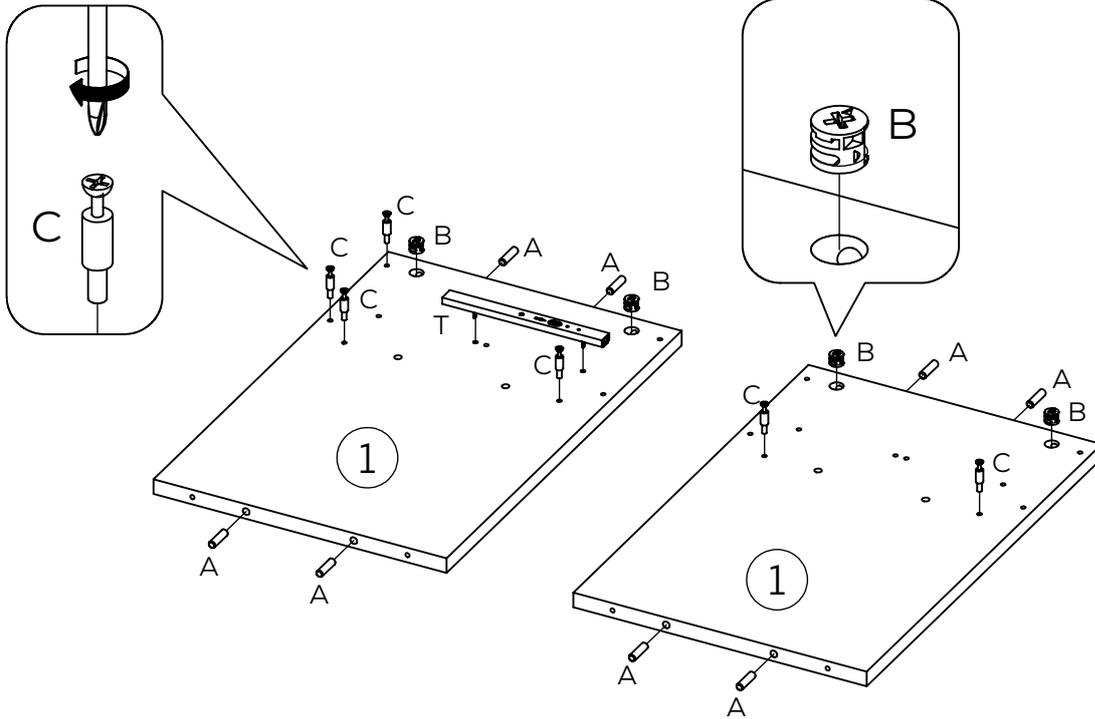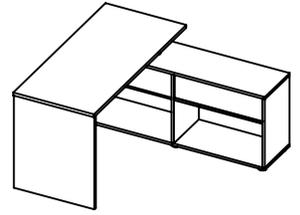

**ACHTUNG !!!**



Falsch




Richtig

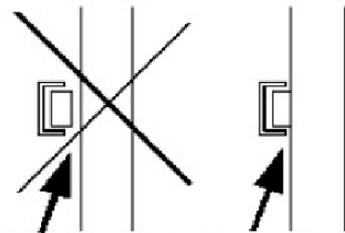


Schienen auf der Fläche aufliegend montieren.  
Runners have to be flush mounted.  
Montage affleuré pour les rails.

2x

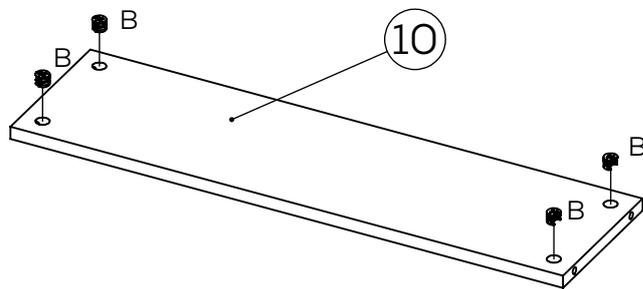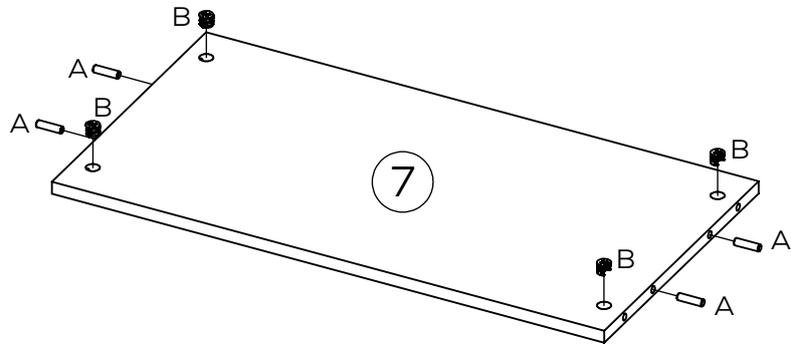


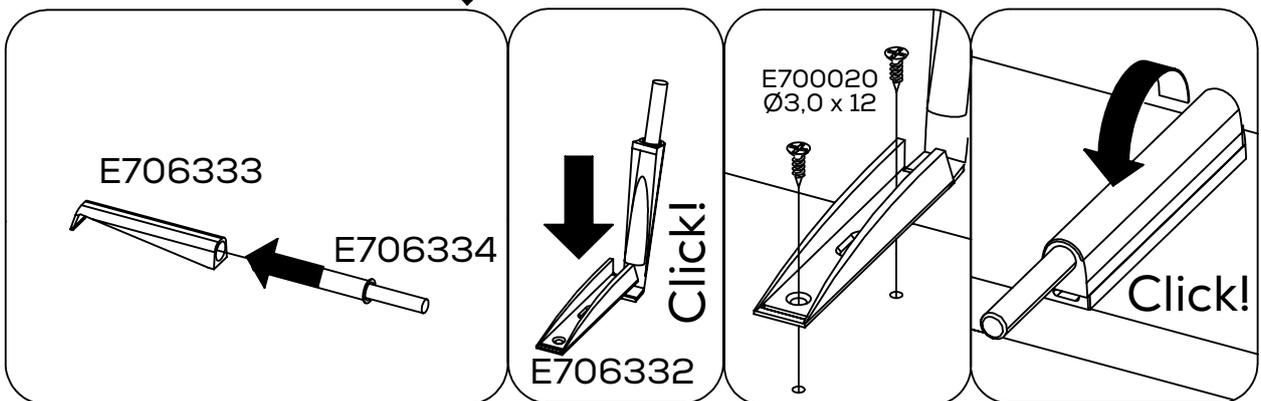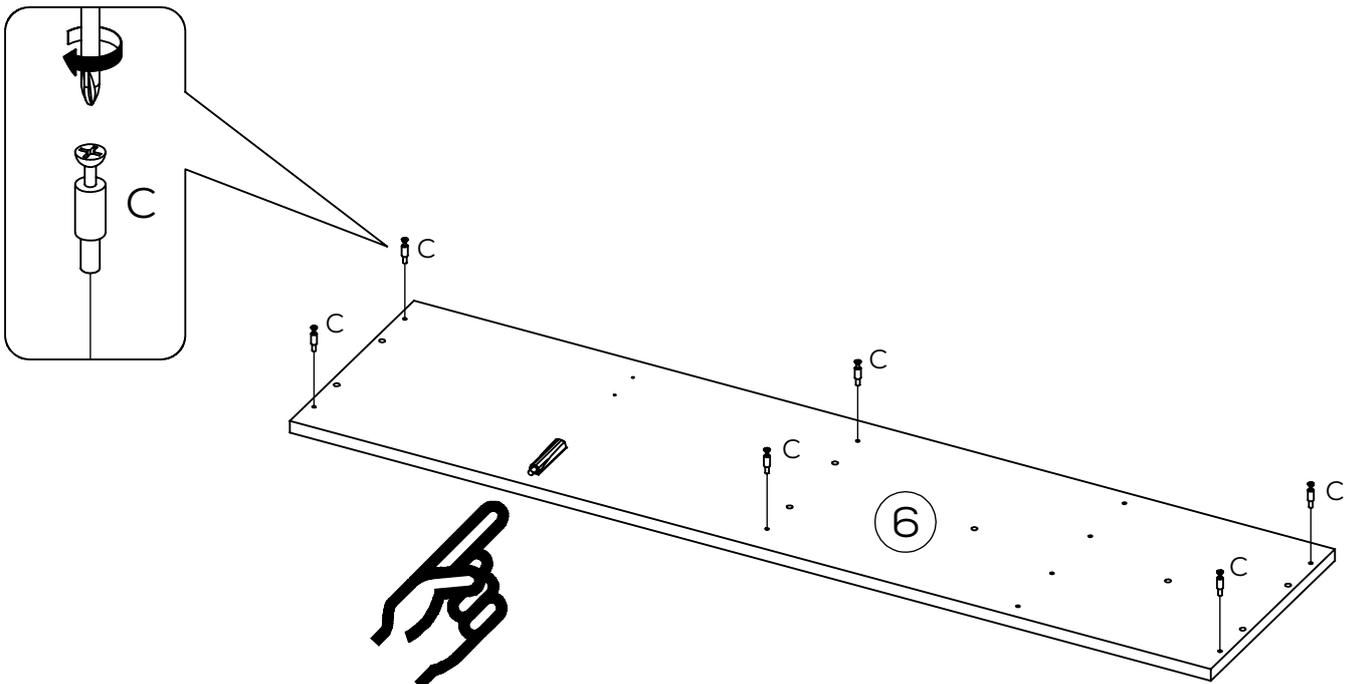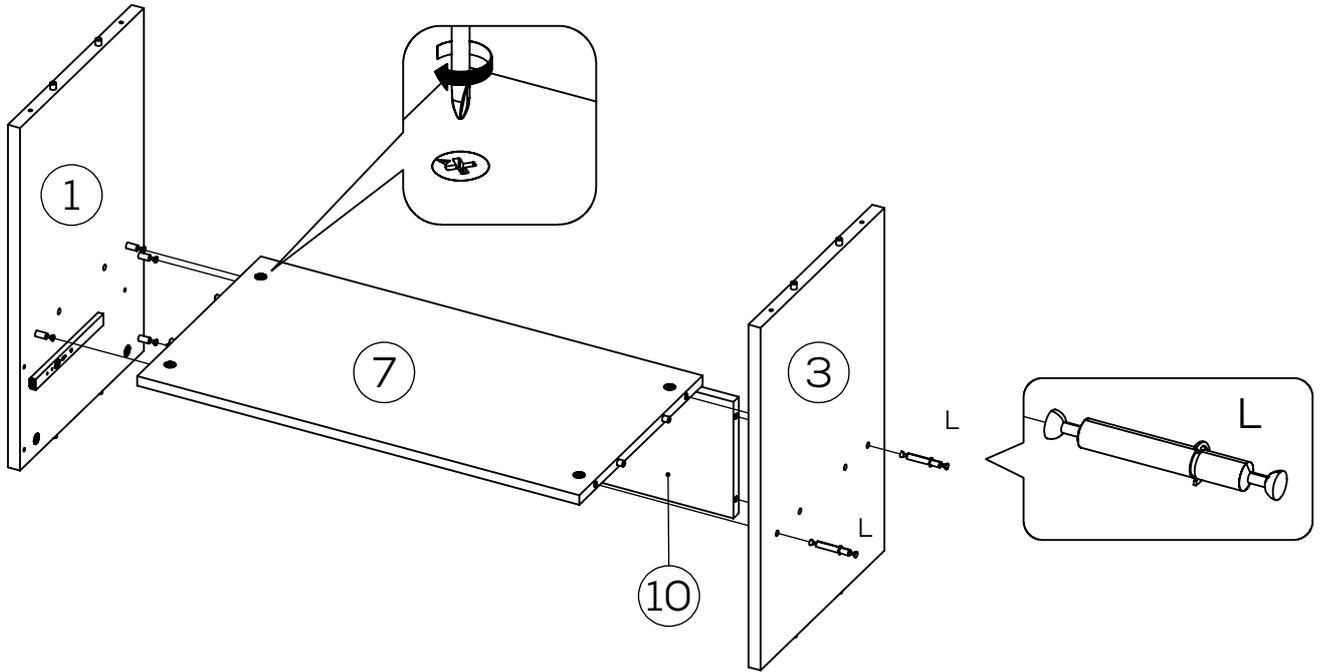


27

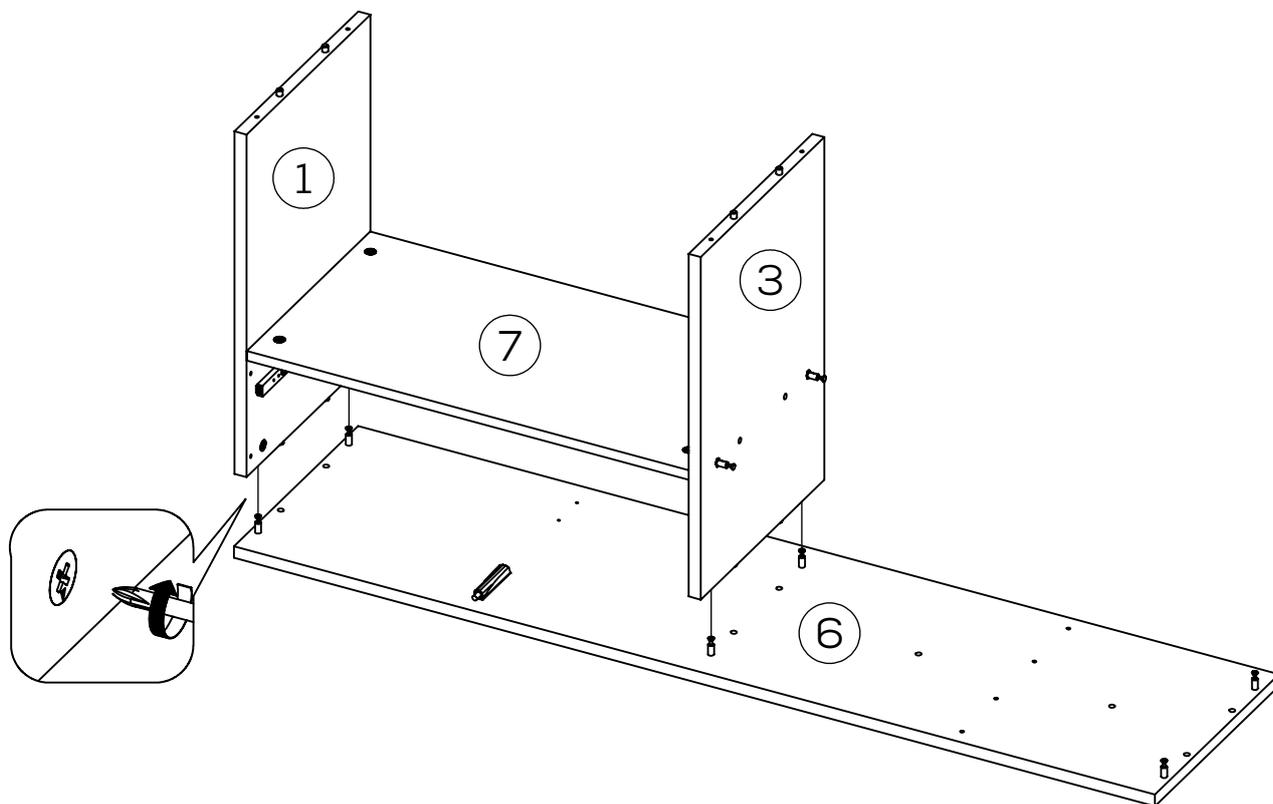


28

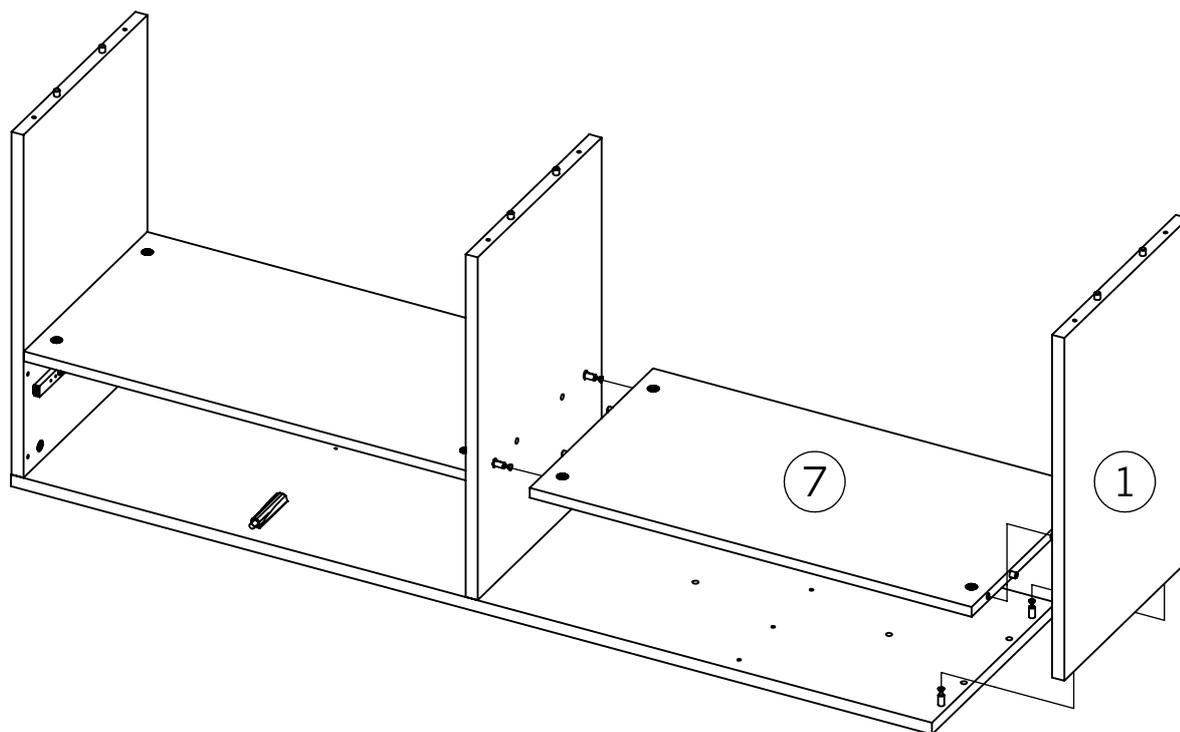


29

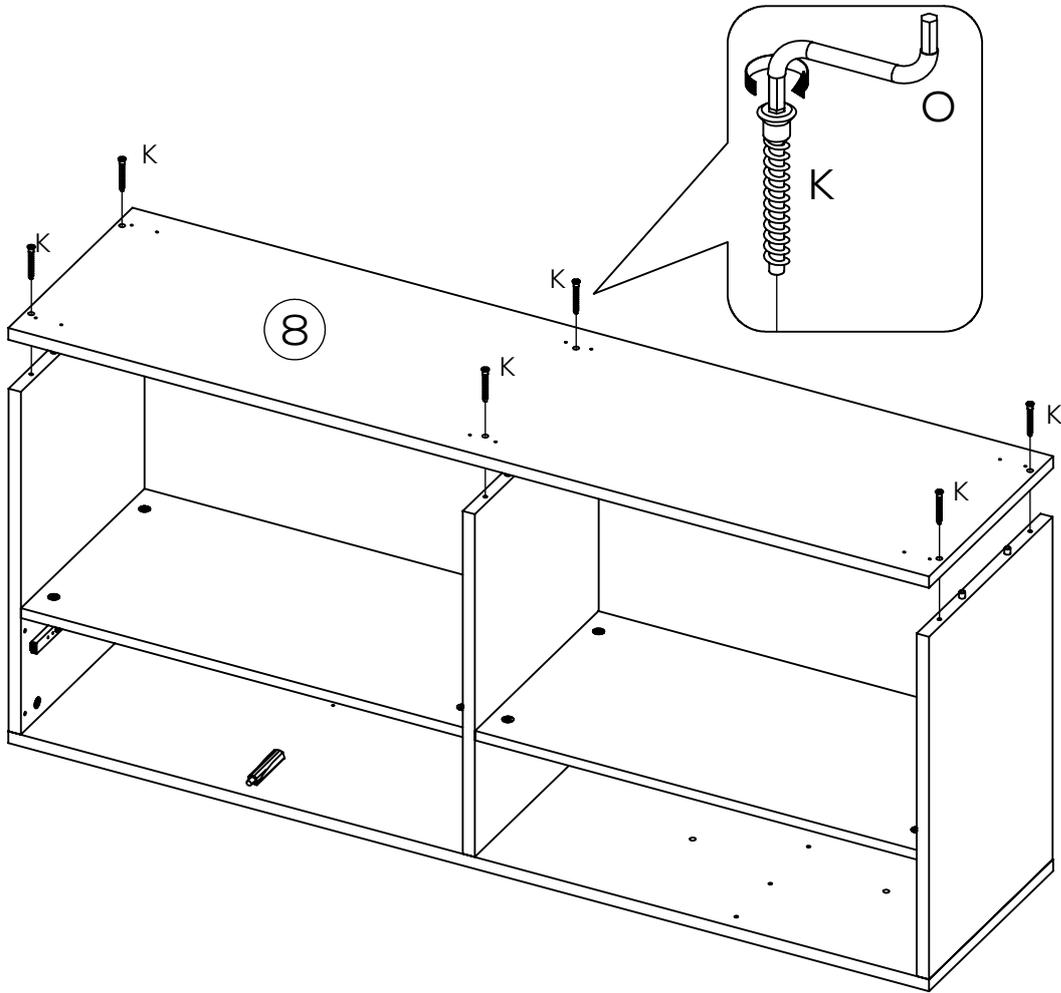


30

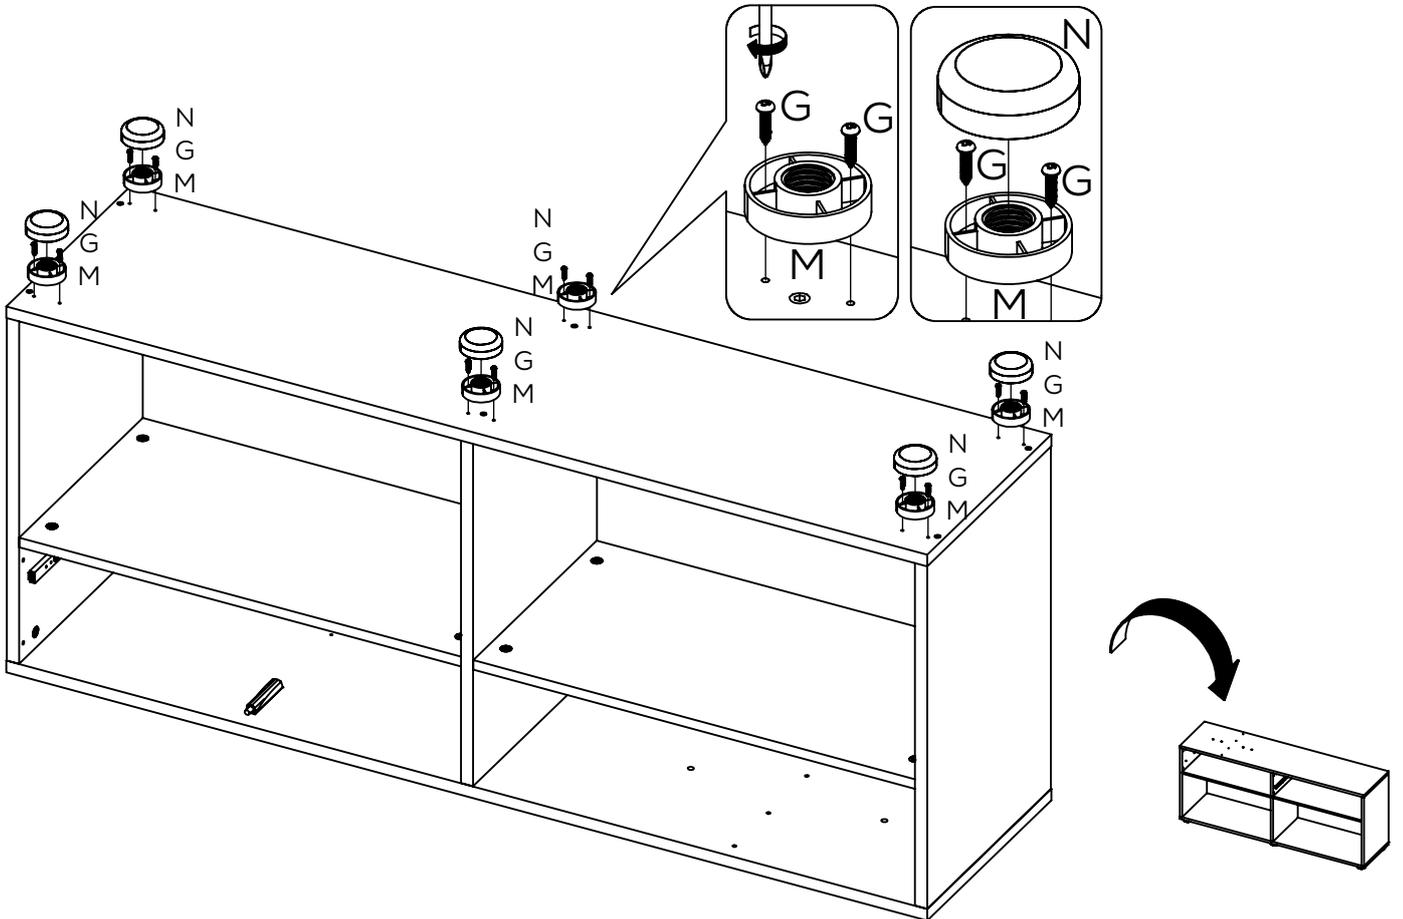


31

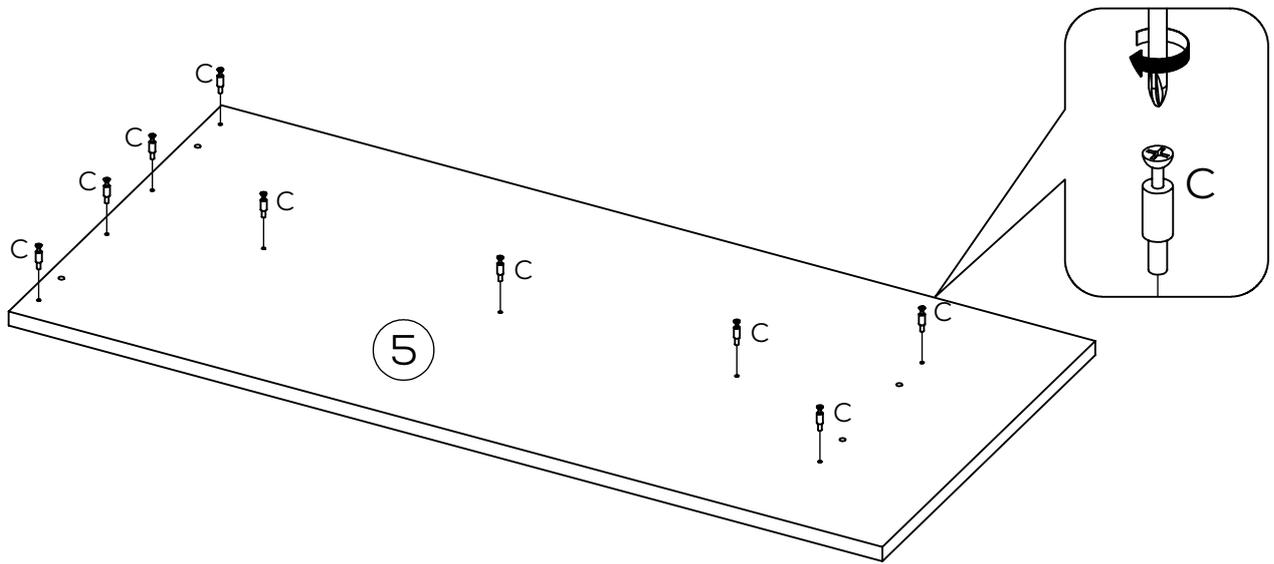


32

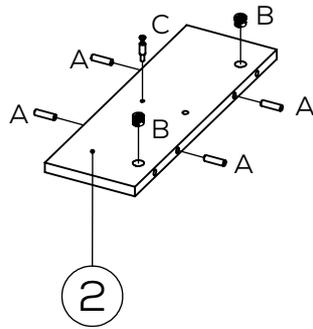


33

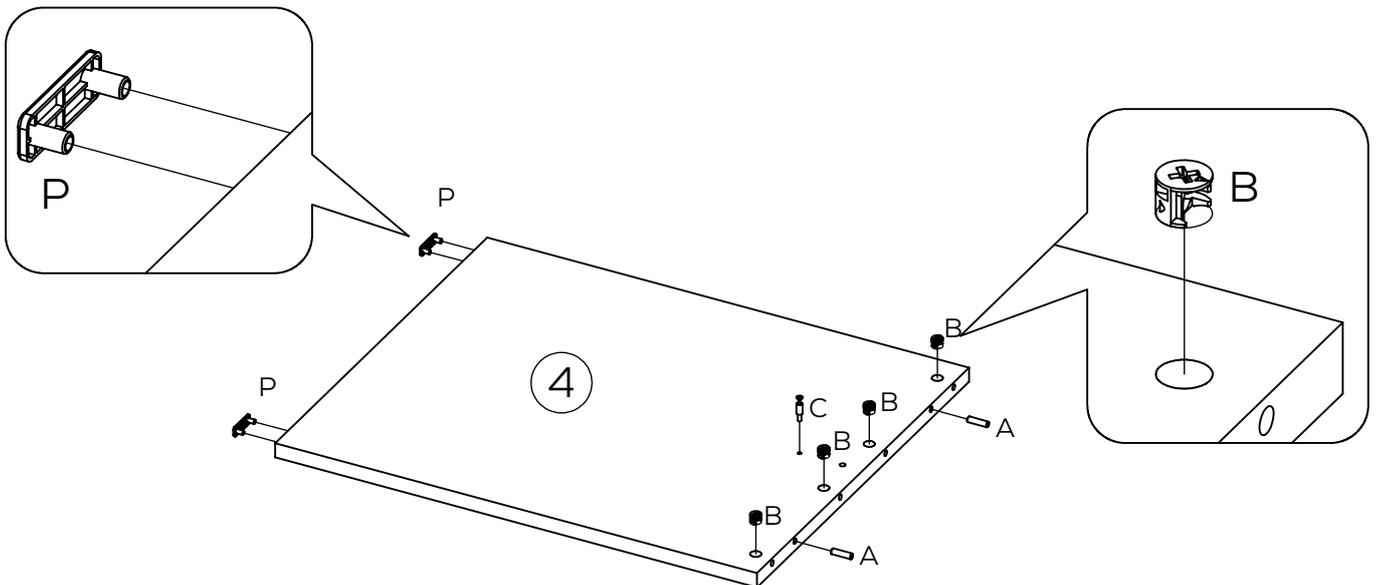


34

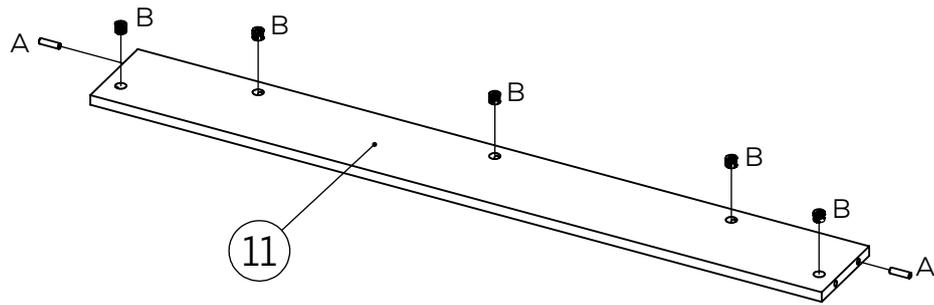

35

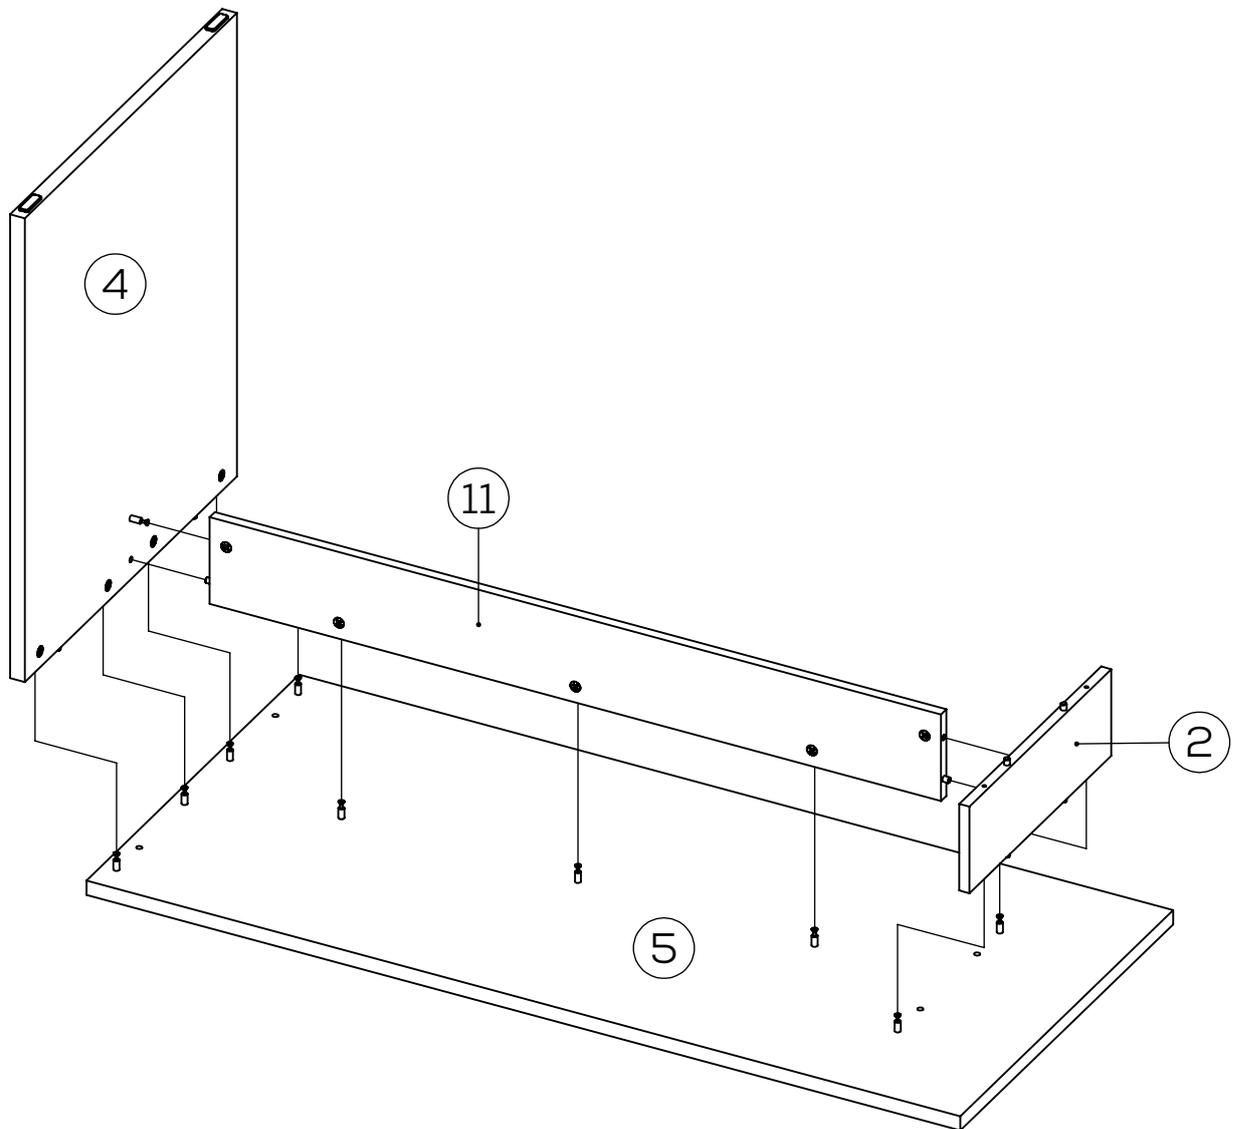

36

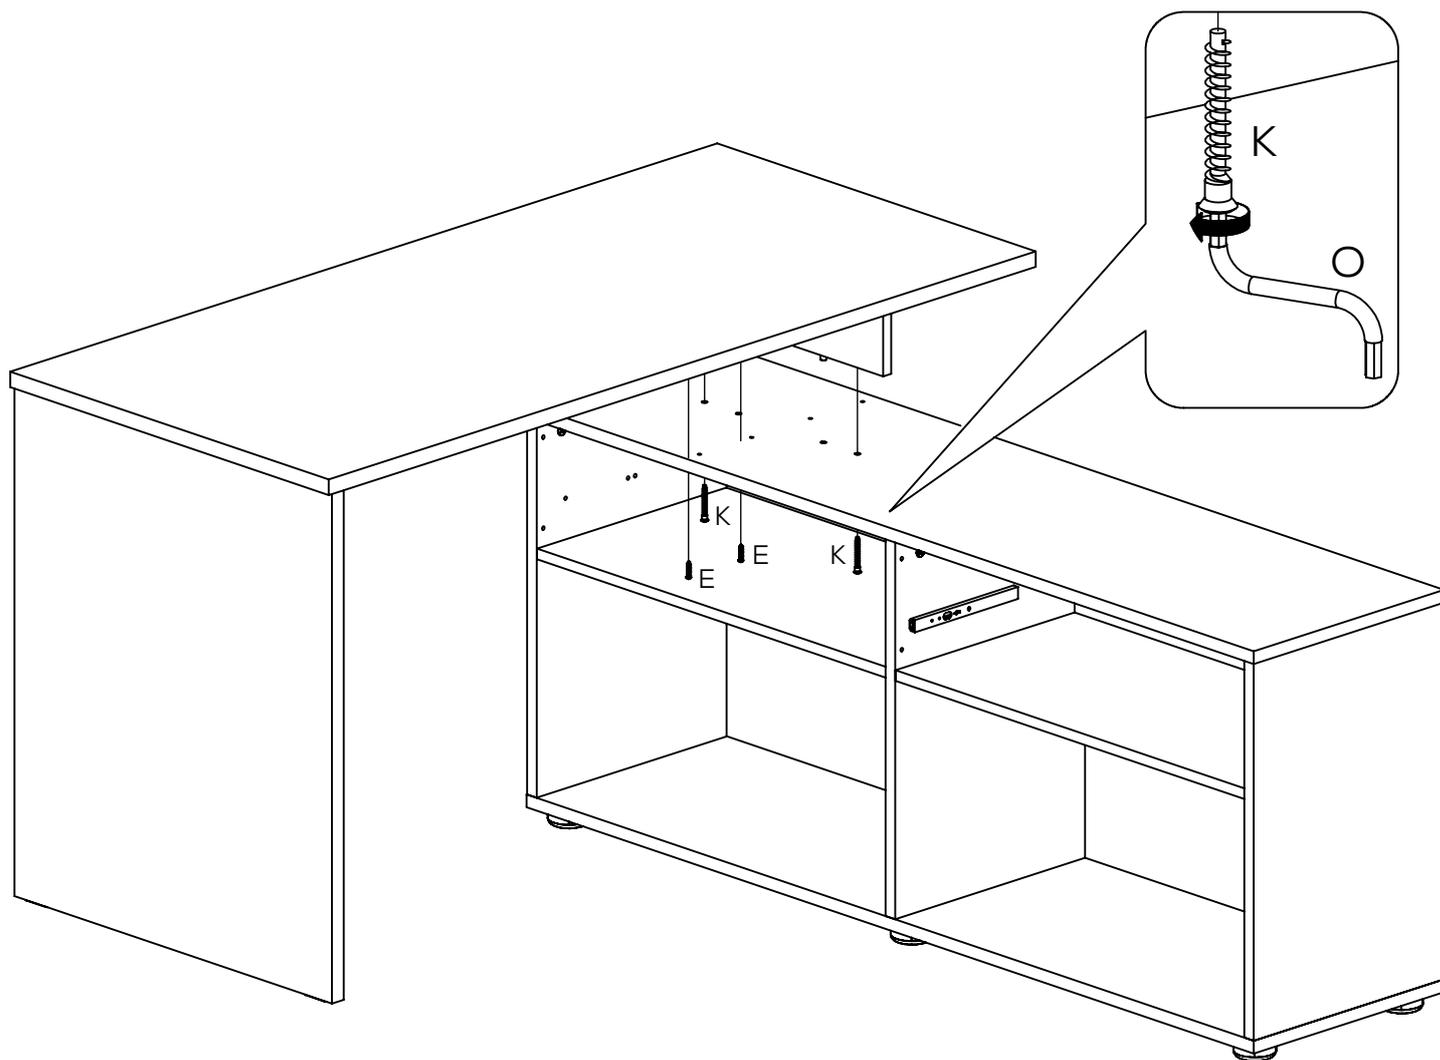

37

