

Timmy



D Montageanleitung

GB Assembly instructions

FR Notice de montage

NL Handleiding voor de montage

CZ Montážní návod

IT Istruzioni di montaggio

RO Instrucțiuni de montaj





RU инструкция по сборке

PL Instrukcja montażu

SK Návod na montáž

HU Szerelési útmutató

TR Montaj talimati

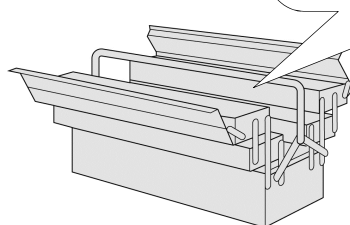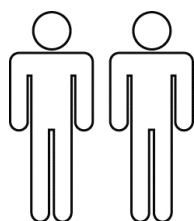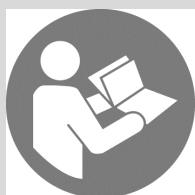

Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam
Nazwa • Jméno • Názov • Név
Denumire • İsim • Название




Timmy DB

Nr. • No. • N° • Номер • Č • Sz

SH52

Typ • Type • Tip • Típus • Tipo
Тип

OHNE

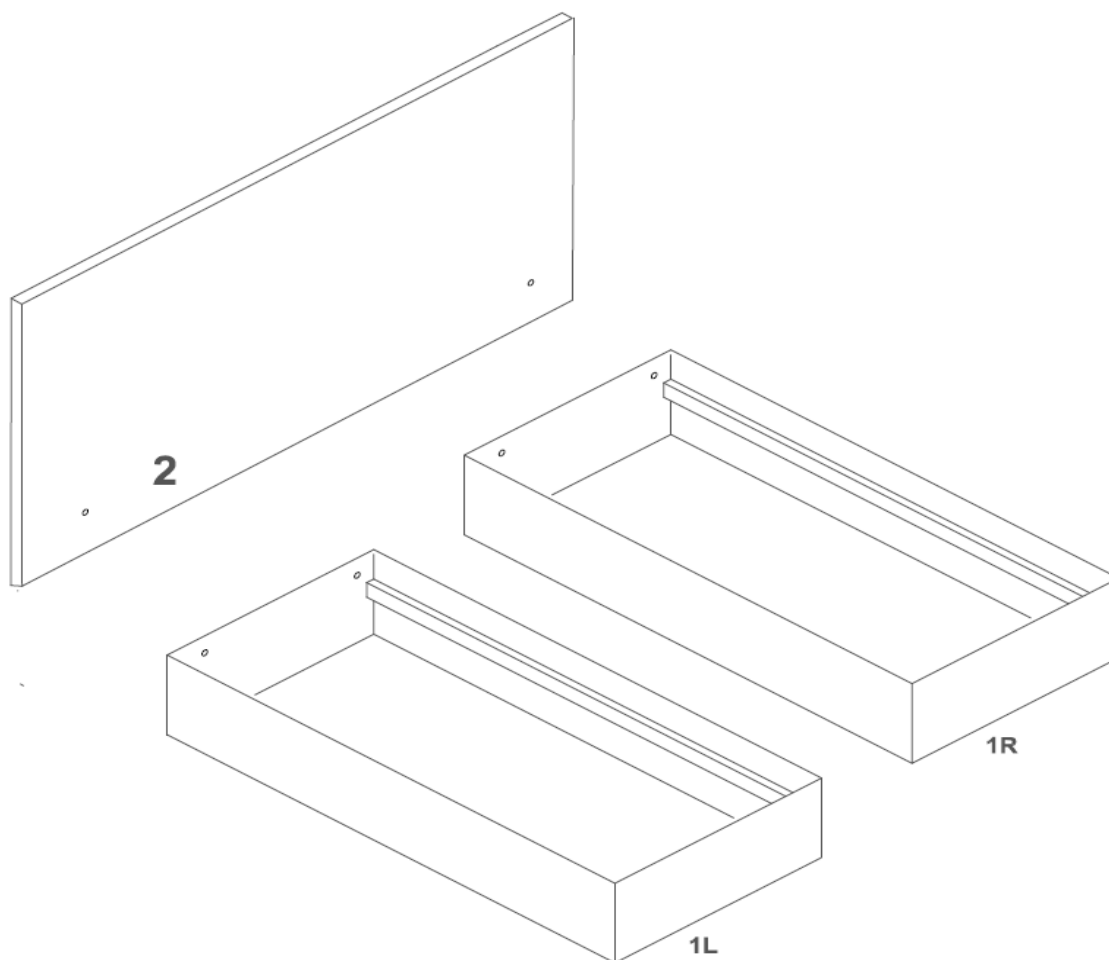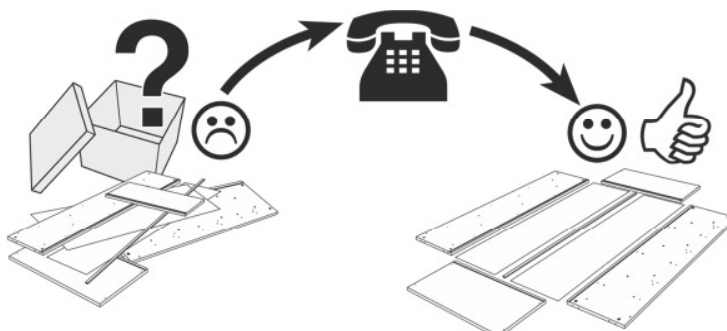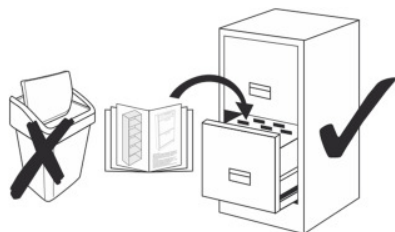

A	B	C	D	E	F	G	H	I	J	K	L
4x	4x 8x45	4x 8x20	5x M6	5x M6	5x M6	5x M6	2x	4x	2x 8x60	2x 8x40	2x M8

Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam
Nazwa • Jméno • Názov • Név
Denumire • İsim • Название




Timmy DB

Nr. • No. • N° • Номер • Č • Sz

SH52

Typ • Type • Tip • Típus • Tipo
Тип


LARO

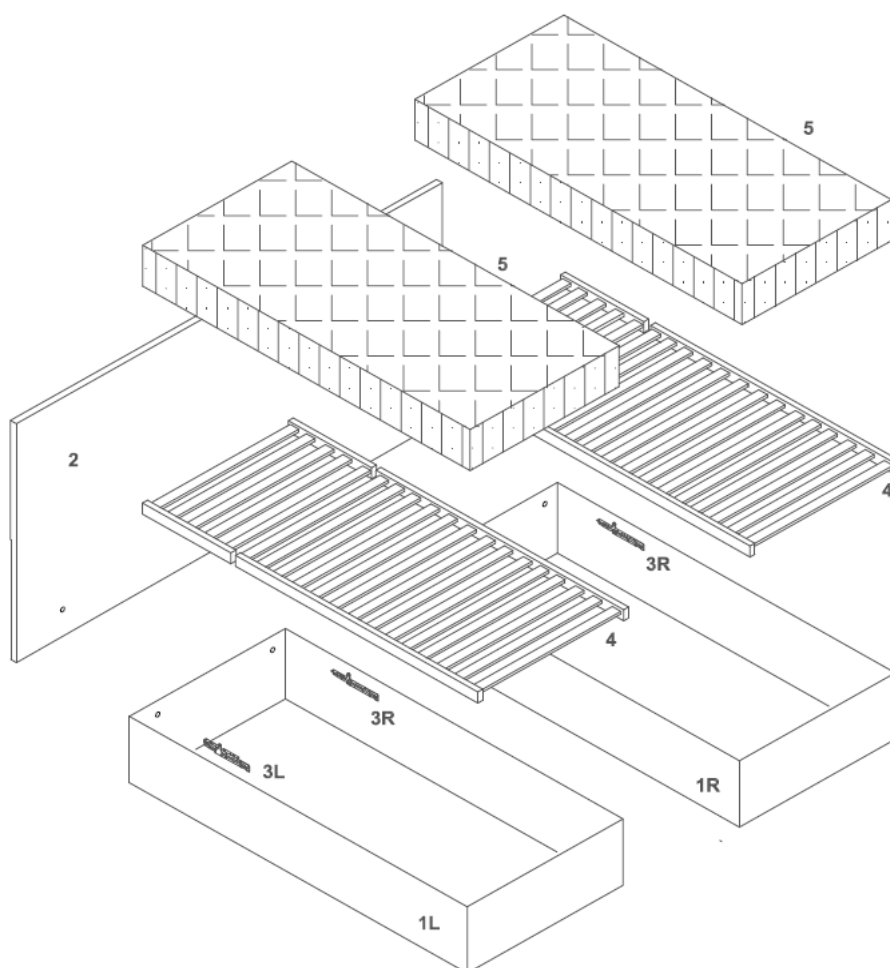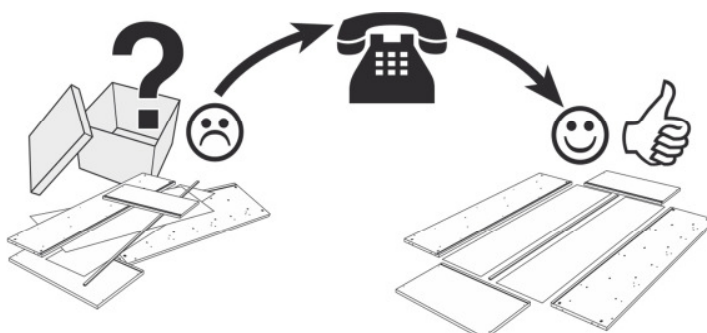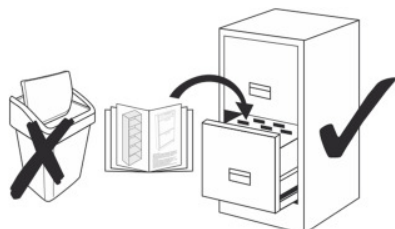



A	B	C	D	E	F	G	H	I	J	K	L
4x	4x 8x45	4x 8x20	5x M6	5x M6	5x M6	5x M6	2x	4x	2x 8x60	2x 8x40	2x M8




A	B	C
4x	4x 8x45	4x 8x20

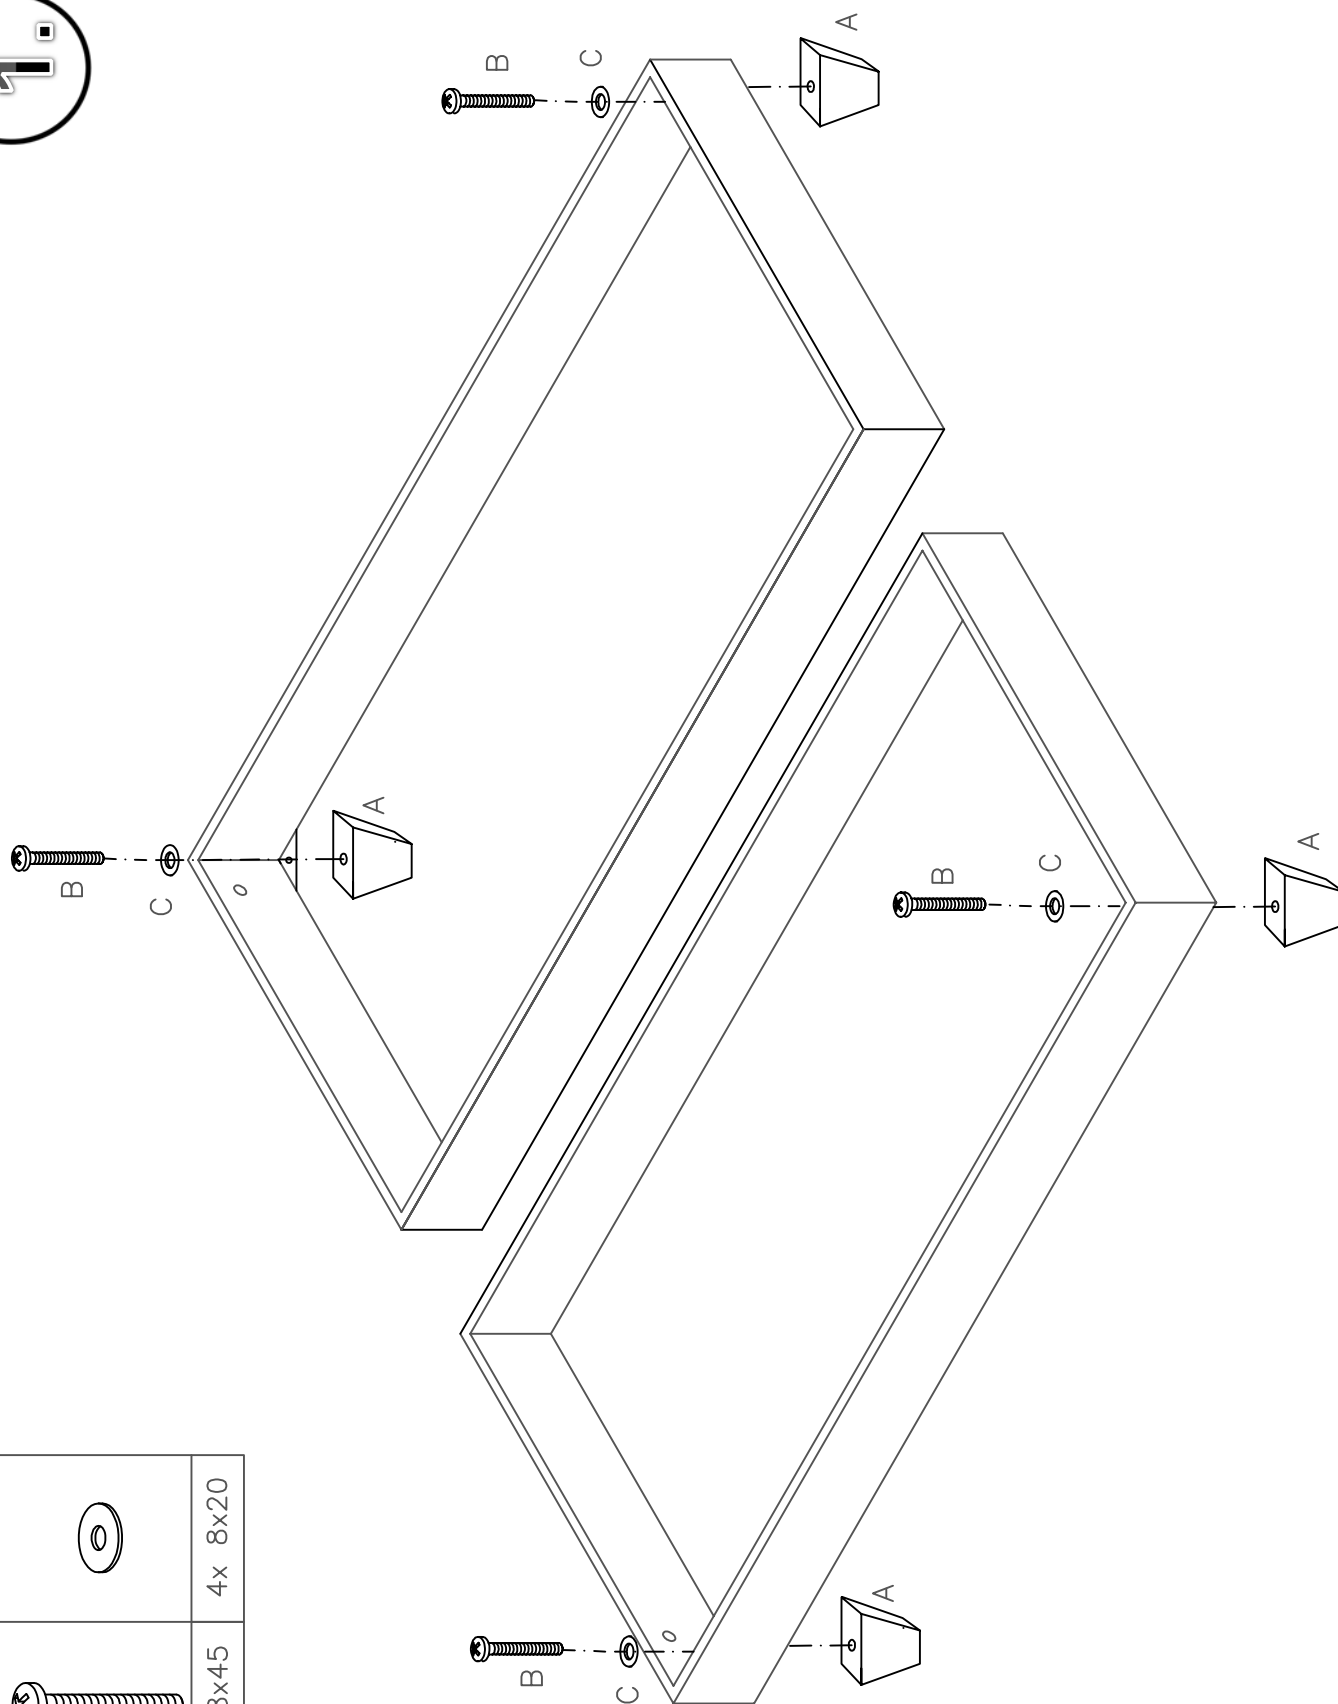




D	E	F	G	H	I
					
5x 6x45	5x M6	5x M6	5x M6	2x	4x

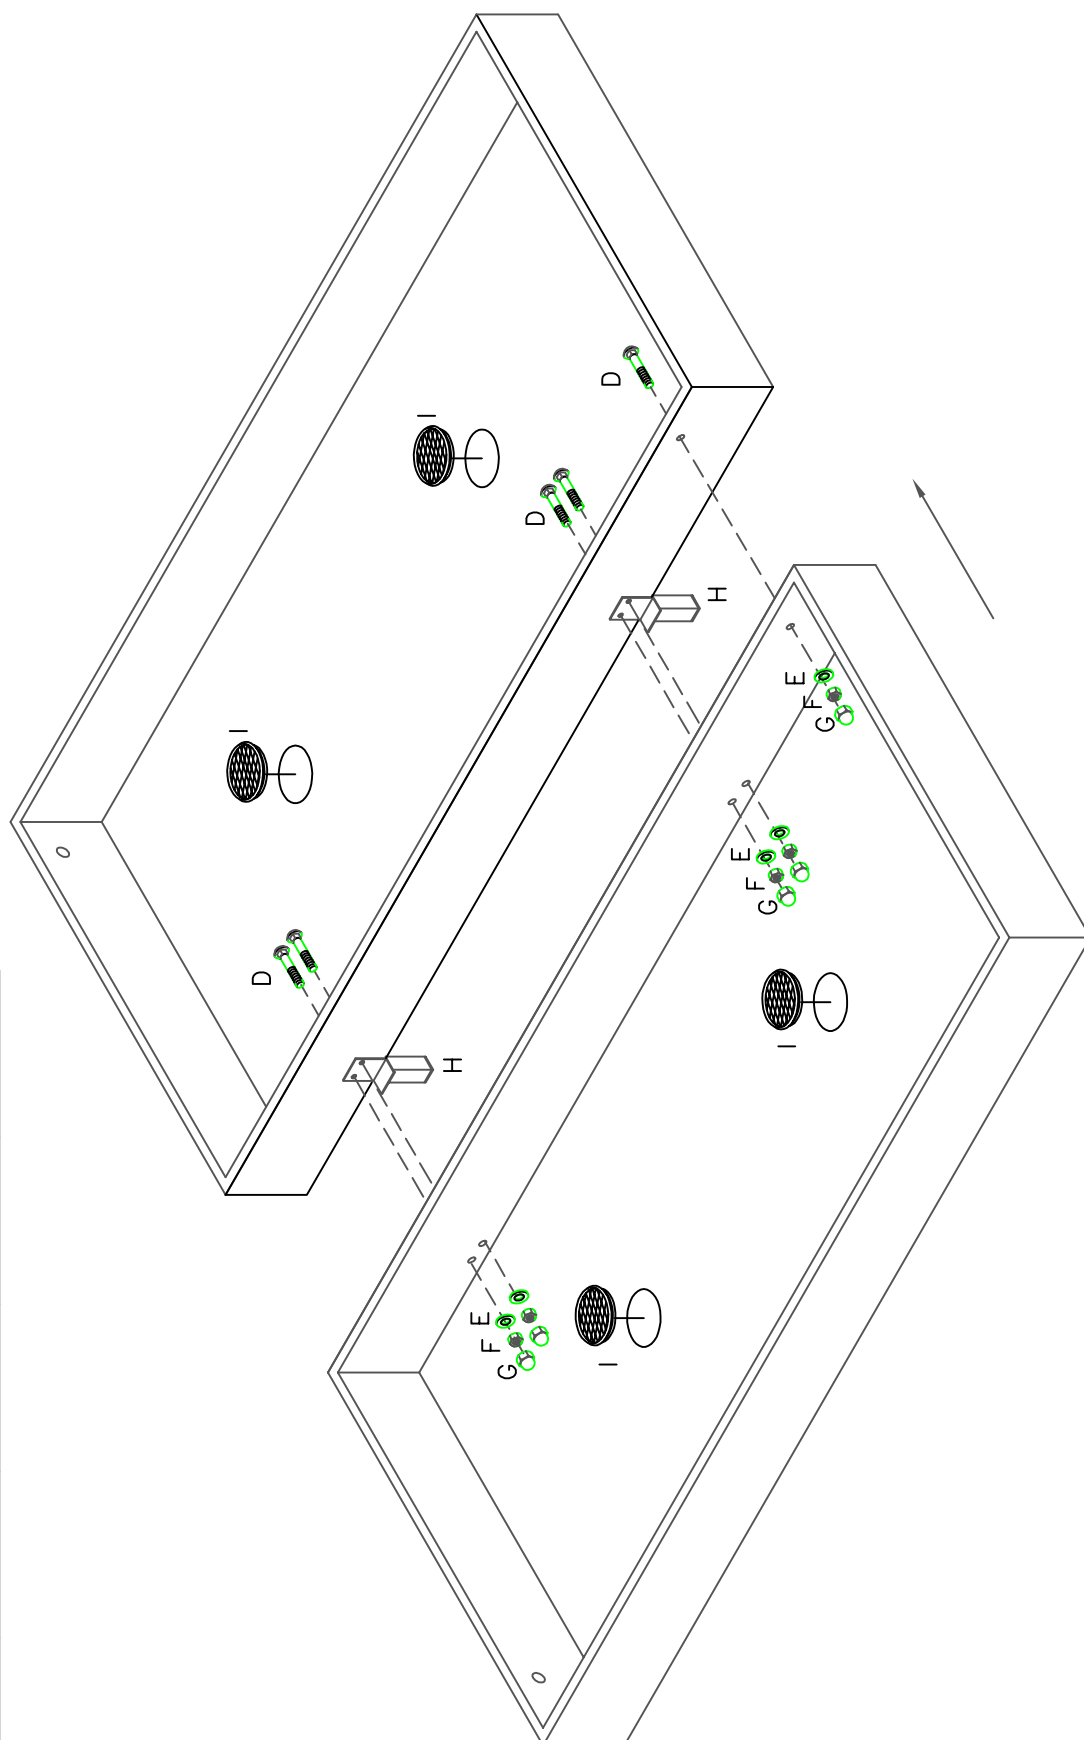



			Achtung! Schrauben nicht überdrehen FR Attention! Ne serrez pas trop CZ Dávej Pozor! Nepřetahujte RO Ai Grijai! Nu strângeți PL Uwaga! Nie dokręcać zbyt mocno HU Vigyázz! Ne húzza túl GB Watch Out! Do not over tighten NL Let Op! Niet te vast IT Attenzione! Non stringere RU Осторожно! Не затягивайте SK Dávaj Pozor! Nepreťahujte TR Dikkat! Üzerinde sıkmayın
2x 8x60	2x 8x40	2x M8	

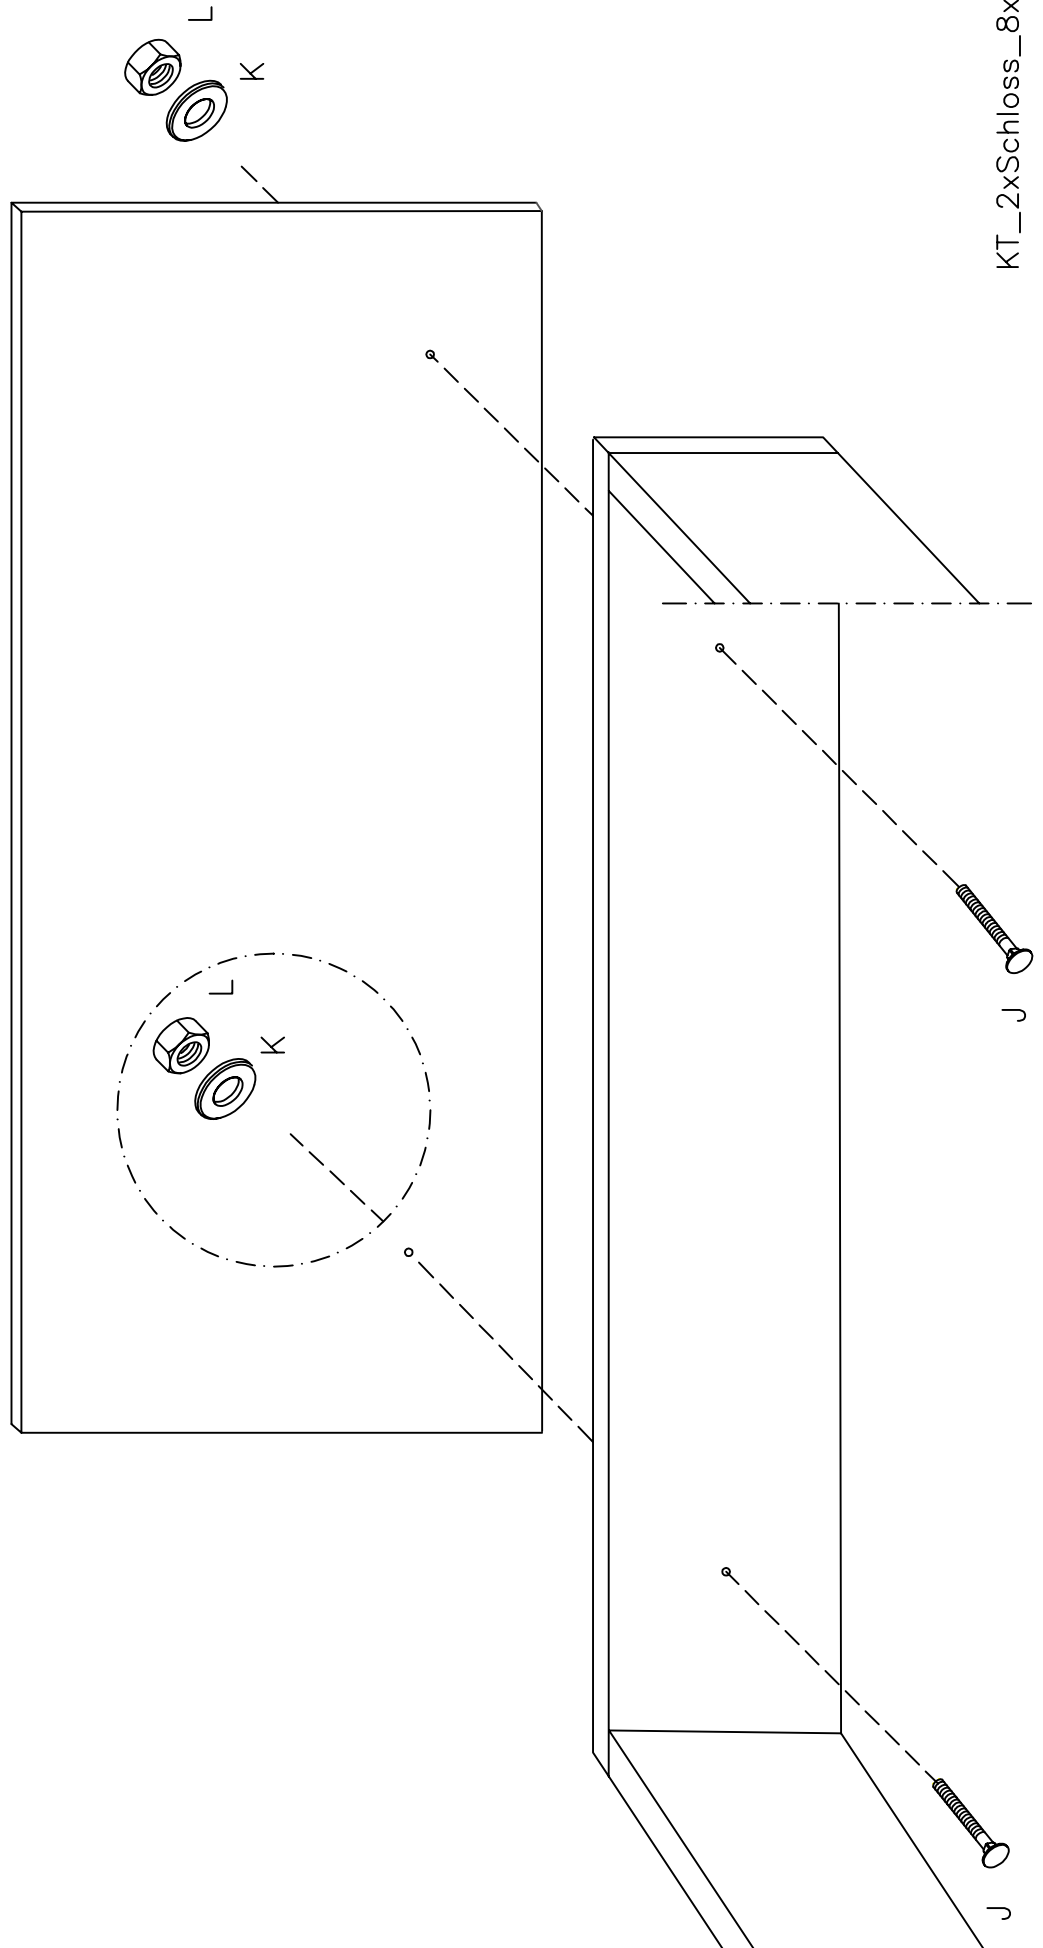

KT_2xSchloss_8x60