



(D) Montageanleitung

(GB) Assembly instructions

(FR) Notice de montage

(TR) Montaj talimatı

(IT) Istruzioni di
montaggio

(NL) Handleiding voor
de montage

(RU) Инструкция
по монтажу


(CZ) Montážní návod

(HU) Szerelési útmutató

(RO) Instrucțiuni
de montaj






(PL) Instrukcja montażu

(SK) Návod na montáž

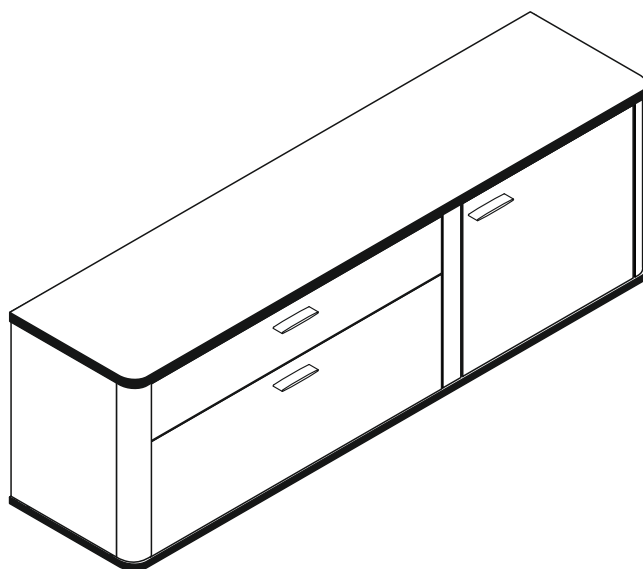

0704_111 Lowboard


**Service • Assistenza • Dienstverlening • Servis
Servis • Szerviz • Сервисная служба**

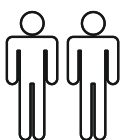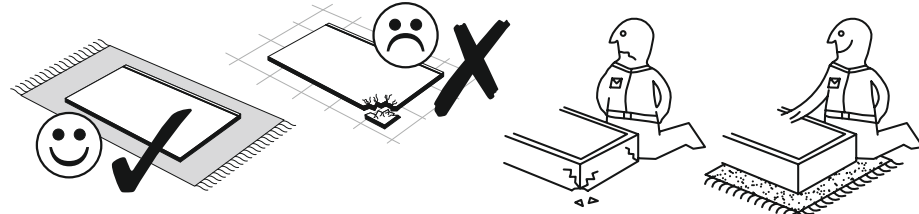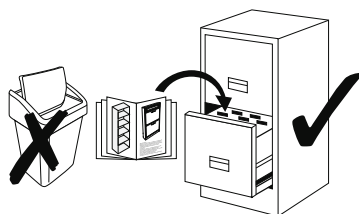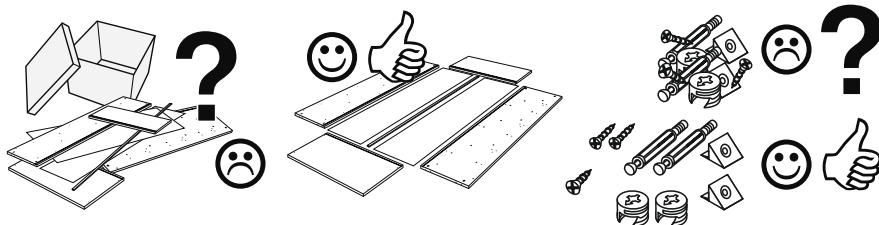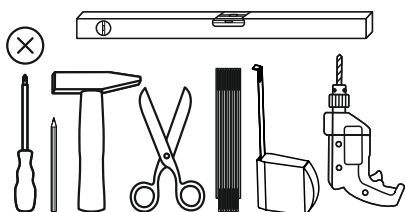


Colli 1/2 : (1) (8) (9) (10) (11) (16) (17) (18) (19)


Colli 2/2 : (2) (3) (4) (5) (6) (7) (12) (13) (14) (15) (20) (21) (22) Beutel 1/3, 2/3, 3/3

Beutel 1/3


1-10 8x	 6,3x50	1-30 22x	 3x16	1-80 12x	 3,5x13	1-90 10x	 3,5x20	1-130 17x	 4x27	1-200 8x	 6,3x13
1-329 6x	 M4x22	2-10 14x	 h=12mm	2-20 14x	 2-20	2-120 4x	 2-160	2-160 4x	 2-160	3-11 2x	 3-11
3-43 2x	 15er										




Beutel 2/3

3-07 1x		3-25 2x		3-26 2x	 45°
------------	---	------------	---	------------	---


Beutel 3/3

1-70 2x	 3x30	2-08 4x		2-20 4x	 2-20	5-185 10x		5-190 2x		6-403 3x	
------------	--	------------	---	------------	--	--------------	---	-------------	---	-------------	---


Colli 1/2

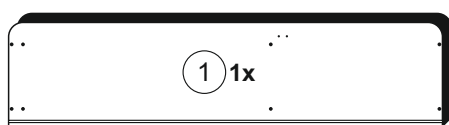


1721 x 412




658 x 332




938 x 350




928 x 120

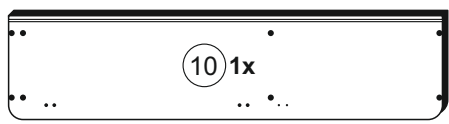

1721 x 412




1698 x 295



500 x 50




350 x 120




350 x 120


Colli 2/2




578 x 85




578 x 349




578 x 349




578 x 362




578 x 60




578 x 377




564 x 572




964 x 188



964 x 380












20 1x



21 1x



22 8x

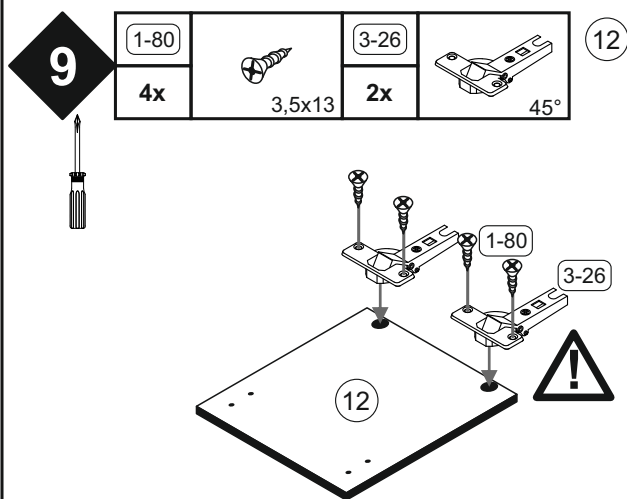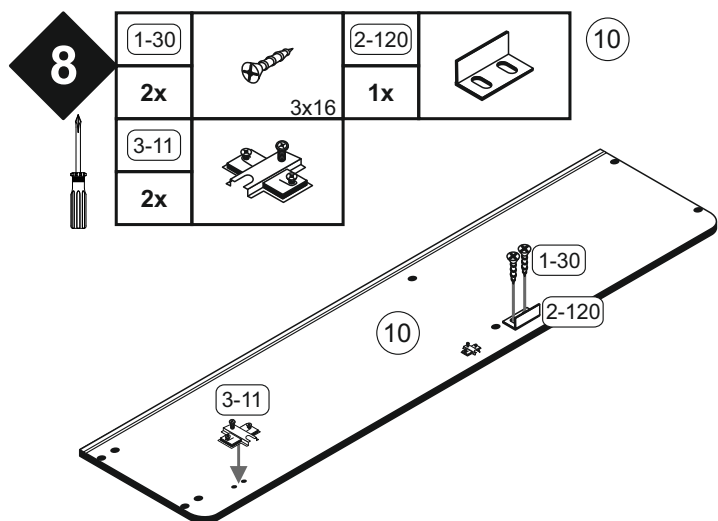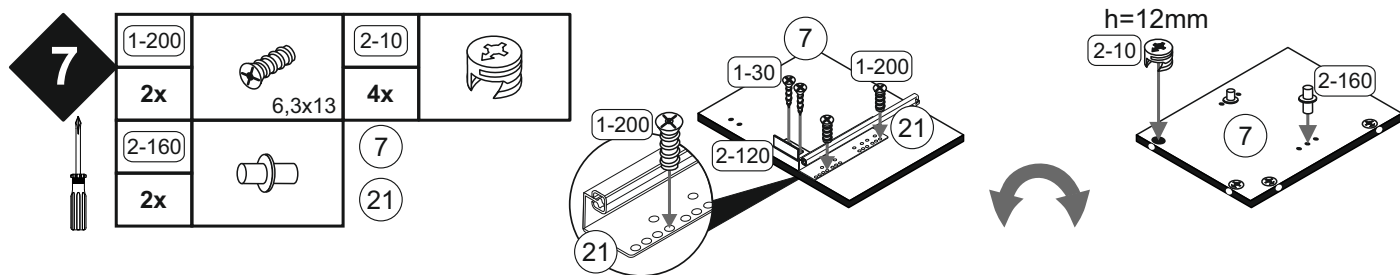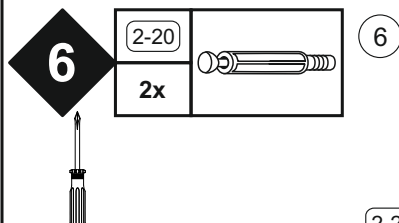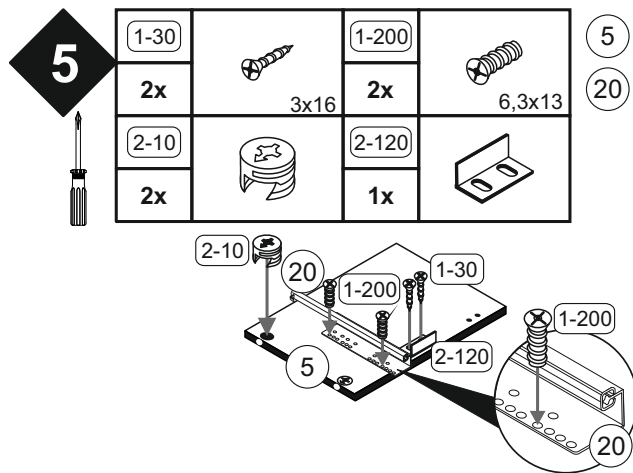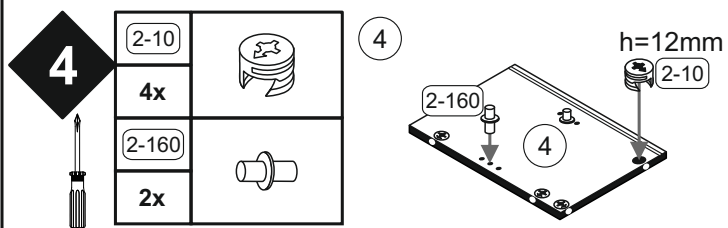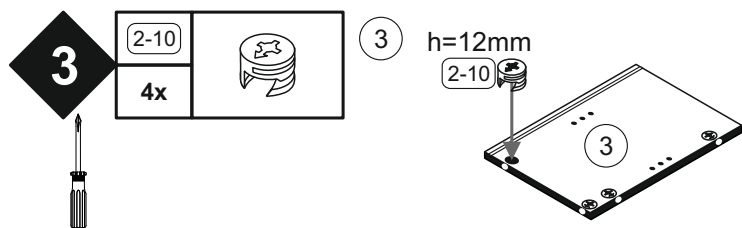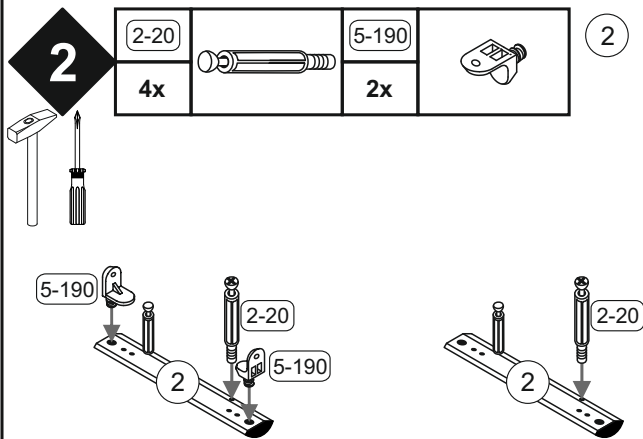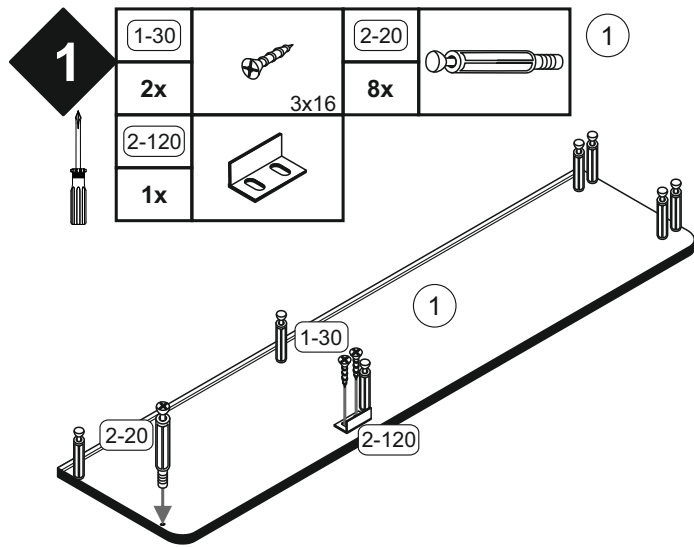

10

1-80

4x

3,5x13

2x

3-43

15er

13

11

1-329

2x

M4x22

4x

2-08

4x

2-20

4x

6-403

1x

15

17

19

2-08

h=10mm

17

19

12

1-70

2x

3x30

6x

1-90

6x

5-185

6x

3,5x20

15

16

17

18

19

16

0,5 cm

2 cm

93,8 cm

0,5 cm

35 cm

2 cm

17

18

19

1-90

5-185

1-70

90°

A

B

A=B

13

4

2

7

6



5

3

1

2-10

2-20

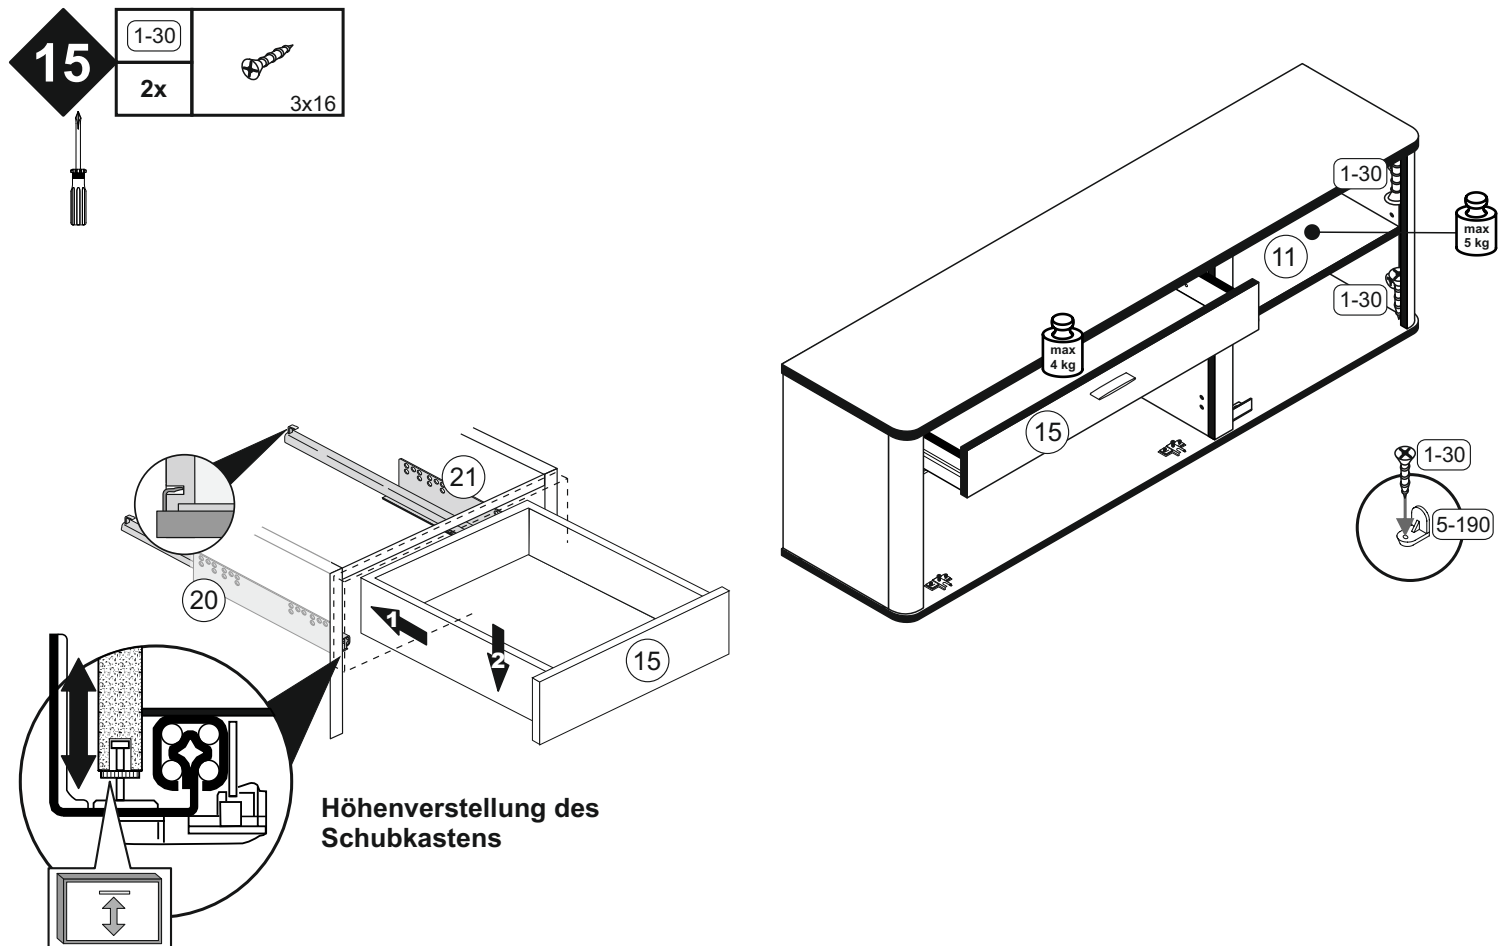
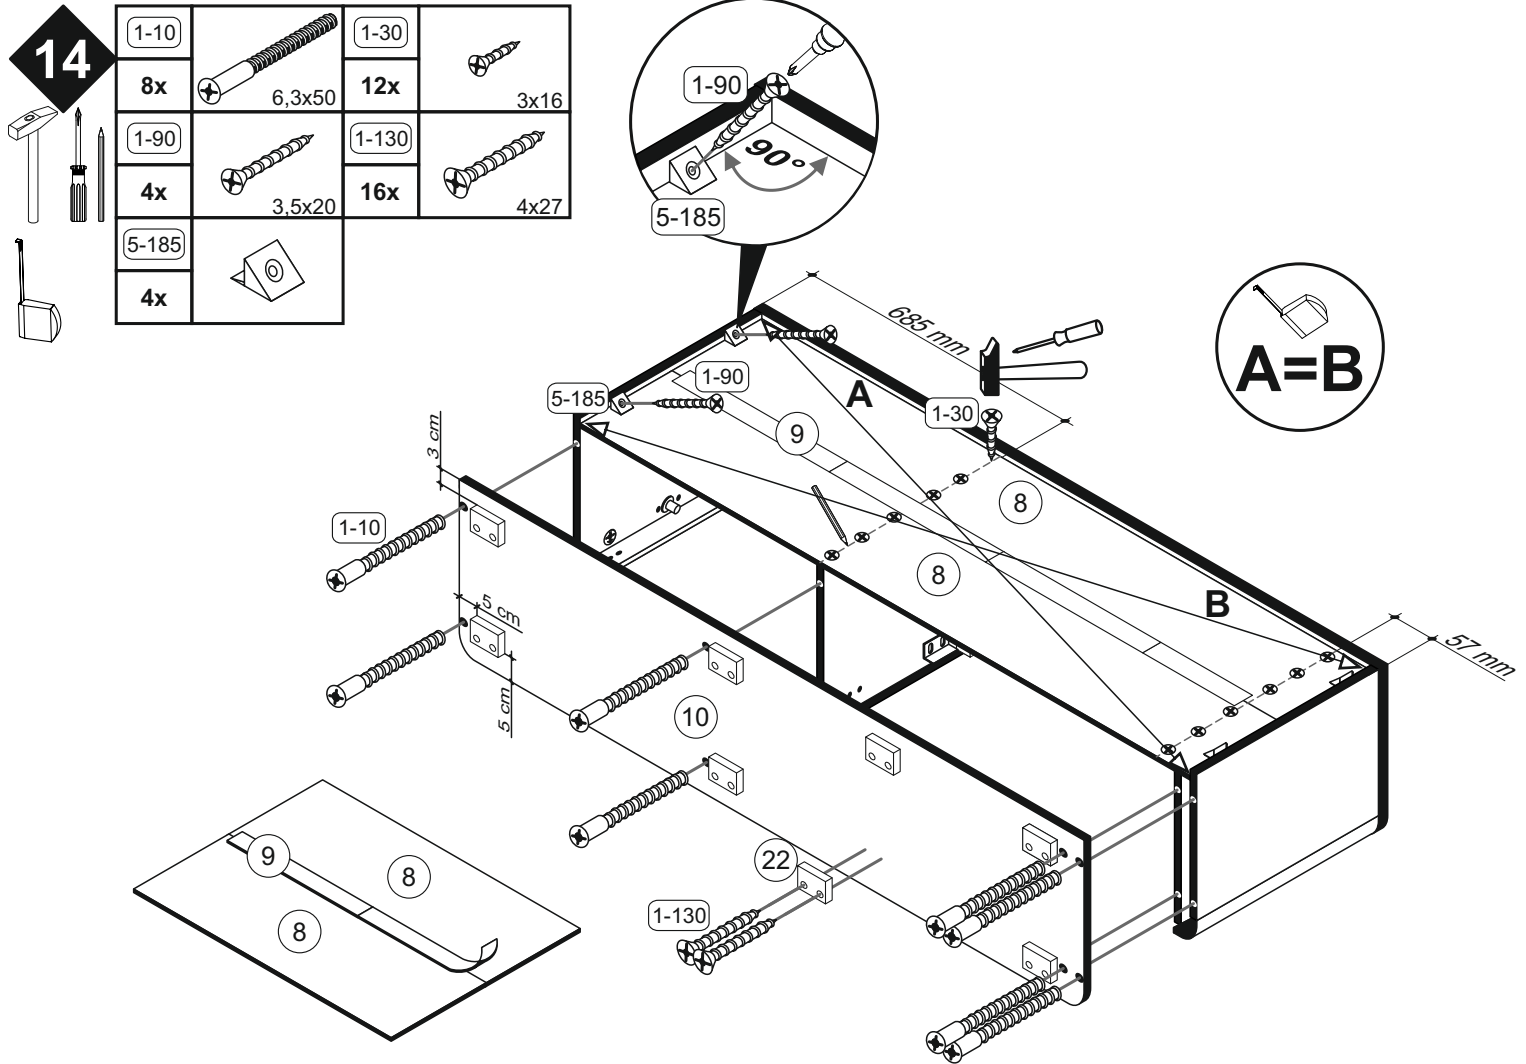


16




1-80		1-130		1-200		1-329		3-07		3-25	
4x	3,5x13	1x	4x27	4x	6,3x13	4x	M4x22	1x		2x	
6-403											
2x											

Montage der Türdämpfung

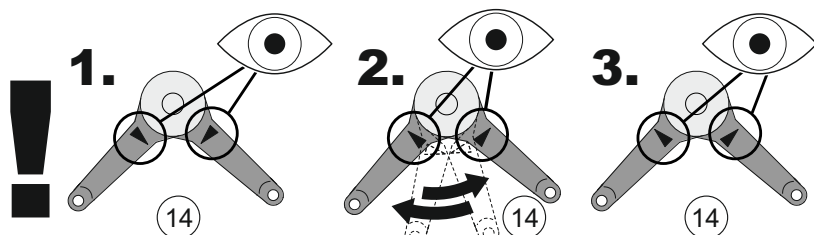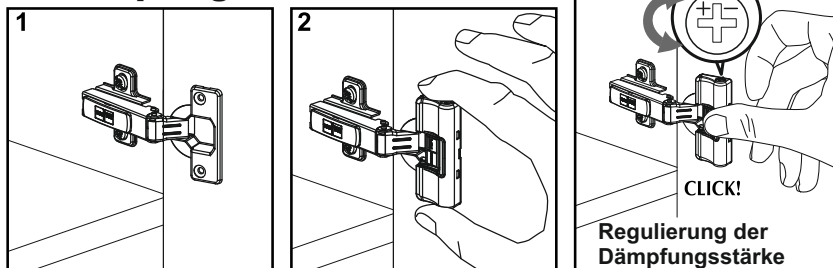

überdrehen

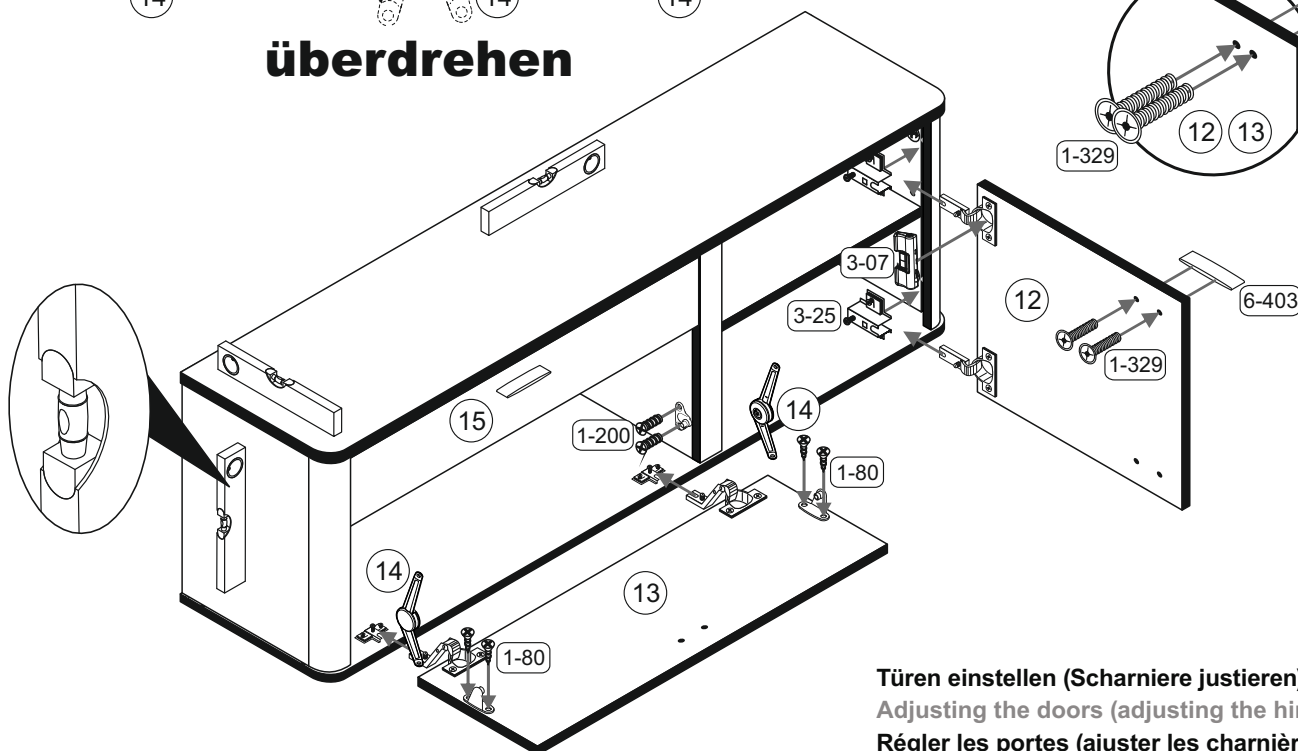

Türen einstellen (Scharniere justieren)
 Adjusting the doors (adjusting the hinges)
 Régler les portes (ajuster les charnières)
 Sistemare le porte (regolare le cerniere)
 Deuren instellen (scharnieren afstellen)
 Nastawić drzwi (wyregulować zawiasy)
 Vyrovnajte dvířka (seřid'te závěsy)
 Nastavenie dverí (nastavenie závesov)
 Állítsa be az ajtókat (állítsa be a zsanérokát)
 Reglare uși (ajustare balamale)
 Kapıların ayarlanması (mentşelerin seviye ayarı)
 Регулировка дверей (регулировка шарнира)

