
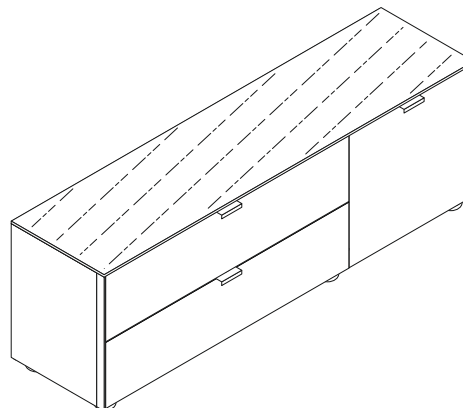
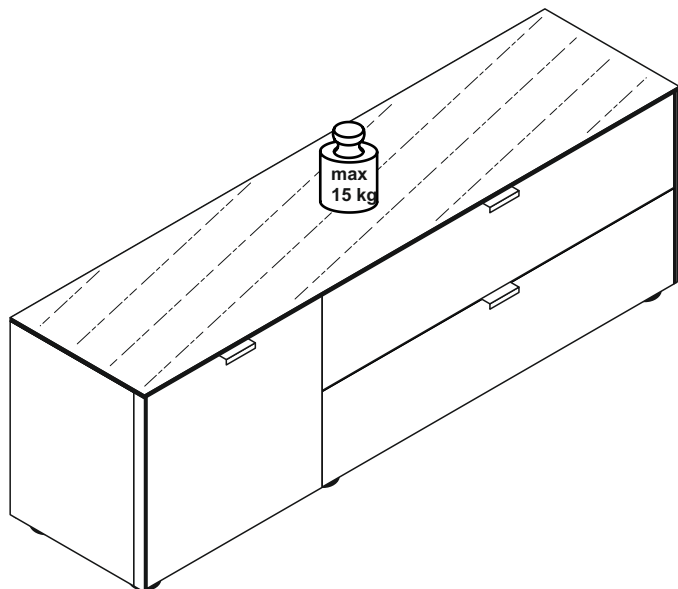


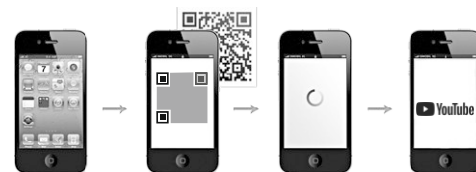

Das Lowboard kann spiegelbildlich montiert werden.
Diese Anleitung zeigt die Ausführung mit der Tür auf der
linken Seite.

Art.Nr. : 0772-LB_111 GL

Lowboard

REPC-Nr.:

**Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба**

			Colli 1/3 : (13) (14) (15) (16) (17) (18) (19) (20) (21) (22) (23) (24) Colli 2/3 : (1) (2) (3) (4) (5) (6) (7) (8) (9) (10) (11) (12) Beutel 1/5, 2/5, 3/5, 4/5, 5/5 Colli 3/3 : (25)		

CHICAGO

Beutel 1/5

1-10 2x		1-30 45x		1-70 2x		1-80 12x		1-90 4x		1-122 2x	
1-200 12x		2-08 4x		2-10 18x		2-20 22x		2-160 4x			

Beutel 2/5


1-123 12x		2-173 6x		3-07 2x		3-11 5x		3-42 5x		8er
--------------	---	-------------	---	------------	---	------------	---	------------	---	-----

Beutel 4/5


2-103 12x		5-01 10x		5-130 2x		5-185 4x	
5-260 1x		5-265 1x		5-280 1x		6-425 3x	

Beutel 5/5


1-36 4x	
------------	---

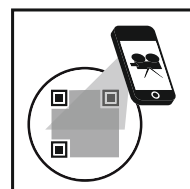


Colli 1/3




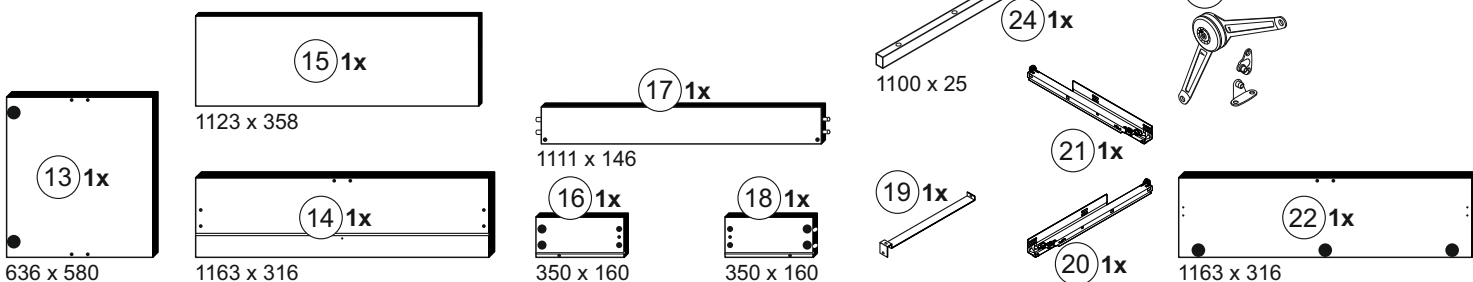


Colli 2/3

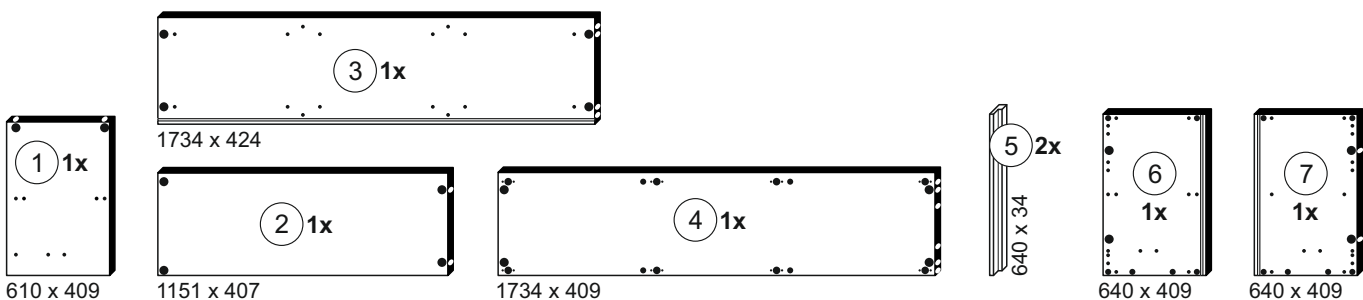

Colli 3/3

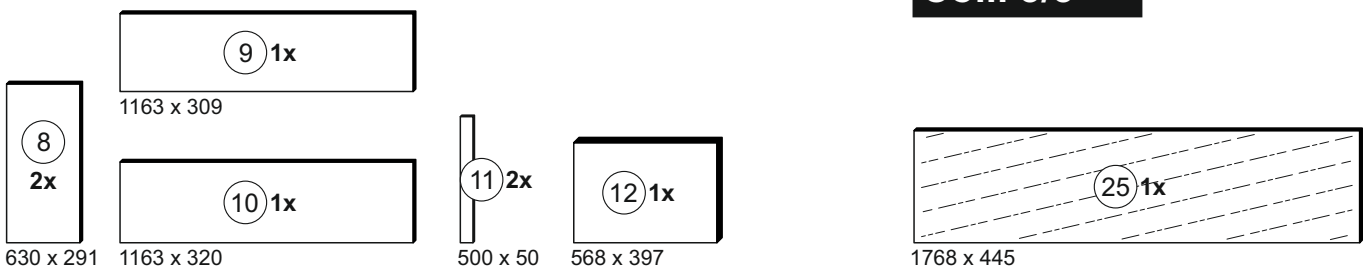

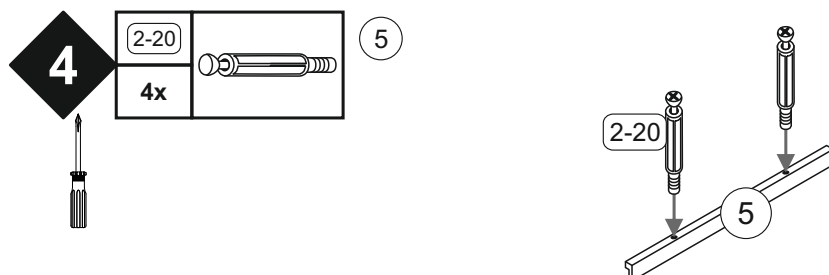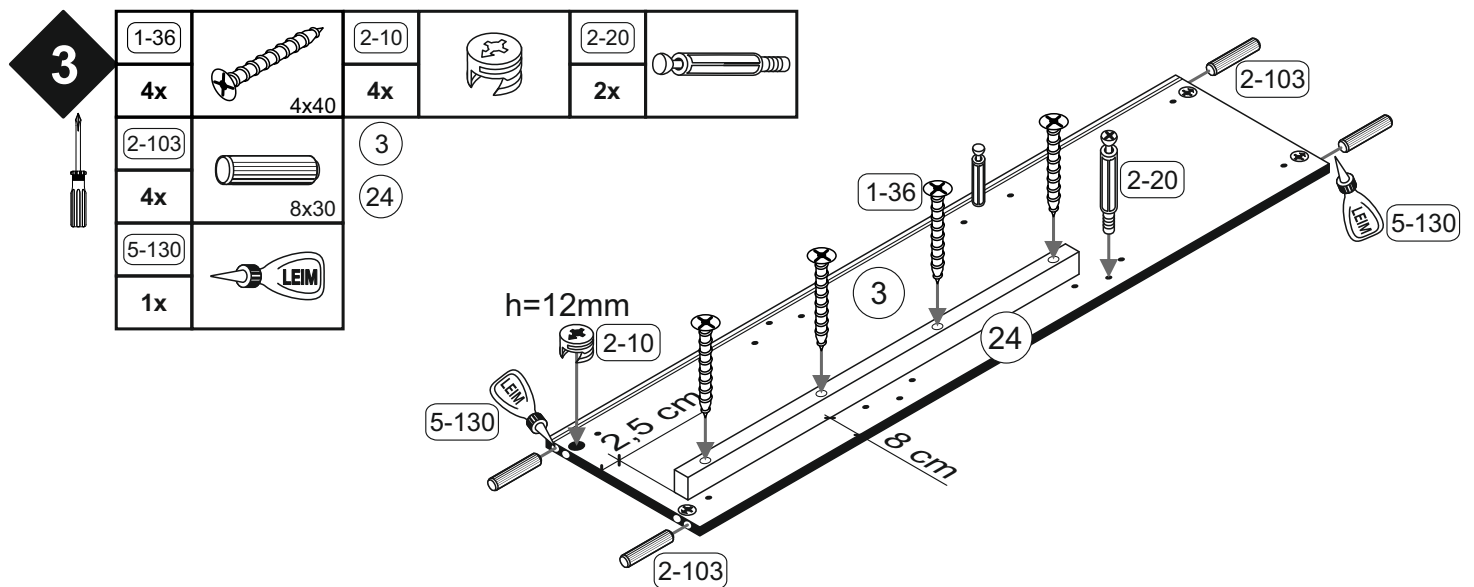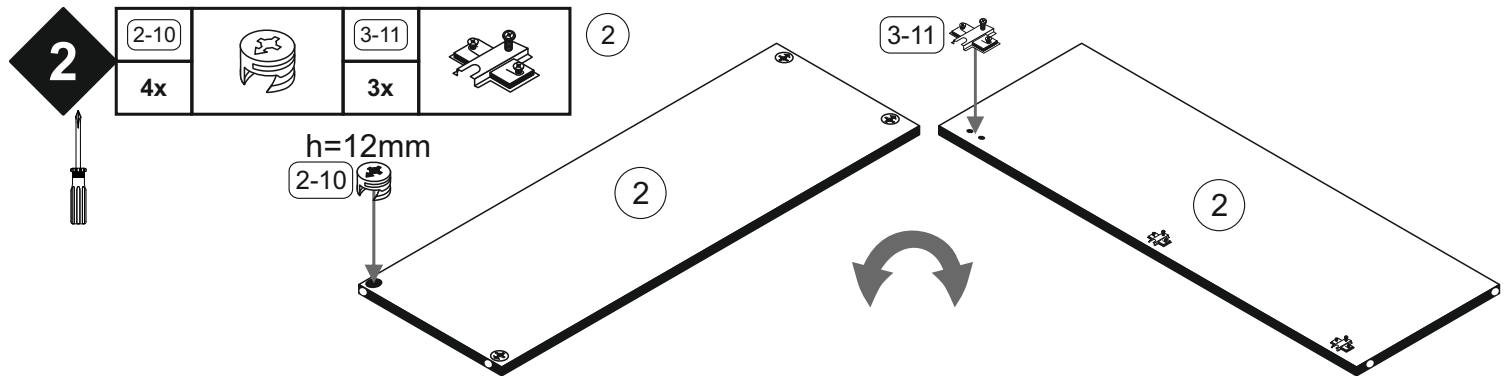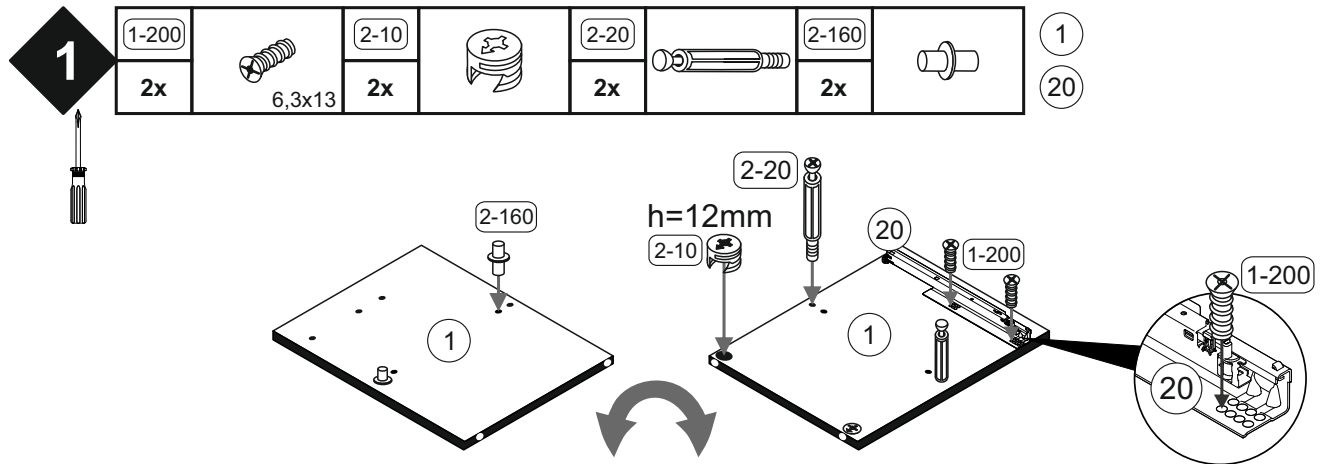

CHICAGO

5




2-10		2-103	
4x		8x	8x30
5-130		4	
1x			

6

2-10		2-20		3-11		2-160	
2x		4x		2x		2x	

7

1-200		2-10		2-20	
2x	6,3x13	2x		6x	

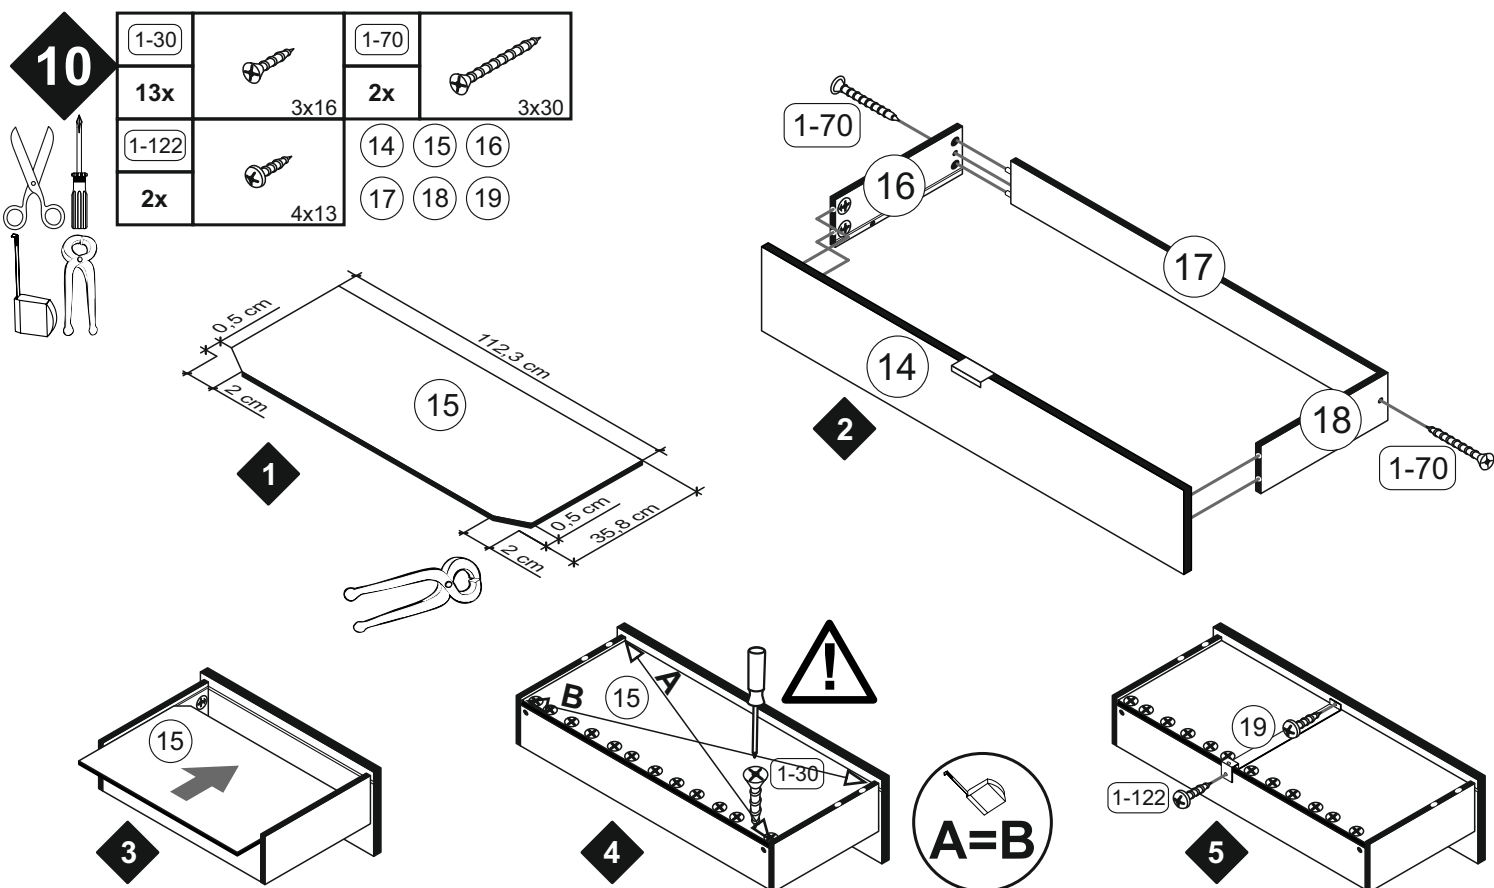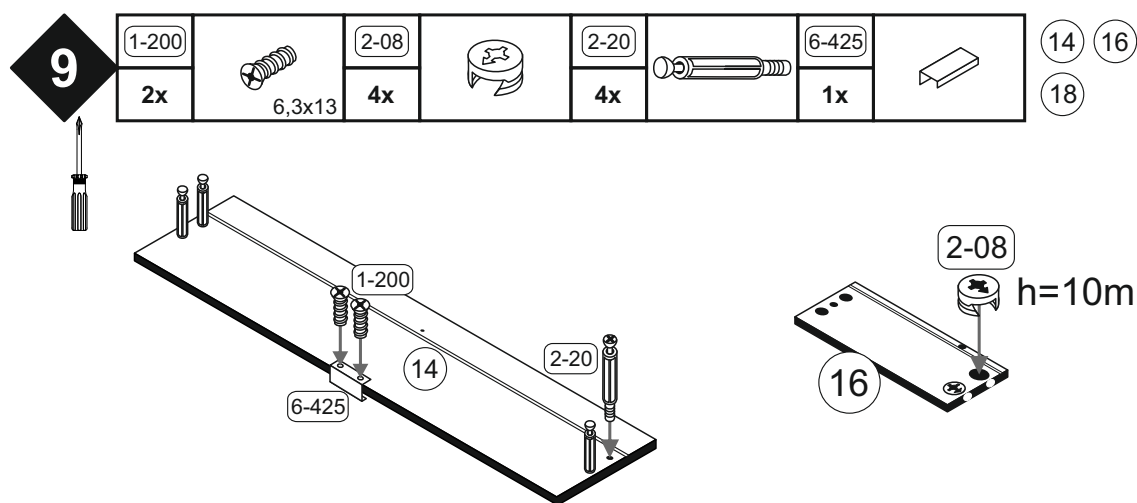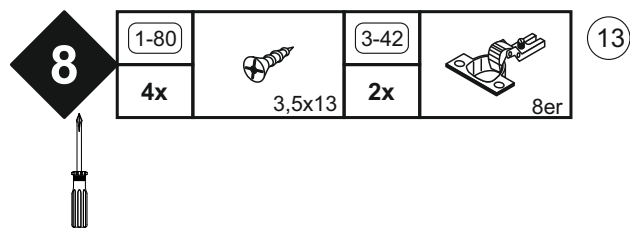


CHICAGO

11



1-80		1-200	
6x	3,5x13	2x	6,3x13
3-42		6-425	
3x	8er	1x	



22

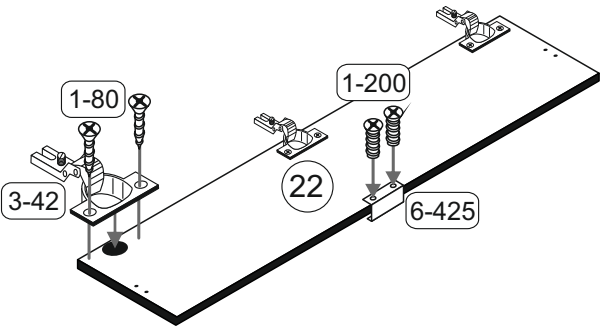




12






1-10		5-130	
2x	6,3x50	1x	LEIM

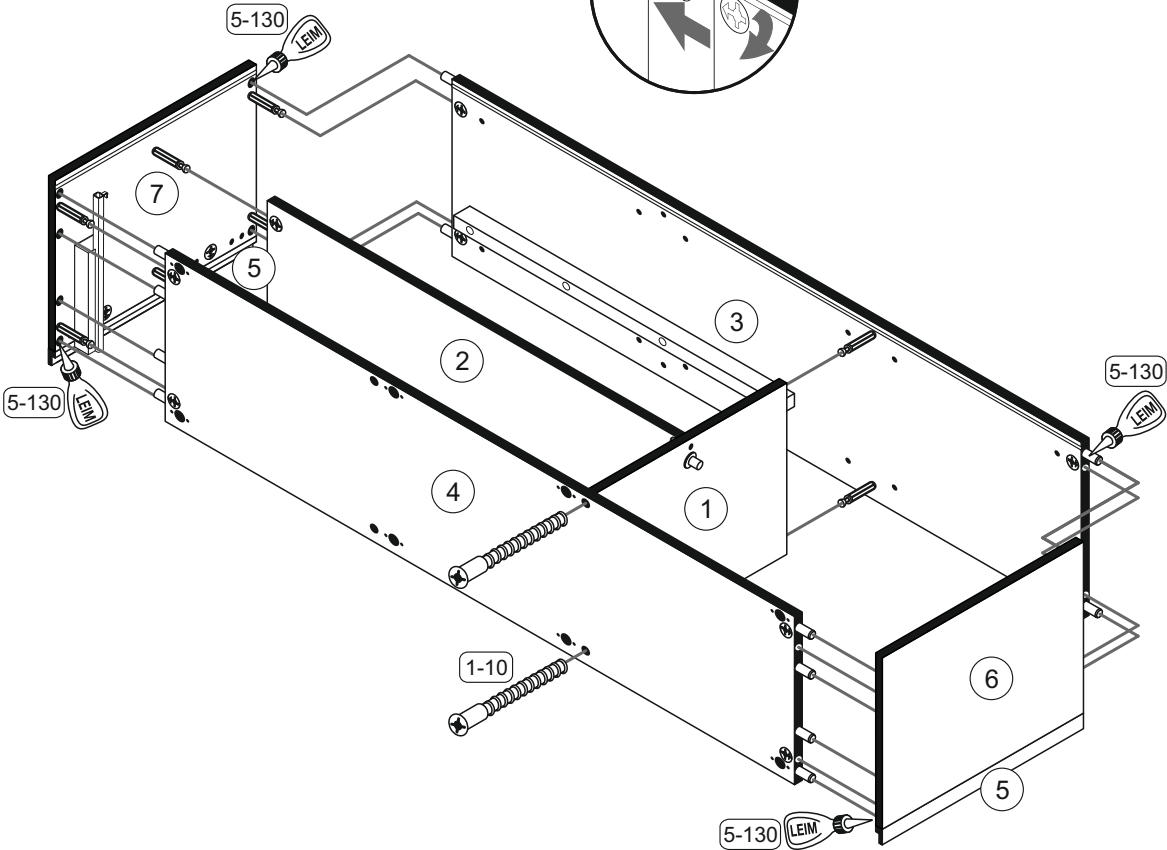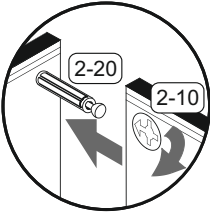

13	1-30		1-90	
	32x	3x16	4x	3,5x20
	1-123			
	12x	4x15		
	5-185			
	4x			
	2-173			
	6x			

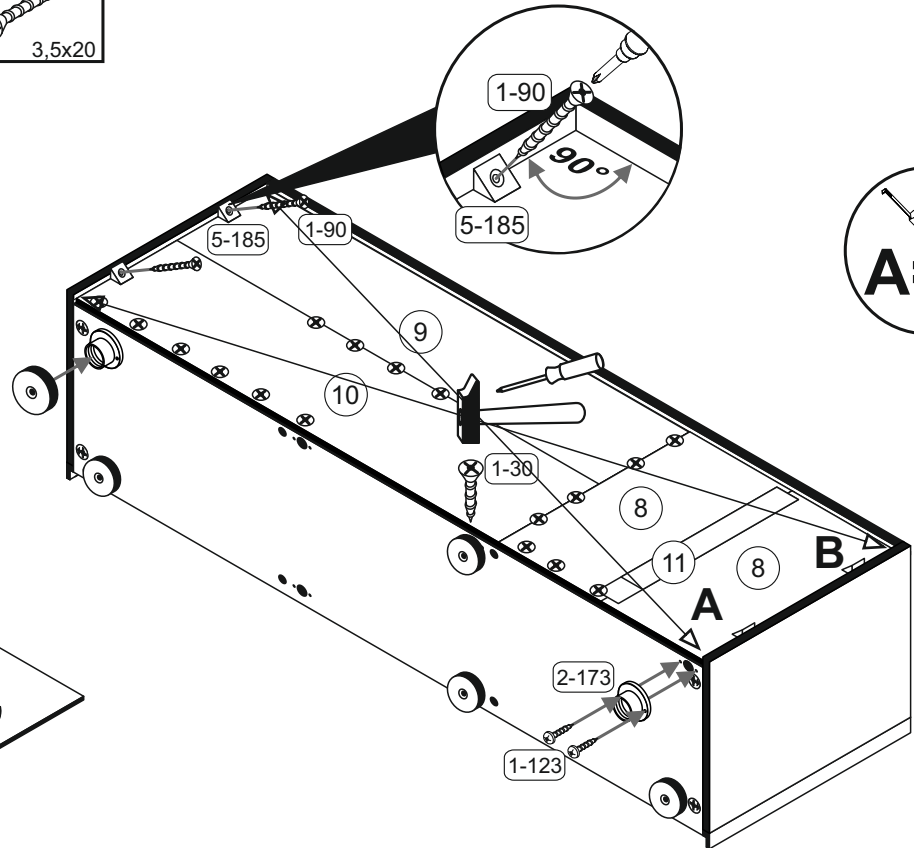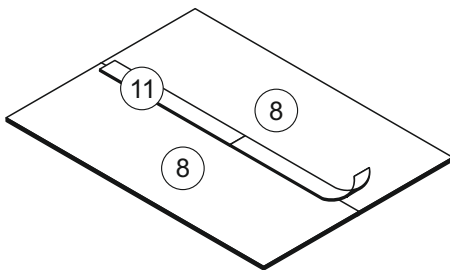


14	5-01		5-280	
	10x		1x	

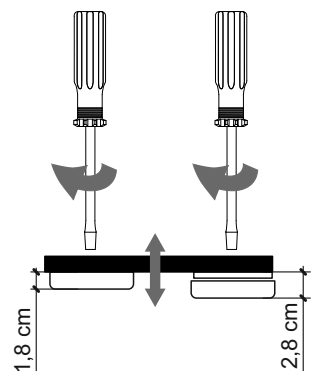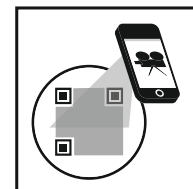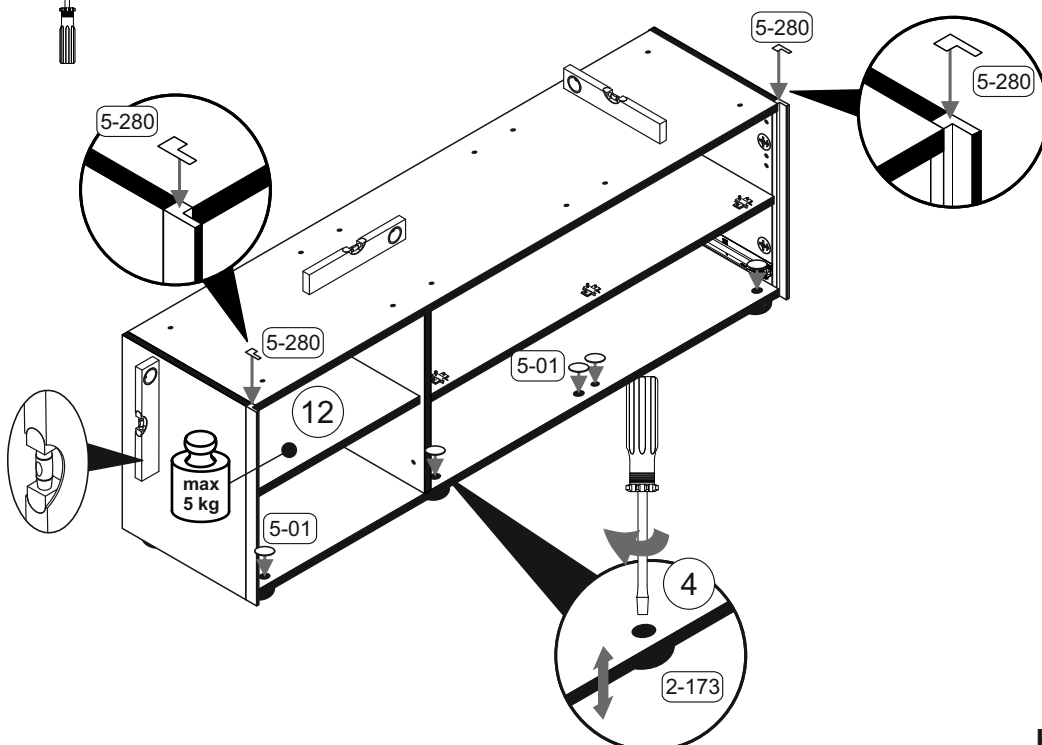


Höhenverstellung der Möbelfüße

15



Einbau des Schubkastens

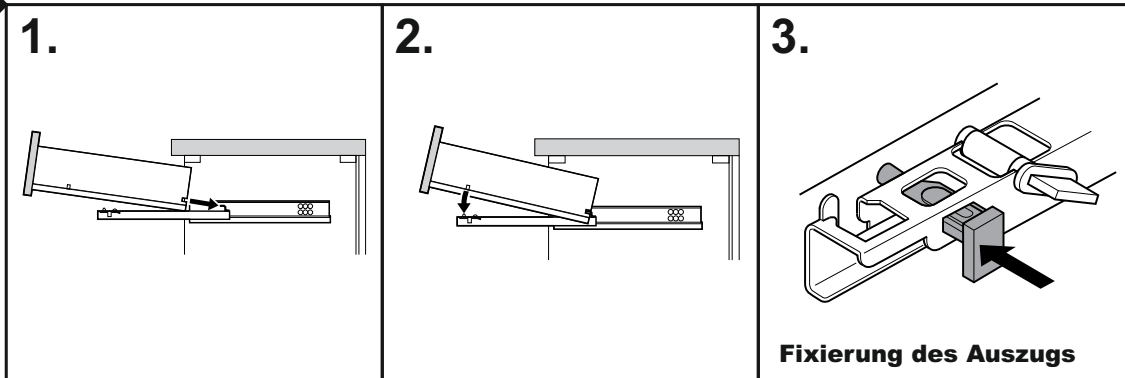




Ausbau des Schubkastens

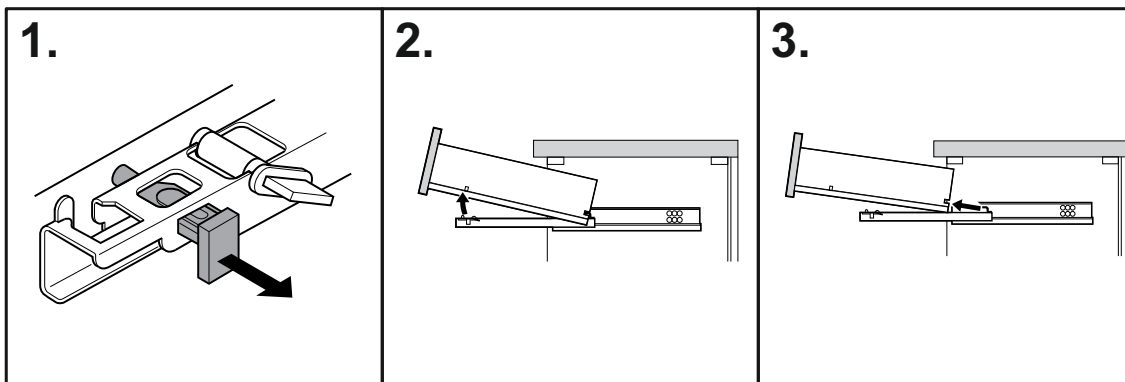


Höhenverstellung des Schubkastens

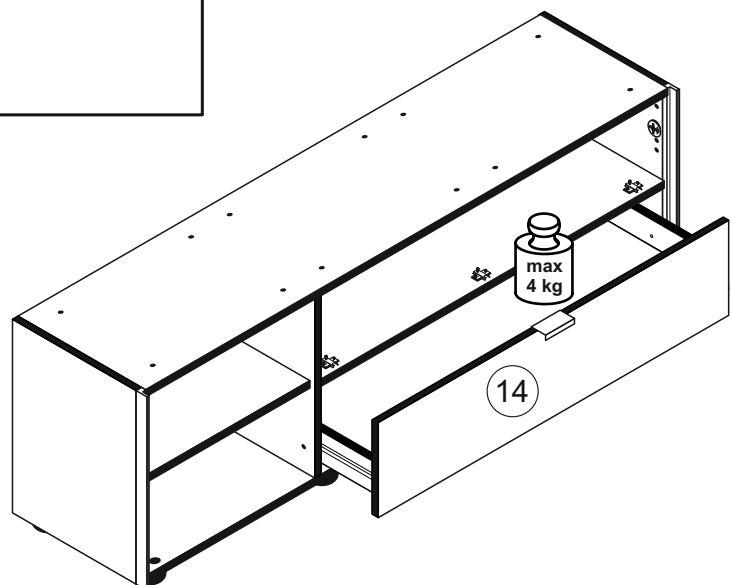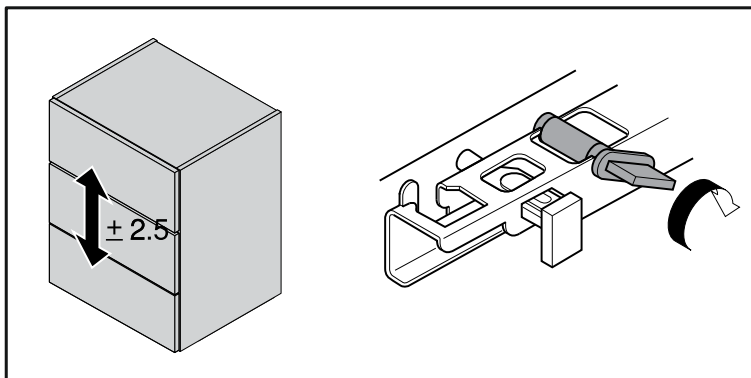


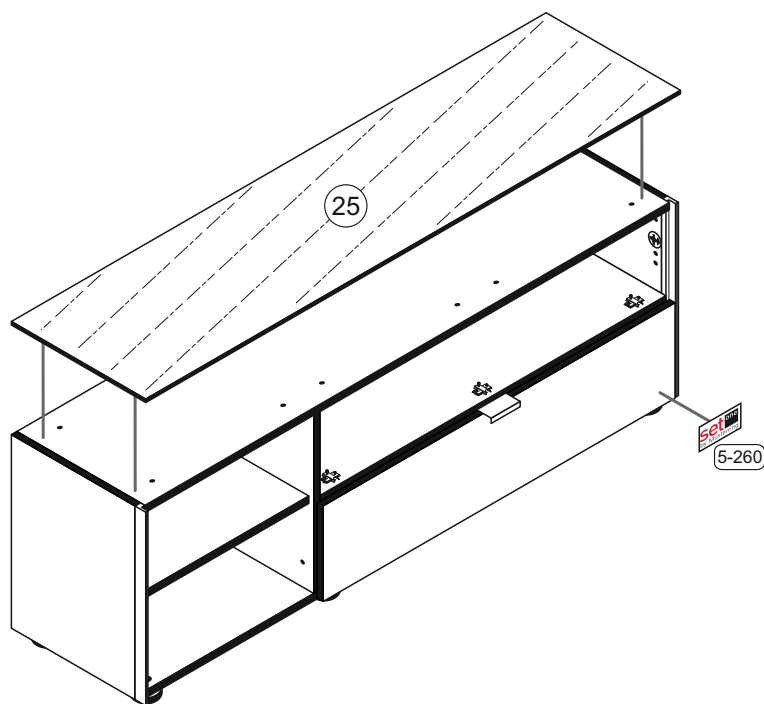


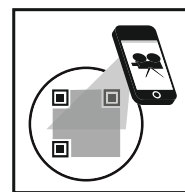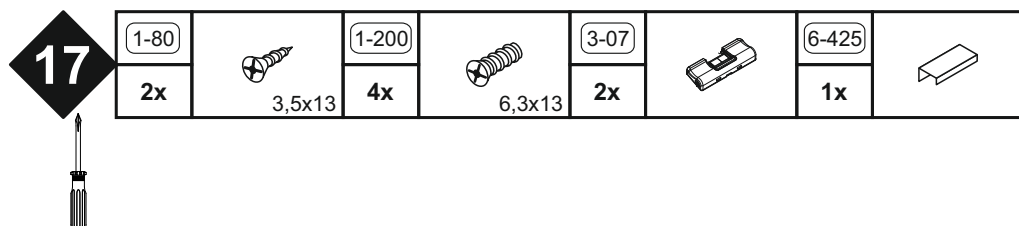

Montage der Türdämpfung

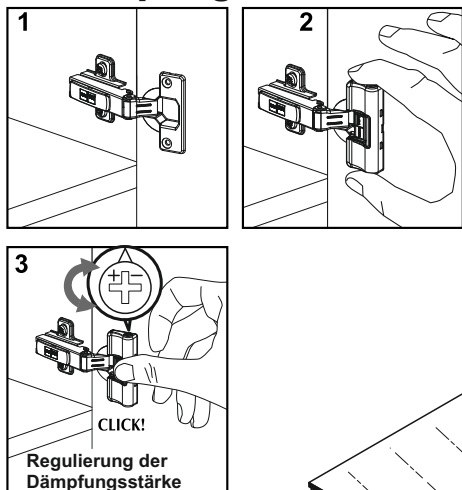

Stütze unten ⁽²³⁾ überdrehen

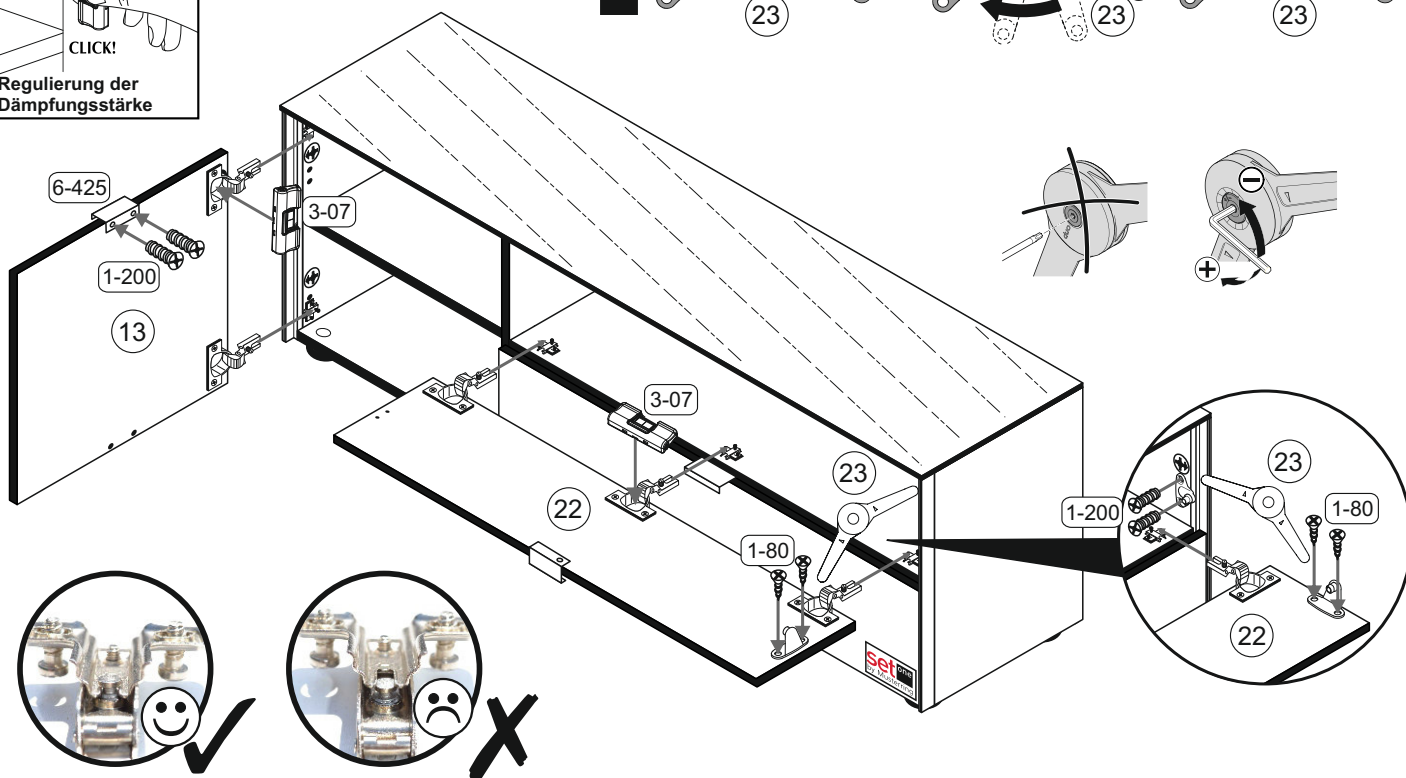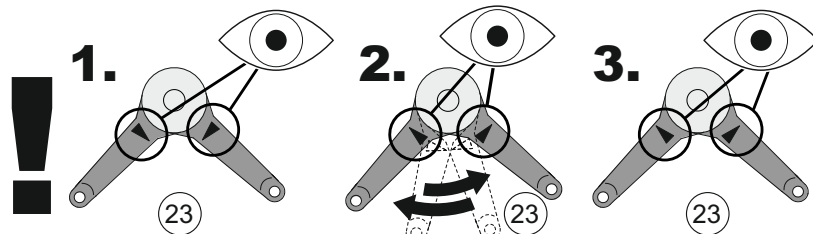

Türen einstellen (Scharniere justieren)

Adjusting the doors (adjusting the hinges)

Régler les portes (ajuster les charnières)

Sistemare le porte (regolare le cerniere)

Deuren instellen (scharnieren afstellen)

Nastawić drzwi (wyregulować zawiasy)

Vyrovnejte dvířka (seříd'te závěsy)


Nastavenie dverí (nastavenie závesov)


Állítsa be az ajtókat (állítsa be a zsanérokot)

Reglare usi (ajustare balamale)

Kapıların ayarlanması (menteselerin seviye ayarı)

Регулировка дверей (регулировка шарнира)





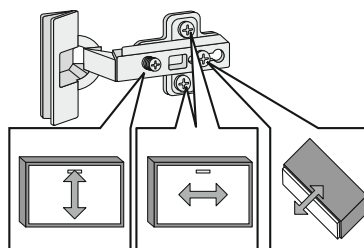


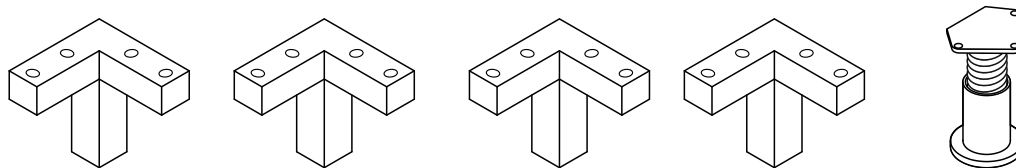

0771 Fuß Möbelfüße


REPC-Nr.:



**Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба**

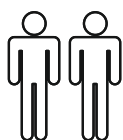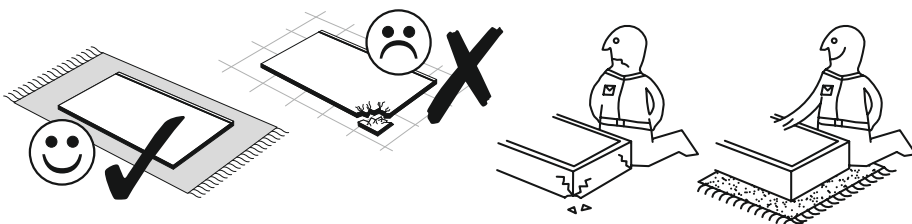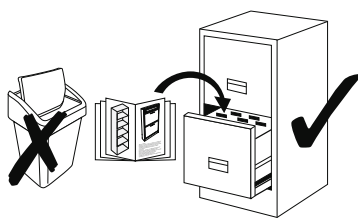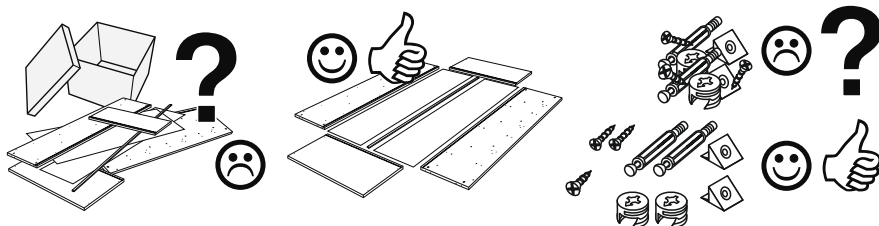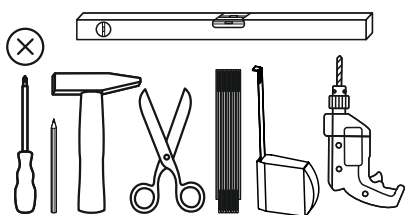

Das Ersatzteil-Anforderungsformular finden Sie auf <https://www.maeusbacher.de/ersatzteile/>

Beutel 1/1

1-33		1-125	
3x	4x17	16x	4x25

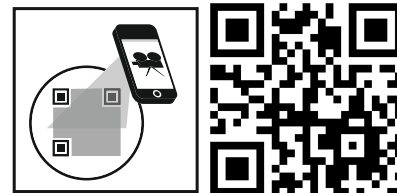

Colli 1/1

